

SPARES & ACCESSORIES

PART NO.	CONTENTS	DESCRIPTION	EAN	PACKAGE	PACK QTY.	DIMENSIONS (cm) WEIGHT (Kg) VOL (m ³)	RRP EACH £ EXC. VAT	RRP EACH £ INC. VAT @17.5%
ACCESSORY BURNERS								
B701		Flame Spreader - For use with ET2850 Gas Torch, BLO870 and LG980 Blowlamps. Gives a broad flat flame ideal for paint stripping. Push-fit.	5012832 070101	Display Card	6	16.5 X 9.0 X 9.0 0.38 0.0013	3.15	3.70
B702		Pencil Flame Burner - For use with ET2850 Gas Torch, BLO870 and LG980 Blowlamps. Gives a fine flame. With locking screw.	5012832 070200	Display Card	6	16.5 X 9.0 X 9.0 0.33 0.0013	2.90	3.41
B703		Soldering Burner - For use with ET2850 Gas Torch, BLO870 and LG980 Blowlamps. Copper tipped for general purpose soldering. With locking screw.	5012832 070309	Display Card	6	16.5 X 9.0 X 9.0 0.38 0.0013	3.15	3.70
B705		Standard Burner - Replacement general purpose burner for ET2850 Gas Torch, BLO870 and LG980 Blowlamps. With locking screw	5012832 070507	Display Card	6	16.5 X 9.0 X 9.0 0.44 0.0013	2.90	3.41
B873		Burner Set - For use with ET2850 Gas Torch, BLO870 and LG980 Blowlamps. Includes paint burner, fine flame burner and soldering burner.	5012832 087307	Display Card	6	16.7 X 13.5 X 8.8 0.85	6.60	7.75
HEAT GUN NOZZLES								
HG751		Heat Spreader Nozzle - For use with the HG3750 Heat Gun. Gives a broad spread of heat. Ideal for paint stripping. Push-fit.	5012832 075106	Display Card	6	16.0 X 15.9 X 14.9 0.05 0.0038	3.85	4.52
HG752		Glass Protector Nozzle - For use with the HG3750 Heat Gun. Protects glass when working on window frames etc. Push-fit.	5012832 075205	Display Card	6	16.0 X 15.9 X 14.9 0.05 0.0038	3.25	3.82
HG753		Heat Shield Nozzle - For use with the HG3750 Heat Gun. Concentrates the heat around pipes etc. Ideal for plumbing. Push-fit.	5012832 075304	Display Card	6	16.0 X 15.9 X 14.9 0.07 0.0038	3.25	3.82
SOLDERING / BRAZING RODS								
3470		All Purpose Solder - 1 metre, flux cored. For all general purpose soldering jobs. Working temperature 180-200°C For use with gas blowlamps and torches	5012832 347005	Display Card	12	33.5 X 7.5 X 5.5 0.40 0.0014	1.60	1.88
3480		Copper to Copper Brazing Rods - Self fluxing. For plumbing, joining copper pipes and fittings. Working temperature 730-875°C. For use with gas blowlamps and torches.	5012832 348002	Display Card	12	33.5 X 7.5 X 5.5 0.40 0.0014	1.60	1.88
3490		Aluminium Repair Rods - Flux coated. For repairs and fabrication of all forms of aluminium and some aluminium alloys. Working temperature 565-635°C. For use with gas blowlamps & torches.	5012832 349009	Display Card	12	33.5 X 7.5 X 5.5 0.32 0.0014	1.60	1.88
3520		All Purpose Brazing Rods - Flux coated for use with most metals - steel, stainless steel, brass and copper. Working temperature 600-650°C. For use with gas torches.	5012832 352009	Display Card	12	33.5 X 7.5 X 5.5 0.35 0.0014	3.65	4.29
3530		Alloy Repair Rods - Self fluxing zinc based alloy rods. For repairing zinc castings, aluminium and aluminium alloys. Working temperature 360-400°C. For use with gas torches.	5012832 353006	Display Card	12	33.5 X 7.5 X 5.5 0.51 0.0014	2.65	3.11
3650		All Purpose Oxy-Acetylene Brazing Rods - Flux coated. For use on steel, cast iron and copper based alloys. Working temperature 875-900°C. For use with Oxy-Acetylene torches.	5012832 365009	Display Card	12	33.5 X 7.5 X 5.5 0.52 0.0014	1.60	1.88
STABILIZING BASE When using Taymar cartridges with EPI gas appliances always fit stabilizing base.								
SBI		Stabilizing Base - A rigid moulded base. Clips to all Taymar gas cartridges for extra safety and stability.	5012832 010008	Display Card	6	25.5 X 10.0 X 16.5 0.40 0.0042	1.55	1.82
GAS LIGHTERS								
3510		Spark Lighter - Squeeze action releases a stream of sparks to light most gas torches.	5012832 351002	Display Card	12	36.0 X 19.0 X 15.0 1.05 0.0103	2.40	2.82
3513		3 Replacement Flints - For spark lighters.	5012832 351309	Display	12	16.5 X 9.0 X 9.0 0.10 0.0029	1.15	1.35
F37		Fusilier Flint Lighter - Creates a spark to light most gas torches.	5012832 103700	Display Card	12	27.0 X 24.0 X 6.3 0.88 0.0041	4.25	4.99
F38		Fusilier Flints - 72 packets of 6. For Fusilier flint lighters.	5012832 103809	Display Card	1	20.3 X 20.3 X 2.0 0.18 0.0008	34.99	41.11
SPARES PACKS All spares packs contain: 2 x Jet cleaners, a replacement jet and 2 x cartridge sealing 'o' rings								
SP4		Spares Pack - No.4 size for Taymar HG3750 Heat Gun.	5012832 041002	Display Card	12	16.5 X 9.0 X 9.0 0.25 0.0013	1.60	1.88
SP8		Spares Pack - No.8 size for Taymar ET2850, LT2900, AT2910 and PT2950 Gas Torches and BLO870 Blowlamp.	5012832 081008	Display Card	12	16.5 X 9.0 X 9.0 0.25 0.0013	1.60	1.88
SP10		Spares Pack - No.10 size for LG980 Blowlamp.	5012832 101003	Display Card	12	16.5 X 9.0 X 9.0 0.25 0.0013	1.60	1.88
SP12		Spares Pack - No.12 size for Taymar BT3000 Brazing Torch.	5012832 121001	Display Card	12	16.5 X 9.0 X 9.0 0.25 0.0013	1.60	1.88