

Inset 70/80/90/125

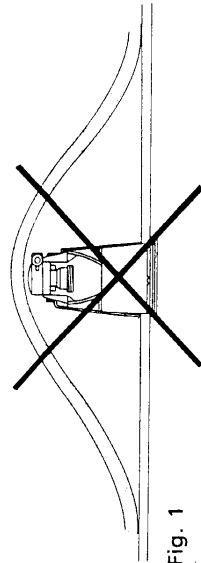
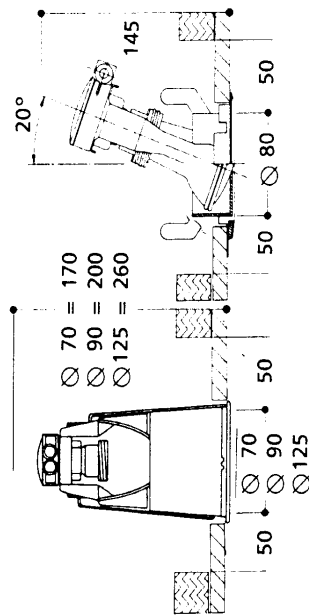


Fig. 1

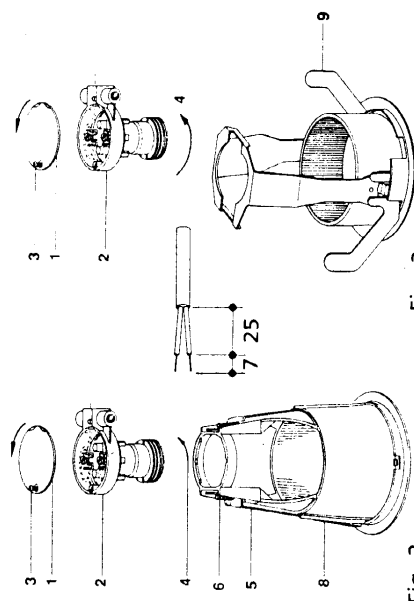


Fig. 2

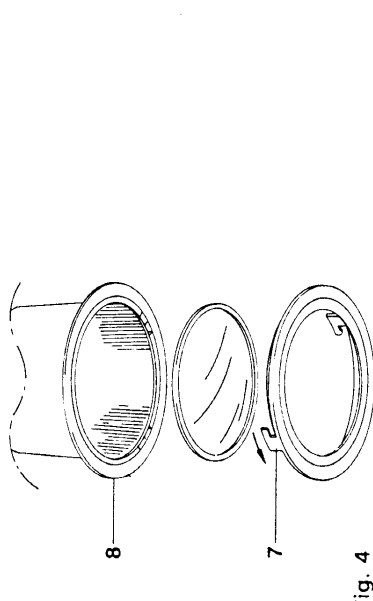


Fig. 3

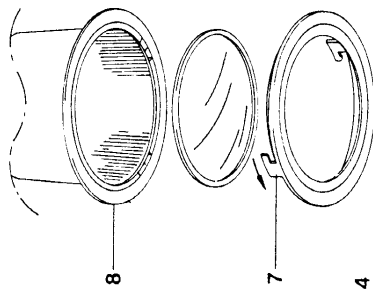


Fig. 4

Nederlands

Volg de aanwijzingen in deze handleiding voor een veilige en betrouwbare werking. Bewaar de handleiding voor latere raadpleging. Neem in geval van vragen contact op met uw leverancier.

Inset 70, 80, 90 en 125 zijn inbouwarmaturen geschikt voor reflectorlampen die zijn ontworpen volgens de Europese norm EN 60598. Zorg dat de juiste lamp wordt gebruikt.
Inset 70 comfort/topper : R50 E14
Inset 80 swing : Q-PAR 20 E27/R63 E27
Inset 90 comfort/topper : R63 E27/Q-PAR 20 E27
Inset 125 comfort : R95 E27/Q-PAR 30 E27
Voor de inset 70 en 90 zijn kleurranden verkrijgbaar.
De inset 80 is richtbaar, 2 x 20°.

De volgende symbolen kunnen vermeld zijn:



Klasse II, dubbelgeïsoleerd

Minimale afstand tussen armatuur en aangestraalde voorwerpen in meters

Voor de netsluiting uitsluitend flexibel hittebestendig (min 105°C) aansluit snoer gebruiken.

IPX4: spatwaterdicht (alleen met topper glas), mits ingebouwd in gesloten plafonds

Doorfussen mogelijk

Geschikt voor montage op normaal brandbare oppervlakken, zoals hout

Veiligheid

De geldende installatievoorschriften dienen in acht te worden genomen. Raadpleeg bij twiél een erkend installateur. Sluit de stroom af voor installatie, onderhoud en verwisselen van de lamp(en). Het product mag niet worden gewijzigd; iedere wijziging ontkracht de veiligheids- en keurmerken en kan het product onveilig maken. Luminaire neemt geen verantwoordelijkheid voor gewijzigde producten. Defecte lampen dienen zo snel mogelijk te worden vervangen. Gebruik uitsluitend lampen van het juiste type en wattage (zie etiket). De armatuur mag niet worden afgedekt en de minimale inbouwmaten dienen in acht te worden genomen (fig. 1).

Installatie (fig. 2)

Zaag een gat in het plafond met een diameter van:

- 70 mm, voor de inset 70
- 80 mm, voor de inset 80
- 90 mm, voor de inset 90
- 125 mm, voor de inset 125.

Verdraai het deksel 1 van de aansluitbox 2 door de schroef 3 enkele slagen los te draaien. Nadat de aansluitbox een kwart slag linksom is gedraaid 4 kan deze worden verwijderd van de behuizing. Monteer de bedrading (aansluit snoer: min. 105 °C) en schroef de trektesting(en) vast. Monteer de aansluitbox weer op de behuizing en draai de schroef 3 vast.

Montage in plafond, Inset 70, 90 en 125

De plafondboren 5 worden versteld met behulp van de schroeven 6. Verstel de plafondboren tot enkele mm boven de plafonddikte. Monteer de armatuur in het plafond en draai de schroeven aan tot de armatuur vast zit. Plafonddikte max. 25 mm. Monteer de armatuur in het plafond en draai de schroeven aan tot de armatuur vast zit.

Montage in plafond, Inset 80

Voor montage in plafond richting van de bundel bepalen (merktekens in lichtrand) Plafondboren 9 samendrukken en door gat drukken. Plafonddikte max. 25 mm. Na montage in plafond kan de richting van de bundel nog worden bijgesteld door het gehele armatuur met de wijsers van de klok mee te draaien.

Topper-Kleurranden

De topper of kleurrand wordt d m v. de bajonetleuven 7 in de openingen van de behuizing gemonteerd 8. Druk de rand omhoog en vervolgens naar rechts. Voor het aanbrengen van een kleurrand op een topper kunt u het glas uit de topper-accessoire drukken en in de kleurrand bevestigen.

Reinigen

Geen schuur- of oplosmiddelen gebruiken. Reinigen met een vochtige doek, eventueel met wat milde zeep, is voldoende.


English

Follow these instructions carefully to ensure safe and reliable operation. Retain this leaflet for future reference. In case of queries, contact your supplier.

The Inset 70, 80, 90 and 125 are built-in luminaires for reflector lamps and designed according to the European standard EN 60598. Make sure that the correct lamp is used.

Inset 70 comfort/topper : R50 E14
Inset 80 swing : Q-PAR 20 E27/R63 E27
Inset 90 comfort/topper : R63 E27/Q-PAR 20 E27
Inset 125 comfort : R95 E27/Q-PAR 30 E27
For the inset 70 and 90 colour rings are available.
The light beam of the Inset 80 can be directed, 2 x 20°.

The following symbols may be found:



Class II, double insulated, this fitting must not be earthed

Minimum distance between the lamp and lit objects in metres

Use flexible heat-resistant (min 105°C) cable.

IPX4, splash proof (only with topper glass), when recessed in a suspended ceiling

Connection in parallel is possible

Suitable for mounting on flammable surfaces, such as wood

Safety

Follow the appropriate national wiring regulations; if in doubt, consult a qualified electrician. Disconnect mains supply before installation, maintenance or replacement of the lamps. The product must not be modified. Any modification will negate the safety mark/approvals and may render the product unsafe. Luminaire accepts no responsibility for modified products.

Defective lamps should be replaced as soon as possible, only lamps of correct type and rating should be used (see label). The luminaire should not be covered with any heat insulating material, note the minimum recess depths (fig. 1).

Installation (fig. 2)

Cut a hole in the ceiling of:

- 70 mm, for the Inset 70
- 80 mm, for the Inset 80
- 90 mm, for the Inset 90
- 125 mm, for the Inset 125.

Turn the cover 1 of the connection box 2 by loosening screw 3 a few turns.

Remove the connection box by turning it a quarter turn counterclockwise 4. Attach the wiring (supply cord: min. 105 °C) and fasten the pull relief(s) again. Replace the connection box again and fasten screw 3.

Mounting in the ceiling, Inset 70, 90 and 125

The ceiling springs 5 are adjusted by means of screws 6. Adjust the ceiling springs up to a few mm above the ceiling thickness. Ceiling thickness max. 25 mm. Mount the luminaire in the ceiling and tighten the screws until the luminaire is fixed.

Mounting in the ceiling, Inset 80

Before mounting in the ceiling the direction of the light beam (marks in the light ring) must be determined. Press ceiling springs 9 together and push them through the hole. Ceiling thickness max. 25 mm. After mounting in the ceiling the direction of the beam can still be adjusted by turning the complete luminaire clockwise.

Topper colour rings

The topper or colour ring is attached to the housing by means of the bayonet slots 7 in the openings in the housing 8 (fig. 3). Push the ring up and then to the right. For putting a colour ring to a topper you can push the glass from a topper accessory and then fit in the colour ring.

Cleaning

Do not use abrasives or solvents, just a damp soft cloth. If necessary use mild soap.