



# 64Mb Synchronous DRAM - Die Revision C

### **Features**

• High Performance:

		-68 CL=3	-75A, CL=3	-260, CL=2	-360, CL=3	Units
$f_{CK}$	Clock Frequency	150	133	100	100	MHz
$t_{CK}$	Clock Cycle	6.67	7.5	10	10	ns
t <sub>AC</sub>	Clock Access Time <sup>1</sup>	6	_	_	_	ns
t <sub>AC</sub>	Clock Access Time <sup>2</sup>	_	5.4	6	6	ns

- 1. Terminated load. See AC Characteristics on page 40.
- 2. Unterminated load. See AC Characteristics on page 40.
- Single Pulsed RAS Interface
- Fully Synchronous to Positive Clock Edge
- Four Banks controlled by A12/A13 (Bank Select)
- Programmable CAS Latency: 2, 3
- Programmable Burst Length: 1, 2, 4, 8, full-page

- Programmable Wrap: Sequential or Interleave
- Multiple Burst Read with Single Write Option
- Automatic and Controlled Precharge Command
- Data Mask for Read/Write control (x4, x8)
- Dual Data Mask for byte control (x16)
- · Auto Refresh (CBR) and Self Refresh
- Suspend Mode and Power Down Mode
- Standard or Low Power operation
- 4096 refresh cycles/64ms
- Random Column Address every CLK (1-N Rule)
- Single 3.3V  $\pm$  0.3V Power Supply
- LVTTL compatible
- Package: 54-pin 400 mil TSOP-Type II

# **Description**

The IBMN364404, IBMN364804, and IBMN364164 are four-bank Synchronous DRAMs organized as 4Mbit x 4 I/O x 4 Bank, 2Mbit x 8 I/O x 4 Bank, and 1Mbit x 16 I/O x 4 Bank, respectively. These synchronous devices achieve high-speed data transfer rates of up to 150MHz by employing a pipeline chip architecture that synchronizes the output data to a system clock. The chip is fabricated with IBM's advanced 64Mbit single transistor CMOS DRAM process technology.

The device is designed to comply with all JEDEC standards set for synchronous DRAM products, both electrically and mechanically. All of the control, address, and data input/output (I/O or DQ) circuits are synchronized with the positive edge of an externally supplied clock.

RAS, CAS, WE, and CS are pulsed signals which are examined at the positive edge of each externally applied clock (CLK). Internal chip operating modes are defined by combinations of these signals and a command decoder initiates the necessary timings for each operation. A fourteen bit address bus


accepts address data in the conventional RAS/CAS multiplexing style. Twelve row addresses (A0-A11) and two bank select addresses (A12, A13) are strobed with RAS. Ten column addresses (A0-A9) plus bank select addresses and A10 are strobed with CAS. Column address A9 is dropped on the x8 device and column addresses A8 and A9 are dropped on the x16 device.

Prior to any access operation, the  $\overline{\text{CAS}}$  latency, burst length, and burst sequence must be programmed into the device by address inputs A0-A9 during a mode register set cycle. In addition, it is possible to program a multiple burst sequence with single write cycle for write through cache operation.

Operating the four memory banks in an interleave fashion allows random access operation to occur at a higher rate than is possible with standard DRAMs. A sequential and gapless data rate of up to 150MHz is possible depending on burst length, CAS latency, and speed grade of the device. Auto Refresh (CBR), Self Refresh, and Low Power operation are supported.



## Pin Assignments for Planar Components (Top View)

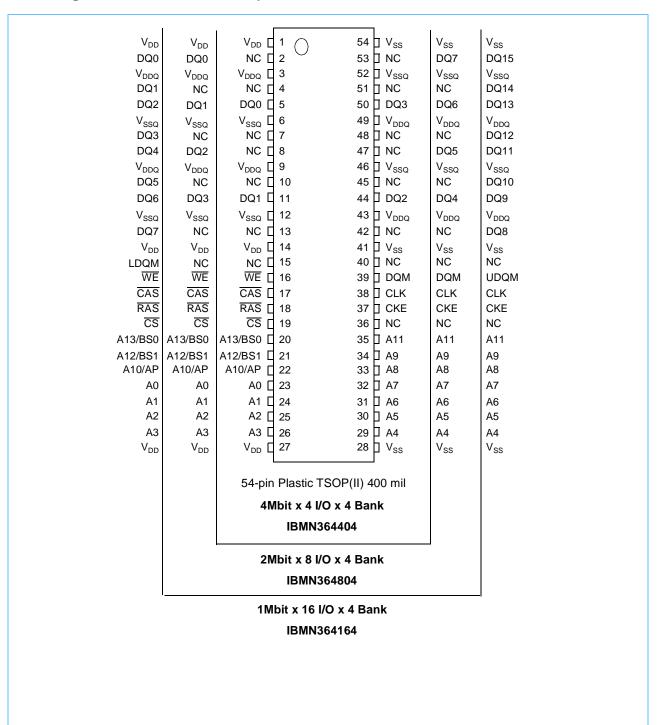



# **Pin Description**

CLK	Clock Input	DQ0-DQ15	Data Input/Output		
CKE	Clock Enable	DQM, LDQM, UDQM	Data Mask		
CS (CS0, CS1)	Chip Select	$V_{DD}$	Power (+3.3V)		
RAS	Row Address Strobe	V <sub>SS</sub>	Ground		
CAS	Column Address Strobe	$V_{DDQ}$	Power for DQs (+3.3V)		
WE	Write Enable	V <sub>SSQ</sub>	Ground for DQs		
BS1, BS0 (A12, A13)	Bank Select	NC	No Connection		
A0 - A11	Address Inputs	_	_		

# **Input/Output Functional Description**

Symbol	Туре	Polarity	Function
CLK	Input	Positive Edge	The system clock input. All of the SDRAM inputs are sampled on the rising edge of the clock.
CKE	Input	Active High	Activates the CLK signal when high and deactivates the CLK signal when low. By deactivating the clock, CKE low initiates the Power Down mode, Suspend mode, or the Self Refresh mode.
<del>CS</del>	Input	Active Low	CS enables the command decoder when low and disables the command decoder when high. When the command decoder is disabled, new commands are ignored but previous operations continue.
RAS, CAS, WE	Input	Active Low	When sampled at the positive rising edge of the clock, $\overline{\text{CAS}}$ , $\overline{\text{RAS}}$ , and $\overline{\text{WE}}$ define the operation to be executed by the SDRAM.
BS1, BS0 (A12, A13)	Input	_	Selects which bank is to be active.
A0 - A11	Input	_	During a Bank Activate command cycle, A0-A11 defines the row address (RA0-RA11) when sampled at the rising clock edge.  During a Read or Write command cycle, A0-A9 defines the column address (CA0-CA9) when sampled at the rising clock edge.  A10 is used to invoke auto-precharge operation at the end of the burst read or write cycle. If A10 is high, auto-precharge is selected and BS0, BS1 defines the bank to be precharged. If A10 is low, autoprecharge is disabled.  During a Precharge command cycle, A10 is used in conjunction with BS0, BS1 to control which bank(s) to precharge. If A10 is high, all banks will be precharged regardless of the state of BS. If A10 is low, then BS0 and BS1 are used to define which bank to precharge.
DQ0 - DQ15	Input- Output	_	Data Input/Output pins operate in the same manner as on conventional DRAMs.
DQM LDQM UDQM	Input	Active High	The Data Input/Output mask places the DQ buffers in a high impedance state when sampled high. In x16 products, the LDQM and UDQM control the lower and upper byte I/O buffers, respectively. In Read mode, DQM has a latency of two clock cycles and controls the output buffers like an output enable. DQM low turns the output buffers on and DQM high turns them off. In Write mode, DQM has a latency of zero and operates as a word mask by allowing input data to be written if it is low but blocks the write operation if DQM is high.
V <sub>DD</sub> , V <sub>SS</sub>	Supply	_	Power and ground for the input buffers and the core logic.
V <sub>DDQ</sub> V <sub>SSQ</sub>	Supply	_	Isolated power supply and ground for the output buffers to provide improved noise immunity.




# Ordering Information - Planar Devices (Single $\overline{\text{CS}}$ Pin)

Part Number	CAS Latencies	Power Sup- ply	Clock Cycle	Package	Power	Org.
IBMN364404CT3C-75A	3		7.5ns			
IBMN364404CT3C-260	2.2	3.3V	10ns	400mil Type II TSOP-54	SP	x4
IBMN364404CT3C-360	2, 3			71.		
IBMN364804CT3C-75A	3		7.5ns			
IBMN364804CT3C-260	2, 3	3.3V	1000	400mil Type II TSOP-54	SP	x8
IBMN364804CT3C-360	2, 3		10ns	, , , , , , , , , , , , , , , , , , ,		
IBMN364164CT3C-68	3		6.67ns			
IBMN364164CT3C-75A	3	3.3V	7.5ns	400mil	SP	x16
IBMN364164CT3C-260	2, 3	J.J V	10ns	Type II TSOP-54		X10
IBMN364164CT3C-360	۷, ۵		TONS			



### 64Mb Synchronous DRAM - Die Revision C

# **Planar Block Diagram**

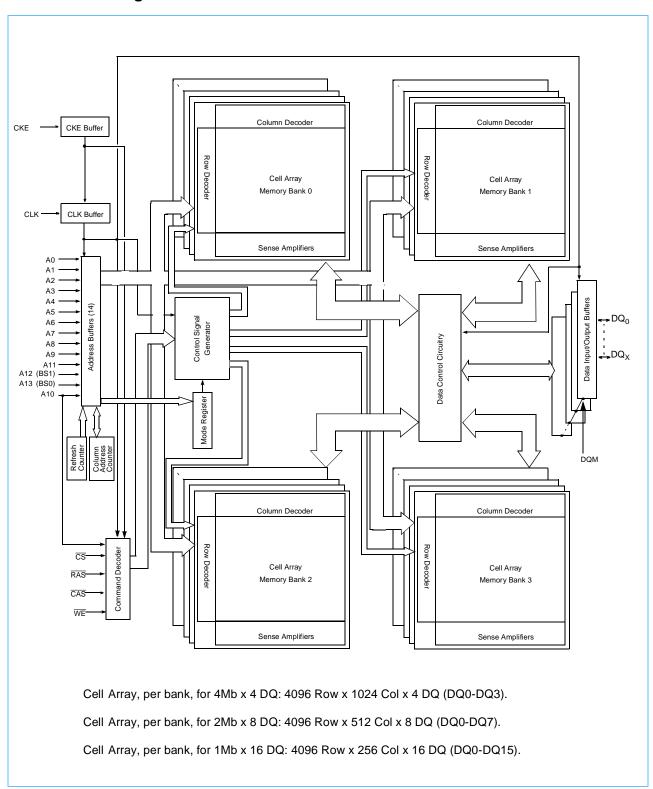



### **Power On and Initialization**

The default power on state of the mode register is supplier specific and may be undefined. The following power on and initialization sequence guarantees the device is preconditioned to each users specific needs.

Like a conventional DRAM, the Synchronous DRAM must be powered up and initialized in a predefined manner. During power on, all  $V_{DD}$  and  $V_{DDQ}$  pins must be built up simultaneously to the specified voltage when the input signals are held in the "NOP" state. The power on voltage must not exceed  $V_{DD}+0.3V$  on any of the input pins or  $V_{DD}$  supplies. The CLK signal must be started at the same time. After power on, an initial pause of 200 $\mu$ s is required followed by a precharge of all banks using the precharge command. To prevent data contention on the DQ bus during power on, it is required that the DQM and CKE pins be held high during the initial pause period. Once all banks have been precharged, the Mode Register Set Command must be issued to initialize the Mode Register. A minimum of eight Auto Refresh cycles (CBR) are also required. These may be done before or after programming the Mode Register. Failure to follow these steps may lead to unpredictable start-up modes.


### **Programming the Mode Register**

For application flexibility,  $\overline{\text{CAS}}$  latency, burst length, burst sequence, and operation type are user defined variables and must be programmed into the SDRAM Mode Register with a single Mode Register Set Command. Any content of the Mode Register can be altered by re-executing the Mode Register Set Command. If the user chooses to modify only a subset of the Mode Register variables, all four variables must be redefined when the Mode Register Set Command is issued.

After initial power up, the Mode Register Set Command must be issued before read or write cycles may begin. All banks must be in a precharged state and CKE must be high at least one cycle before the Mode Register Set Command can be issued. The Mode Register Set Command is activated by the low signals of RAS, CAS, CS, and WE at the positive edge of the clock. The address input data during this cycle defines the parameters to be set as shown in the Mode Register Operation table. A new command may be issued following the mode register set command once a delay equal to t<sub>RSC</sub> has elapsed.


# **CAS** Latency

The  $\overline{\text{CAS}}$  latency is a parameter that is used to define the delay from when a Read Command is registered on a rising clock edge to when the data from that Read Command becomes available at the outputs. The  $\overline{\text{CAS}}$  latency is expressed in terms of clock cycles and can have a value of 2 or 3 cycles. The value of the  $\overline{\text{CAS}}$  latency is determined by the speed grade of the device and the clock frequency that is used in the application. A table showing the relationship between the  $\overline{\text{CAS}}$  latency, speed grade, and clock frequency appears in the Electrical Characteristics section of this document. Once the appropriate  $\overline{\text{CAS}}$  latency has been selected it must be programmed into the mode register after power up, for an explanation of this procedure see Programming the Mode Register in the previous section.





# **Mode Register Operation (Address Input For Mode Set)**

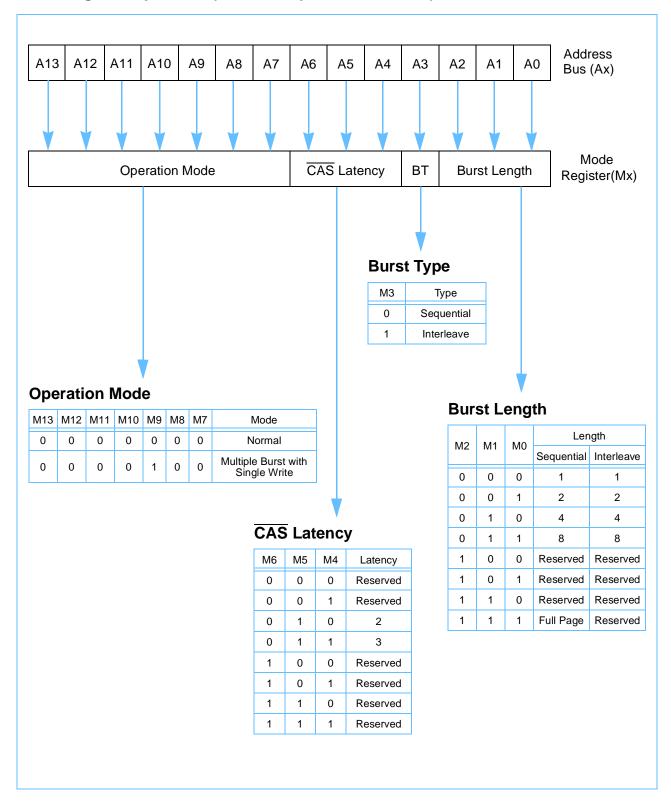



# **Burst Mode Operation**

Burst mode operation is used to provide a constant flow of data to memory locations (write cycle), or from memory locations (read cycle). There are three parameters that define how the burst mode will operate. These parameters include burst sequence, burst length, and operation mode. The burst sequence and burst length are programmable, and are determined by address bits A0 - A3 during the Mode Register Set command. Operation mode is also programmable and is set by address bits A7 - A13.

The burst type is used to define the order in which the burst data will be delivered or stored to the SDRAM. Two types of burst sequences are supported, sequential and interleaved. See the table below.

The burst length controls the number of bits that will be output after a Read Command, or the number of bits to be input after a Write Command. The burst length can be programmed to have values of 1, 2, 4, 8 or full page (actual page length is dependent on organization: x4, x8, or x16). Full page burst operation is only possible using the sequential burst type.

Burst operation mode can be normal operation or multiple burst with single write operation. Normal operation implies that the device will perform burst operations on both read and write cycles until the desired burst length is satisfied. Multiple burst with single write operation was added to support Write Through Cache operation. Here, the programmed burst length only applies to read cycles. All write cycles are single write operations when this mode is selected.

### **Burst Length and Sequence**

Burst Length	Starting Address (A2 A1 A0)	Sequential Addressing (decimal)	Interleave Addressing (decimal)
2	x x 0	0, 1	0, 1
2	x x 1	1, 0	1, 0
	x 0 0	0, 1, 2, 3	0, 1, 2, 3
4	x 0 1	1, 2, 3, 0	1, 0, 3, 2
4	x 1 0	2, 3, 0, 1	2, 3, 0, 1
	x 1 1	3, 0, 1, 2	3, 2, 1, 0
	0 0 0	0, 1, 2, 3, 4, 5, 6, 7	0, 1, 2, 3, 4, 5, 6, 7
	0 0 1	1, 2, 3, 4, 5, 6, 7, 0	1, 0, 3, 2, 5, 4, 7, 6
	010	2, 3, 4, 5, 6, 7, 0, 1	2, 3, 0, 1, 6, 7, 4, 5
8	011	3, 4, 5, 6, 7, 0, 1, 2	3, 2, 1, 0, 7, 6, 5, 4
0	100	4, 5, 6, 7, 0, 1, 2, 3	4, 5, 6, 7, 0, 1, 2, 3
	101	5, 6, 7, 0, 1, 2, 3, 4	5, 4, 7, 6, 1, 0, 3, 2
	110	6, 7, 0, 1, 2, 3, 4, 5	6, 7, 4, 5, 2, 3, 0, 1
	111	7, 0, 1, 2, 3, 4, 5, 6	7, 6, 5, 4, 3, 2, 1, 0
Full Page (Note)	n n n	Cn, Cn+1, Cn+2,	Not Supported

Note: Page length is a function of I/O organization and column addressing.

x4 organization (CA0-CA9); Page Length = 1024 bits x8 organization (CA0-CA8); Page Length = 512 bits x16 organization (CA0-CA7); Page Length = 256 bits




### **Bank Activate Command**

In relation to the operation of a fast page mode DRAM, the Bank Activate command corresponds to a falling RAS signal. The Bank Activate command is issued by holding CAS and WE high with CS and RAS low at the rising edge of the clock. The bank select address A12 - A13 is used to select the desired bank. The row address A0 - A11 is used to determine which row to activate in the selected bank.

The Bank Activate command must be applied before any Read or Write operation can be executed. The delay from when the Bank Activate command is applied to when the first read or write operation can begin must meet or exceed the  $\overline{RAS}$  to  $\overline{CAS}$  delay time ( $t_{RCD}$ ). Once a bank has been activated it must be precharged before another Bank Activate command can be applied to the same bank. The minimum time interval between successive Bank Activate commands to the same bank is determined by the RAS cycle time of the device ( $t_{RC}$ ). The minimum time interval between interleaved Bank Activate commands (Bank A to Bank B and vice versa) is the Bank to Bank delay time ( $t_{RRD}$ ). The maximum time that each bank can be held active is specified as  $t_{RAS(max)}$ .

### **Bank Activate Command Cycle**

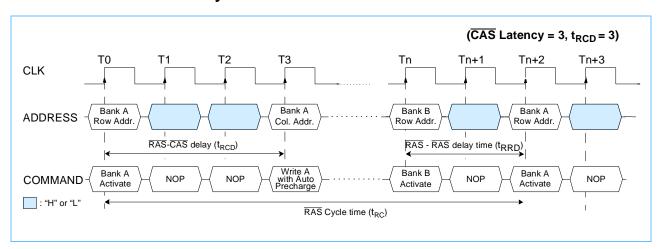

### **Bank Select**

The Bank Select inputs, BS0 and BS1, determine the bank to be used during a Bank Activate, Precharge, Read, or Write operation.

### **Bank Selection Bits**

BS0	BS1	Bank
0	0	Bank 0
0	1	Bank 1
1	0	Bank 2
1	1	Bank 3



### **Read and Write Access Modes**

After a bank has been activated, a read or write cycle can be executed. This is accomplished by setting RAS high and CAS low at the clock's rising edge after the necessary RAS to CAS delay (t<sub>RCD</sub>). WE must also be defined at this time to determine whether the access cycle is a read operation (WE high), or a write operation (WE low). The address inputs determine the starting column address.

The SDRAM provides a wide variety of fast access modes. A single Read or Write Command will initiate a serial read or write operation on successive clock cycles up to 150 MHz. The number of serial data bits for each access is equal to the burst length, which is programmed into the Mode Register. If the burst length is full page, data is repeatedly read out or written until a Burst Stop or Precharge Command is issued.

Similar to Page Mode of conventional DRAMs, a read or write cycle can not begin until the sense amplifiers latch the selected row address information. The refresh period ( $t_{REF}$ ) is what limits the number of random column accesses to an activated bank. A new burst access can be done even before the previous burst ends. The ability to interrupt a burst operation at every clock cycle is supported; this is referred to as the 1-N rule. When the previous burst is interrupted by another Read or Write Command, the remaining addresses are overridden by the new address.

Precharging an active bank after each read or write operation is not necessary providing the same row is to be accessed again. To perform a read or write cycle to a different row within an activated bank, the bank must be precharged and a new Bank Activate command must be issued. When more than one bank is activated, interleaved (ping pong) bank Read or Write operations are possible. By using the programmed burst length and alternating the access and precharge operations between multiple banks, fast and seamless data access operation among many different pages can be realized. When multiple banks are activated, column to column interleave operation can be done between different pages. Finally, Read or Write Commands can be issued to the same bank or between active banks on every clock cycle.


Page 10 of 71



### **Burst Read Command**

The Burst Read command is initiated by having  $\overline{CS}$  and  $\overline{CAS}$  low while holding  $\overline{RAS}$  and  $\overline{WE}$  high at the rising edge of the clock. The address inputs determine the starting column address for the burst, the Mode Register sets the type of burst (sequential or interleave) and the burst length (1, 2, 4, 8, full page). The delay from the start of the command to when the data from the first cell appears on the outputs is equal to the value of the  $\overline{CAS}$  latency that is set in the Mode Register.

## **Burst Read Operation**

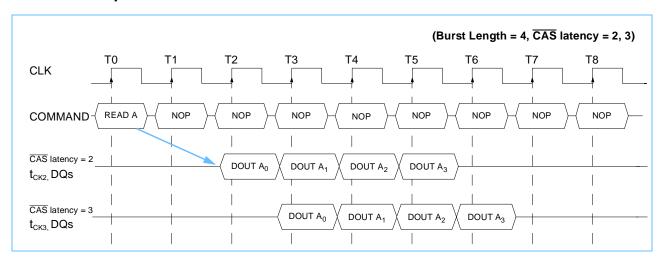


## Read Interrupted by a Read

A Burst Read may be interrupted before completion of the burst by another Read Command, with the only restriction being that the interval that separates the commands must be at least one clock cycle. When the previous burst is interrupted, the remaining addresses are overridden by the new address with the full burst length. The data from the first Read Command continues to appear on the outputs until the CAS latency from the interrupting Read Command is satisfied, at this point the data from the interrupting Read Command appears.



# Read Interrupted by a Read

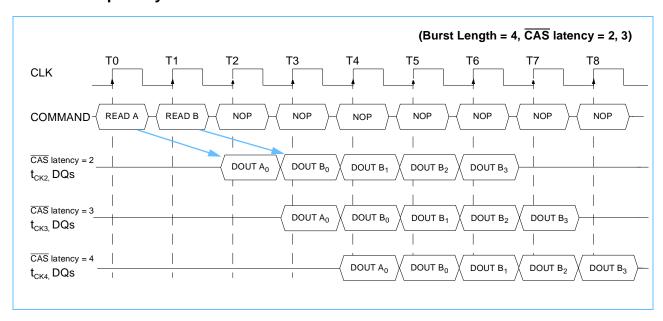




# Read Interrupted by a Write


To interrupt a burst read with a Write Command, DQM may be needed to place the DQs (output drivers) in a high impedance state to avoid data contention on the DQ bus. If a Read Command will issue data on the first or second clocks cycles of the write operation, DQM is needed to insure the DQs are tri-stated. After that point the Write Command will have control of the DQ bus.

### **Minimum Read to Write Interval**

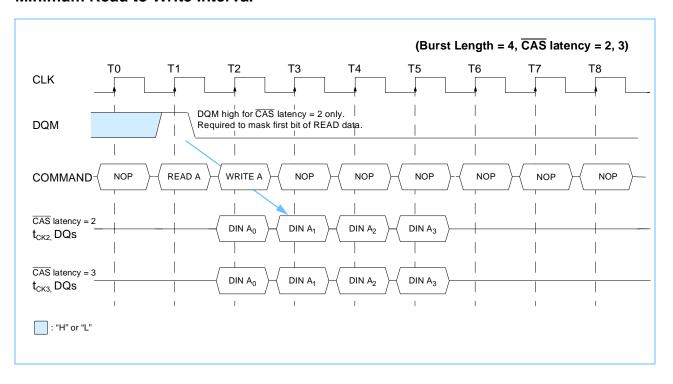



### Non-Minimum Read to Write Interval

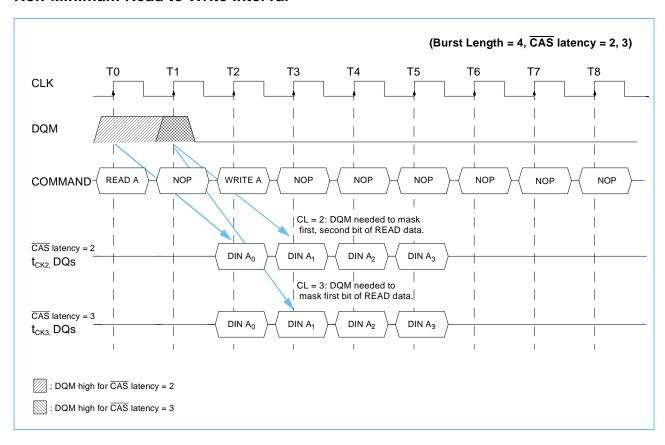




### **Burst Write Command**

The Burst Write command is initiated by having  $\overline{CS}$ ,  $\overline{CAS}$ , and  $\overline{WE}$  low while holding  $\overline{RAS}$  high at the rising edge of the clock. The address inputs determine the starting column address. There is no  $\overline{CAS}$  latency required for burst write cycles. Data for the first burst write cycle must be applied on the DQ pins on the same clock cycle that the Write Command is issued. The remaining data inputs must be supplied on each subsequent rising clock edge until the burst length is completed. When the burst has finished, any additional data supplied to the DQ pins will be ignored.


### **Burst Write Operation**

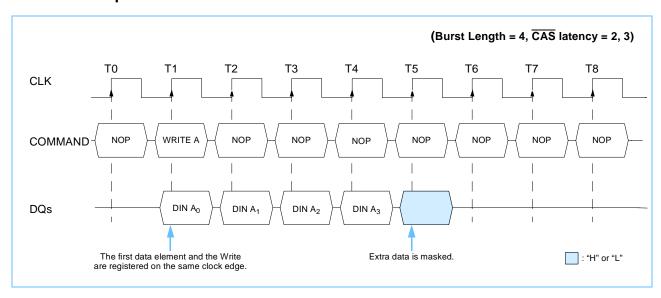

## Write Interrupted by a Write

A burst write may be interrupted before completion of the burst by another Write Command. When the previous burst is interrupted, the remaining addresses are overridden by the new address and data will be written into the device until the programmed burst length is satisfied.

## Write Interrupted by a Write

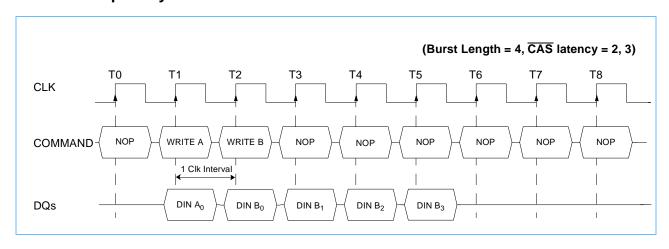




# Write Interrupted by a Read


A Read Command will interrupt a burst write operation on the same clock cycle that the Read Command is registered. The DQs must be in the high impedance state at least one cycle before the interrupting read data appears on the outputs to avoid data contention. When the Read Command is registered, any residual data from the burst write cycle will be ignored. Data that is presented on the DQ pins before the Read Command is initiated will actually be written to the memory.

### **Minimum Write to Read Interval**

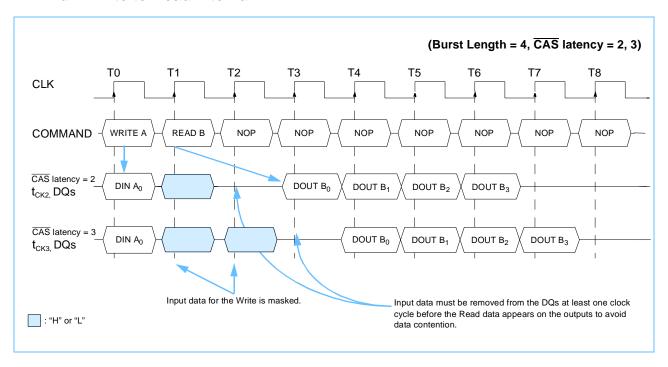



### Non-Minimum Write to Read Interval

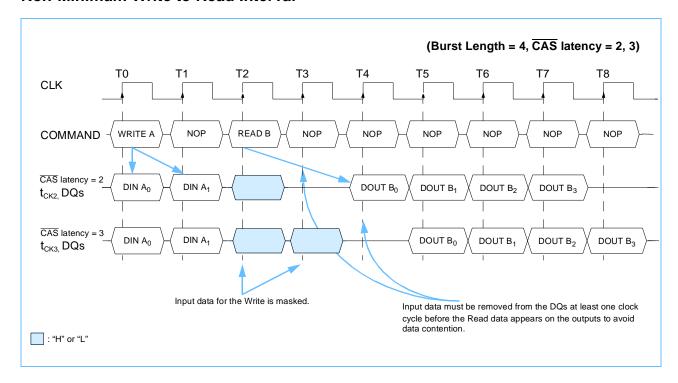




# **Burst Stop Command**

Once a burst read or write operation has been initiated, there exist several methods in which to terminate the burst operation prematurely. These methods include using another Read or Write Command to interrupt an existing burst operation or using a Precharge Command to interrupt a burst cycle and close the active bank. When interrupting a burst with another Read or Write Command care must be taken to avoid DQ contention.

If the burst length is full page, the Burst Stop Command may also be used to terminate the existing burst operation but leave the bank open for future Read or Write Commands to the same page of the active bank. Use of the Burst Stop Command during other burst length operations is illegal. The Burst Stop Command is defined by having RAS and CAS high with CS and WE low at the rising edge of the clock.


When using the Burst Stop Command during a burst read cycle, the data DQs go to a high impedance state after a delay which is equal to the  $\overline{CAS}$  Latency set in the Mode Register.

### **Termination of a Burst Read Operation**

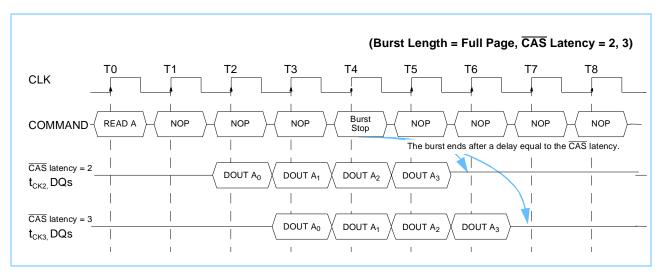

If a Burst Stop Command is issued during a full page burst write operation, then any residual data from the burst write cycle will be ignored. Data that is presented on the DQ pins before the Burst Stop Command is registered will be written to the memory.

### **Termination of a Burst Write Operation**

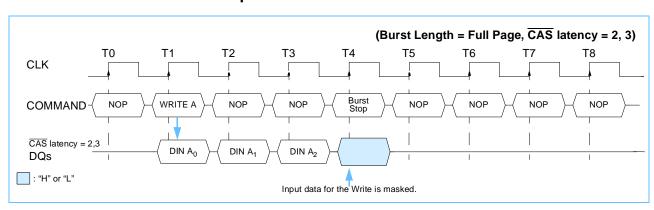




### **Auto-Precharge Operation**

Before a new row in an active bank can be opened, the active bank must be precharged using either the Precharge Command or the auto-precharge function. When a Read or a Write Command is given to the SDRAM, the  $\overline{CAS}$  timing accepts one extra address, column address A10, to allow the active bank to automatically begin precharge at the earliest possible moment during the burst read or write cycle. If A10 is low when the Read or Write Command is issued, then normal Read or Write burst operation is executed and the bank remains active at the completion of the burst sequence. If A10 is high when the Read or Write Command is issued, then the auto-precharge function is engaged. During auto-precharge, a Read Command will execute as normal with the exception that the active bank will begin to precharge before all burst read cycles have been completed. Regardless of burst length, the precharge will begin ( $\overline{CAS}$  latency - 1) clocks prior to the last data output. Auto-precharge can also be implemented during Write commands.

A Read or Write Command without auto-precharge can be terminated in the midst of a burst operation. However, a Read or Write Command with auto-precharge cannot be interrupted by a command to the same bank. Therefore use of a Read, Write, or Precharge Command to the same bank is prohibited during a read or write cycle with auto-precharge until the entire burst operation is completed. Once the precharge operation has started the bank cannot be reactivated until the Precharge time (t<sub>RP</sub>) has been satisfied. It should be noted that the device will not respond to the Auto-Precharge command if the device is programmed for full page burst read or write cycles, or full page burst read cycles with single write operation.


When using the Auto-precharge Command, the interval between the Bank Activate Command and the beginning of the internal precharge operation must satisfy  $t_{RAS}(min)$ . If this interval does not satisfy  $t_{RAS}(min)$  then  $t_{RCD}$  must be extended.

## **Burst Read with Auto-Precharge**

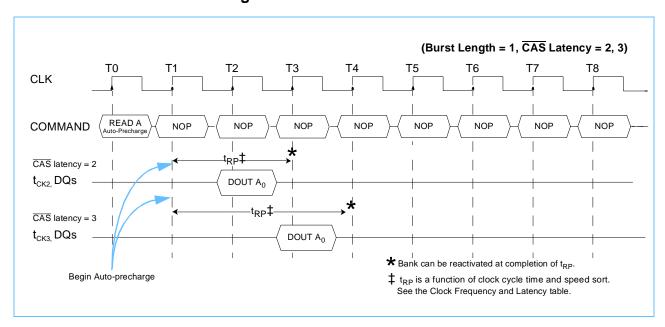




# **Burst Read with Auto-Precharge**

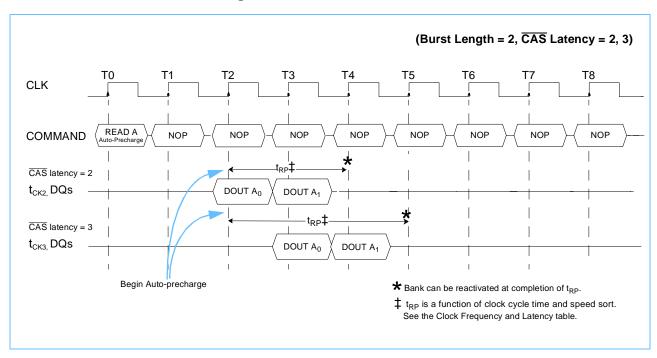


# **Burst Read with Auto-Precharge**

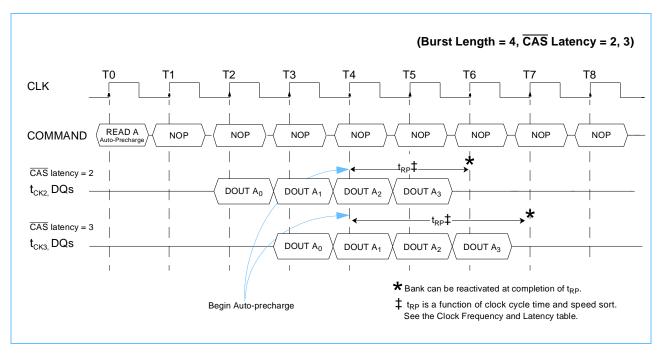




# Although a Read Command with auto-precharge can not be interrupted by a command to the same bank, it can be interrupted by a Read or Write Command to a different bank. If the command is issued before auto-precharge begins then the precharge function will begin with the new command. The bank being auto-precharged may be reactivated after the delay t<sub>RP</sub>.

## **Burst Read with Auto-Precharge Interrupted by Read**

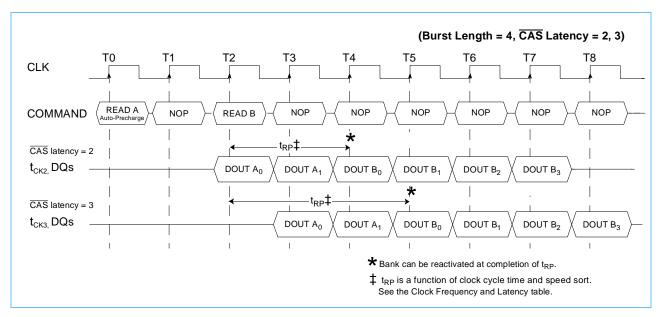

If interrupting a Read Command with auto-precharge with a Write Command, DQM must be used to avoid DQ contention.


### **Burst Read with Auto-Precharge Interrupted by Write**

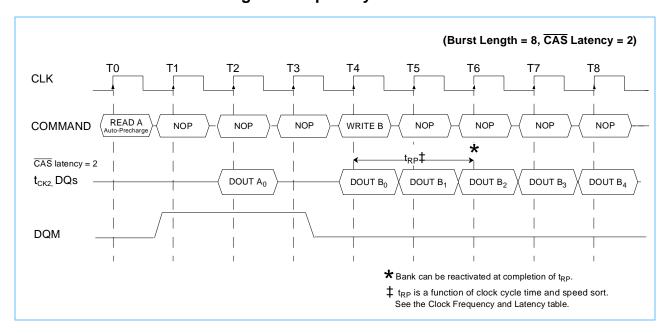




If A10 is high when a Write Command is issued, the Write with Auto-Precharge function is initiated. The bank undergoing auto-precharge cannot be reactivated until t<sub>DAL</sub>, Data-in to Active delay, is satisfied.

# **Burst Write with Auto-Precharge**

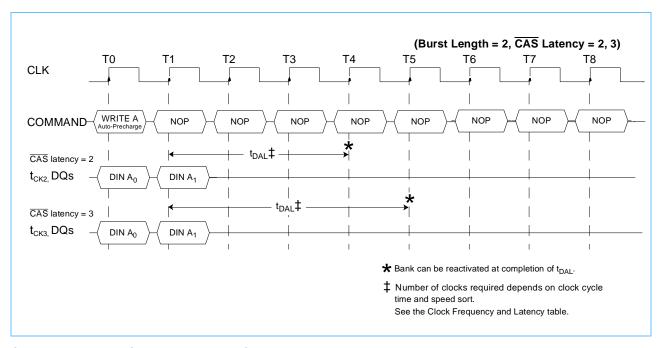


Similar to the Read Command, a Write Command with auto-precharge can not be interrupted by a command to the same bank. It can be interrupted by a Read or Write Command to a different bank, however. The precharge function will be initiated by the new command. After the Data-in to Active, delay,  $t_{DAL}$ , is satisfied the bank may be reactivated.

## **Burst Write with Auto-Precharge Interrupted by Write**

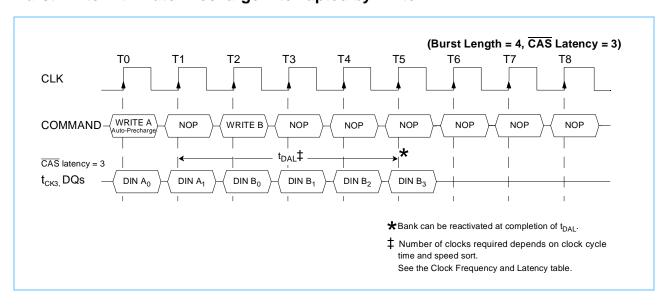



## **Burst Write with Auto-Precharge Interrupted by Read**

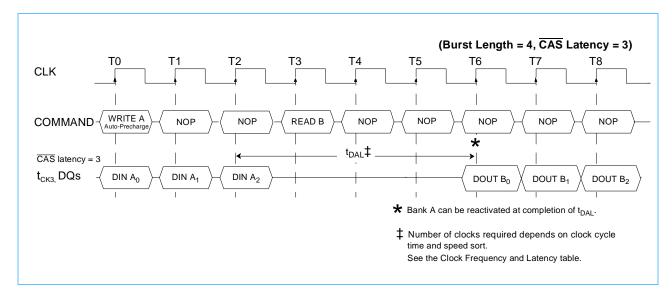

### **Precharge Command**

The Precharge Command is used to precharge or close a bank that has been activated. The Precharge Command is triggered when  $\overline{CS}$ ,  $\overline{RAS}$ , and  $\overline{WE}$  are low and  $\overline{CAS}$  is high at the rising edge of the clock. The Precharge Command can be used to precharge each bank separately or all banks simultaneously. Three address bits, A10, A12, and A13, are used to define which bank(s) is to be precharged when the command is issued.

### **Bank Selection for Precharge by Address Bits**


A10	Bank Select	Precharged Bank(s)
LOW	BS0, BS1	Single bank defined by BS0, BS1
HIGH	DON'T CARE	All Banks

For read cycles, the Precharge Command may be applied ( $\overline{\text{CAS}}$  latency - 1) prior to the last data output. For write cycles, a delay must be satisfied from the start of the last burst write cycle until the Precharge Command can be issued. This delay is known as  $t_{DPL}$ , Data-in to Precharge delay.


After the Precharge Command is issued, the precharged bank must be reactivated before a new read or write access can be executed. The delay between the Precharge Command and the Activate Command must be greater than or equal to the Precharge time (t<sub>RP</sub>).



# **Burst Read Followed by the Precharge Command**

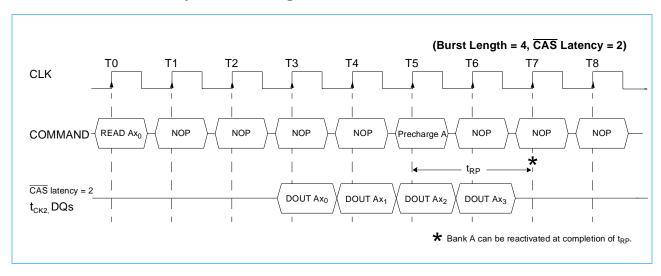

# **Burst Write Followed by the Precharge Command**

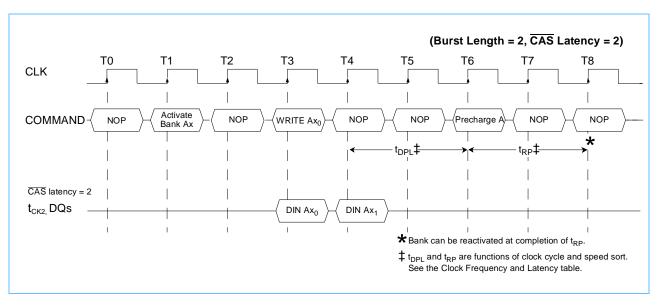




# **Precharge Termination**

The Precharge Command may be used to terminate either a burst read or burst write operation. When the Precharge command is issued, the burst operation is terminated and bank precharge begins. For burst read operations, valid data will continue to appear on the data bus as a function of CAS Latency.

# **Burst Read Interrupted by Precharge**

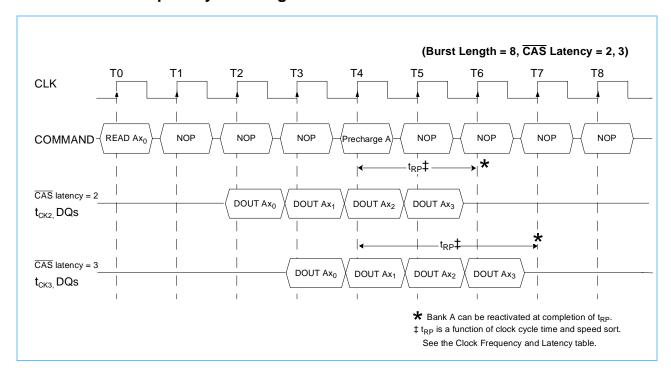




### 64Mb Synchronous DRAM - Die Revision C

Burst write operations will be terminated by the Precharge command. The last write data that will be properly stored in the device is that write data that is presented to the device a number of clock cycles prior to the Precharge command equal to the Data-in to Precharge delay, t<sub>DPL</sub>.

# **Precharge Termination of a Burst Write**

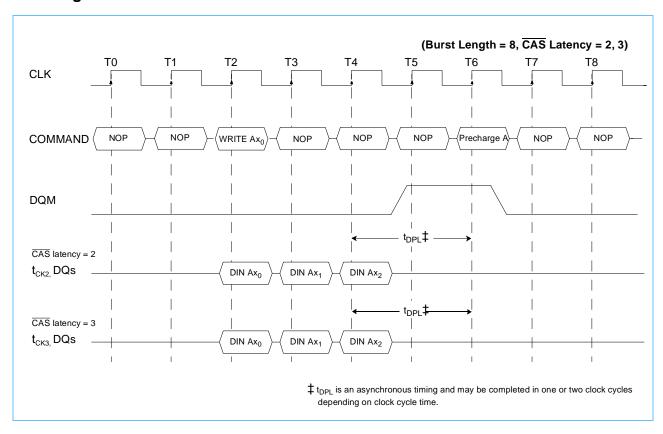



### Automatic Refresh Command (CAS before RAS Refresh)

When  $\overline{\text{CS}}$ ,  $\overline{\text{RAS}}$ , and  $\overline{\text{CAS}}$  are held low with CKE and  $\overline{\text{WE}}$  high at the rising edge of the clock, the chip enters the Automatic Refresh mode (CBR). All banks of the SDRAM must be precharged and idle for a minimum of the Precharge time ( $t_{\text{RP}}$ ) before the Auto Refresh Command (CBR) can be applied. An address counter, internal to the device provides the address during the refresh cycle. No control of the external address pins is required once this cycle has started.

When the refresh cycle has completed, all banks of the SDRAM will be in the precharged (idle) state. A delay between the Auto Refresh Command (CBR) and the next Activate Command or subsequent Auto Refresh Command must be greater than or equal to the  $\overline{RAS}$  cycle time ( $t_{RC}$ ).

#### **Self Refresh Command**

The SDRAM device has a built-in timer to accommodate Self Refresh operation. The Self Refresh Command is defined by having  $\overline{\text{CS}}$ ,  $\overline{\text{RAS}}$ ,  $\overline{\text{CAS}}$ , and CKE held low with  $\overline{\text{WE}}$  high at the rising edge of the clock. All banks must be idle prior to issuing the Self Refresh Command. Once the command is registered, CKE must be held low to keep the device in Self Refresh mode. When the SDRAM has entered Self Refresh mode all of the external control signals, except CKE, are disabled. The clock is internally disabled during Self Refresh Operation to save power. The user may halt the external clock while the device is in Self Refresh mode, however, the clock must be restarted before the device can exit Self Refresh operation. Once the clock is cycling, the device will exit Self Refresh operation after CKE is returned high. A minimum delay time is required when the device exits Self Refresh Operation and before the next command can be issued. This delay is equal to the  $\overline{\text{RAS}}$  cycle time ( $t_{\text{RC}}$ ) plus the Self Refresh exit time ( $t_{\text{SRFX}}$ ).




### **Power Down Mode**

In order to reduce standby power consumption, two power down modes are available: Precharge and Active Power Down mode. To enter Precharge Power Down mode, all banks must be precharged and the necessary precharge delay  $(t_{RP})$  must occur before the SDRAM can enter the power down mode. If a bank is activated but not performing a Read or Write operation, Active Power Down mode will be entered. (Issuing a Power Down Mode Command when the device is performing a Read or Write operation causes the device to enter Clock Suspend mode. See the following section.) Once the Power Down mode is initiated by holding CKE low, all of the receiver circuits except CKE are gated off. The Power Down mode does not perform any refresh operations, therefore the device can't remain in Power Down mode longer than the Refresh period  $(t_{RFF})$  of the device.

The Power Down mode is exited by bringing CKE high. When CKE goes high, a No Operation Command (or Device Deselect Command) is required on the next rising clock edge.

# **Power Down Mode Exit Timing**

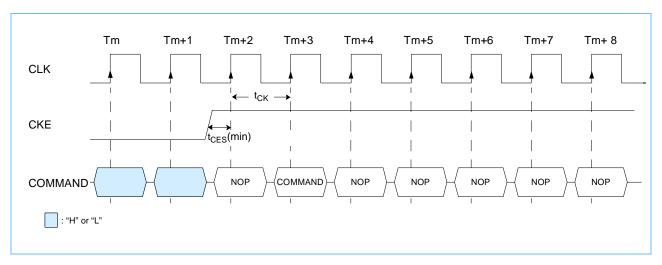




### **Data Mask**

The SDRAM has a Data Mask function that can be used in conjunction with data read and write cycles. When the Data Mask is activated (DQM high) during a write cycle, the write operation is prohibited immediately (zero clock latency). If the Data Mask is activated during a read cycle, the data outputs are disabled and become high impedance after a two-clock delay, independent of CAS latency.

## **Data Mask Activated during a Read Cycle**

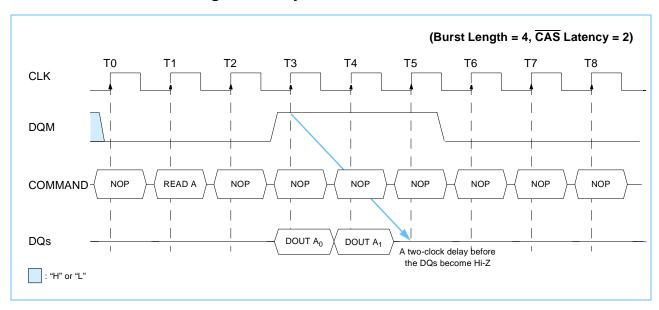

### **No Operation Command**

The No Operation Command should be used in cases when the SDRAM is in a idle or a wait state. The purpose of the No Operation Command is to prevent the SDRAM from registering any unwanted commands between operations. A No Operation Command is registered when CS is low with RAS, CAS, and WE held high at the rising edge of the clock. A No Operation Command will not terminate a previous operation that is still executing, such as a burst read or write cycle.

### **Deselect Command**

The Deselect Command performs the same function as a No Operation Command. Deselect Command occurs when  $\overline{\text{CS}}$  is brought high, the  $\overline{\text{RAS}}$ ,  $\overline{\text{CAS}}$ , and  $\overline{\text{WE}}$  signals become don't cares.




# **Clock Suspend Mode**

During normal access mode, CKE is held high, enabling the clock. When CKE is registered low while at least one of the banks is active, Clock Suspend Mode is entered. The Clock Suspend mode deactivates the internal clock and suspends or "freezes" any clocked operation that was currently being executed. There is a one-clock delay between the registration of CKE low and the time at which the SDRAM's operation suspends. While in Clock Suspend mode, the SDRAM ignores any new commands that are issued. The Clock Suspend mode is exited by bringing CKE high. There is a one clock cycle delay from when CKE returns high to when Clock Suspend mode is exited.


When the operation of the SDRAM is suspended during the execution of a Burst Read operation, the last valid data output onto the DQ pins will be actively held valid until Clock Suspend mode is exited.

## **Clock Suspend during a Read Cycle**

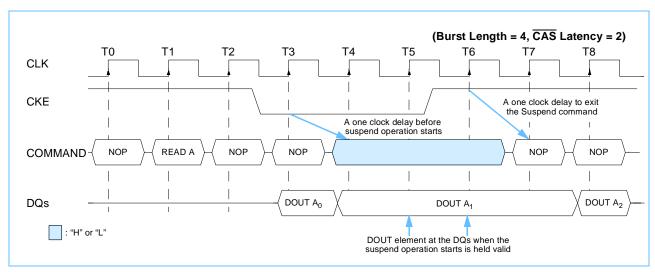

If Clock Suspend mode is initiated during a burst write operation, the input data is masked and is ignored until the Clock Suspend mode is exited.

# **Clock Suspend during a Write Cycle**

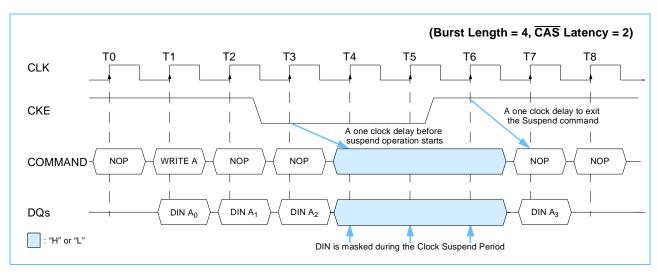



### Command Truth Table (See note 1)

		Cł	ΚE						A12.		A11. A9-	
Function	Device State	Previous Cycle	Current Cycle	<u>cs</u>	RAS	CAS	WE	DQM	A12, A13	A10	A11, A9- A0	Notes
Mode Register Set	Idle	Н	Х	L	L	L	L	Х		OP Co	de	
Auto (CBR) Refresh	Idle	Н	Н	L	L	L	Н	Χ	Χ	Х	Х	
Entry Self Refresh	Idle	Н	L	L	L	L	Н	Х	Х	Х	Х	
Exit Self Refresh	Idle (Self- Refresh)	L	Н	H L	X H	X H	X H	Х	Х	Х	х	
Single Bank Precharge	See Current State Table	Н	Х	L	L	Н	L	Х	BS	L	х	2
Precharge all Banks	See Current State Table	Н	Х	L	L	Н	L	Х	Х	Н	Х	
Bank Activate	Idle	Н	Х	L	L	Н	Н	Χ	BS	Row	Address	2
Write	Active	Н	Х	L	Н	L	L	Х	BS	L	Column	2
Write with Auto-Precharge	Active	Н	Х	L	Н	L	L	Х	BS	Н	Column	2
Read	Active	Н	Х	L	Н	L	Н	Х	BS	L	Column	2
Read with Auto-Precharge	Active	Н	Х	L	Н	L	Н	Х	BS	Н	Column	2
Burst Termination	Active	Н	Х	L	Н	Н	L	Х	Х	Х	Х	3, 8
No Operation	Any	Н	Х	L	Н	Н	Н	Х	Х	Х	Х	
Device Deselect	Any	Н	Х	Н	Х	Х	Х	Х	Χ	Х	Х	
Clock Suspend Mode Entry	Active	Н	L	Х	Х	Х	Х	Х	Х	Х	Х	4
Clock Suspend Mode Exit	Active	L	Н	Х	Х	Х	Х	Х	Χ	Х	Х	
Data Write/Output Enable	Active	Н	Х	Х	Х	Х	Х	L	Х	Х	Х	_
Data Mask/Output Disable	Active	Н	Х	Х	Х	Х	Х	Н	Х	Х	Х	5
Power Down Mode Entry	Idle/Active	Н	L	H L	X H	X H	X H	Х	Х	Х	Х	6, 7
	Any (Power			Н	X	Х	Х	.,	.,	.,	.,	
Power Down Mode Exit	Down)	L	Н	L	Н	Н	Н	X	Х	Х	Х	6, 7

- 1. All of the SDRAM operations are defined by states of  $\overline{CS}$ ,  $\overline{WE}$ ,  $\overline{RAS}$ ,  $\overline{CAS}$ , and DQM at the positive rising edge of the clock. Refer to the Current State Truth Table.
- 2. Bank Select (BS0, BS1): BS0, BS1 = 0,0 selects bank 0; BS0, BS1 = 0,1 selects bank 1; BS0, BS1 = 1,0 selects bank 2; BS0, BS1 = 1,1 selects bank 3.
- 3. During a Burst Write cycle there is a zero clock delay; for a Burst Read cycle the delay is equal to the CAS latency.
- 4. During normal access mode, CKE is held high and CLK is enabled. When it is low, it freezes the internal clock and extends data Read and Write operations. One clock delay is required for mode entry and exit.
- 5. The DQM has two functions for the data DQ Read and Write operations. During a Read cycle, when DQM goes high at a clock timing the data outputs are disabled and become high impedance after a two-clock delay. DQM also provides a data mask function for Write cycles. When it activates, the Write operation at the clock is prohibited (zero clock latency).
- 6. All banks must be precharged before entering the Power Down Mode. (If this command is issued during a burst operation, the device state will be Clock Suspend Mode.) The Power Down Mode does not perform any refresh operations; therefore the device can't remain in this mode longer than the Refresh period (t<sub>REF</sub>) of the device. One clock delay is required for mode entry and exit.
- 7. A No Operation or Device Deselect Command is required on the next clock edge following CKE going high.
- 8. Device state is full page burst operation. Use of this command to terminate other burst length operations is illegal.



# **Clock Enable (CKE) Truth Table**

	CI	KE			Co	mmand				
Current State	Previous Cycle	Current Cycle	<del>cs</del>	RAS	CAS	WE	A12,A13	A11 - A0	Action	Notes
	Н	Х	Х	Х	Х	Х	Х	Х	INVALID	1
	L	Н	Н	Х	Х	Х	Х	Х	Exit Self Refresh with Device Deselect	2
	L	Н	L	Н	Н	Н	Х	Х	Exit Self Refresh with No Operation	2
Self Refresh	L	Н	L	Н	Н	L	Х	Х	ILLEGAL	2
	L	Н	L	Н	L	Х	Х	Х	ILLEGAL	2
	L	Н	L	L	Х	Х	Х	Х	ILLEGAL	2
	L	L	Х	Х	Х	Х	Χ	Χ	Maintain Self Refresh	
	Н	X	Х	Х	Х	Х	Χ	Χ	INVALID	1
Power Down	L	Н	Н	Х	Х	Х	Х	Х	Power Down mode exit, all banks idle	2
i owei bowii	L	Н	L	Х	Х	Х	Х	Χ	ILLEGAL	2
	L	L	Х	Х	Х	Х	Х	X Maintain Power Down Mode		
	Н	Н	Н	Х	Х	Х				3
	Н	Н	L	Н	Х	Х			Refer to the Idle State section of the Current State Truth Table	3
	Н	Н	L	L	Н	Х				3
	Н	Н	L	L	L	Н	Х	Х	CBR Refresh	
	Н	Н	L	L	L	L	OP (	Code	Mode Register Set	4
All Banks Idle	Н	L	Н	Х	Х	Х				3
	Н	L	L	Н	Х	Х			Refer to the Idle State section of the Current State Truth Table	3
	Н	L	L	L	Н	Х				3
	Н	L	L	L	L	Н	Х	Х	Entry Self Refresh	4
	Н	L	L	L	L	L	OP (	Code	Mode Register Set	
	L	Х	Х	Х	Х	Х	Х	Х	Power Down	4
	Н	Н	Х	Х	Х	Х	Х	Х	Refer to operations in the Current State Truth Table	
Any State other than	Н	L	Х	Х	Х	Х	Х	Х	Begin Clock Suspend next cycle	5
listed above	L	Н	Х	Х	Х	Х	Х	Х	Exit Clock Suspend next cycle	
	L	L	Χ	Χ	Χ	Χ	X	X	Maintain Clock Suspend	

- 1. For the given Current State CKE must be low in the previous cycle.
- 2. When CKE has a low to high transition, the clock and other inputs are re-enabled asynchronously. The minimum setup time for CKE (t<sub>CES</sub>) must be satisfied. When exiting power down mode, a NOP command (or Device Deselect Command) is required on the first rising clock after CKE goes high (see page 28).
- 3. The address inputs (A13 A0) depend on the command that is issued. See the Idle State section of the Current State Truth Table for more information.
- 4. The Precharge Power Down Mode, the Self Refresh Mode, and the Mode Register Set can only be entered from the all banks idle
- 5. Must be a legal command as defined in the Current State Truth Table.



### Current State Truth Table (Part 1 of 4)(See note 1)

Current State					Cor	nmand		Action	Notes
Current State	CS	RAS	CAS	WE	A12,A13	A11 - A0	Description	ACTION	Notes
	L	L	L	L	OI	P Code	Mode Register Set	Set the Mode Register	2
	L	L	L	Н	Х	Х	Auto or Self Refresh	Start Auto or Self Refresh	2, 3
	L	L	Н	L	BS	Х	Precharge	No Operation	
	L	L	Н	Н	BS	Row Address	Bank Activate	Activate the specified bank and row	
Idle	L	Н	L	L	BS	Column	Write w/o Precharge	ILLEGAL	4
	L	Н	L	Н	BS	Column	Read w/o Precharge	ILLEGAL	4
	L	Н	Н	L	Х	Х	Burst Termination	No Operation	
	L	Н	Н	Н	Х	X	No Operation	No Operation	
	Н	Х	Χ	Χ	Х	X	Device Deselect	No Operation or Power Down	5
	L	L	L	L	OI	Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	Х	X	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	Х	Precharge	Precharge	6
	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
Row Active	L	Н	L	L	BS	Column	Write	Start Write; Determine if Auto Precharge	7, 8
	L	Н	L	Н	BS	Column	Read	Start Read; Determine if Auto Precharge	7, 8
	L	Н	Н	L	Х	Х	Burst Termination	No Operation	
	L	Н	Н	Н	Х	Х	No Operation	No Operation	
	Н	Χ	Х	Χ	Х	Х	Device Deselect	No Operation	
	L	L	L	L	OI	Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	X	Precharge	Terminate Burst; Start the Precharge	
	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
Read	L	Н	L	L	BS	Column	Write	Terminate Burst; Start the Write cycle	8, 9
	L	Н	L	Н	BS	Column	Read	Terminate Burst; Start a new Read cycle	8, 9
	L	Н	Н	L	Х	Х	Burst Termination	Terminate the Burst	
	L	Н	Н	Н	Х	Χ	No Operation	Continue the Burst	
	Н	Χ	Χ	Χ	Х	X	Device Deselect	Continue the Burst	

- 1. CKE is assumed to be active (high) in the previous cycle for all entries. The Current State is the state of the bank that the Command is being applied to.
- 2. All Banks must be idle; otherwise, it is an illegal action.
- 3. If CKE is active (high) the SDRAM will start the Auto (CBR) Refresh operation, if CKE is inactive (low) than the Self Refresh mode is entered.
- 4. The Current State refers to only one of the banks. If BS selects this bank then the action is illegal. If BS selects the bank not being referenced by the Current State then the action may be legal depending on the state of that bank.
- 5. If CKE is inactive (low) then the Power Down mode is entered; otherwise there is a No Operation.
- 6. The minimum and maximum Active time ( $t_{RAS}$ ) must be satisfied.
- 7. The  $\overline{\text{RAS}}$  to  $\overline{\text{CAS}}$  Delay  $(t_{\text{RCD}})$  must occur before the command is given.
- 8. Column address A10 is used to determine if the Auto Precharge function is activated.
- 9. The command must satisfy any bus contention, bus turn around, and/or write recovery requirements.
- 10. The command is illegal if the minimum bank to bank delay time (t<sub>RRD</sub>) is not satisfied.



### 64Mb Synchronous DRAM - Die Revision C

# Current State Truth Table (Part 2 of 4)(See note 1)

Current State					Cor	nmand		Action	Notos
Current State	CS	RAS	CAS	WE	A12,A13	A11 - A0	Description	Action	Notes
	L	L	L	L	Ol	P Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	X	X	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	X	Precharge	Terminate Burst; Start the Precharge	
	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
Write	L	Н	L	L	BS	Column	Write	Terminate Burst; Start a new Write cycle	8, 9
	L	Н	L	Н	BS	Column	Read	Terminate Burst; Start the Read cycle	8, 9
	L	Н	Н	L	Х	X	Burst Termination	Terminate the Burst	
	L	Н	Н	Н	Х	X	No Operation	Continue the Burst	
	Н	Χ	Х	Х	Х	X	Device Deselect	Continue the Burst	
	L	L	L	L	Ol	P Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	Х	Х	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	Χ	Precharge	ILLEGAL	4
Read with	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
Auto Pre-	L	Н	L	L	BS	Column	Write	ILLEGAL	4
charge	L	Н	L	Н	BS	Column	Read	ILLEGAL	4
	L	Н	Н	L	Х	Х	Burst Termination	ILLEGAL	
	L	Н	Н	Н	Х	Х	No Operation	Continue the Burst	
	Н	Х	Х	Х	Х	Х	Device Deselect	Continue the Burst	
	L	L	L	L	Ol	Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	Х	X	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	X	Precharge	ILLEGAL	4
Write with	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
Auto Pre-	L	Н	L	L	BS	Column	Write	ILLEGAL	4
charge	L	Н	L	Н	BS	Column	Read	ILLEGAL	4
	L	Н	Н	L	Х	Х	Burst Termination	ILLEGAL	
	L	Н	Н	Н	Х	Х	No Operation	Continue the Burst	
	Н	Х	Х	Х	Х	Х	Device Deselect	Continue the Burst	
	L	L	L	L	Ol	⊃ Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	Х	X	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	Χ	Precharge	No Operation; Bank(s) idle after t <sub>RP</sub>	
	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
Precharging	L	Н	L	L	BS	Column	Write	ILLEGAL	4
	L	Н	L	Н	BS	Column	Read	ILLEGAL	4
	L	Н	Н	L	Х	Х	Burst Termination	No Operation; Bank(s) idle after t <sub>RP</sub>	
	L	Н	Н	Н	Х	Х	No Operation	No Operation; Bank(s) idle after t <sub>RP</sub>	
	Н	Х	Х	Χ	Χ	Χ	Device Deselect	No Operation; Bank(s) idle after t <sub>RP</sub>	

- 1. CKE is assumed to be active (high) in the previous cycle for all entries. The Current State is the state of the bank that the Command is being applied to.
- 2. All Banks must be idle; otherwise, it is an illegal action.
- 3. If CKE is active (high) the SDRAM will start the Auto (CBR) Refresh operation, if CKE is inactive (low) than the Self Refresh mode is entered.
- 4. The Current State refers to only one of the banks. If BS selects this bank then the action is illegal. If BS selects the bank not being referenced by the Current State then the action may be legal depending on the state of that bank.
- 5. If CKE is inactive (low) then the Power Down mode is entered; otherwise there is a No Operation.
- 6. The minimum and maximum Active time ( $t_{\text{RAS}}$ ) must be satisfied.
- 7. The  $\overline{RAS}$  to  $\overline{CAS}$  Delay  $(t_{RCD})$  must occur before the command is given.
- 8. Column address A10 is used to determine if the Auto Precharge function is activated.
- 9. The command must satisfy any bus contention, bus turn around, and/or write recovery requirements.
- 10. The command is illegal if the minimum bank to bank delay time (t<sub>RRD</sub>) is not satisfied.



### 64Mb Synchronous DRAM - Die Revision C

### Current State Truth Table (Part 3 of 4)(See note 1)

Current State						mmand		Action	Notes
Row Activating	CS	RAS	CAS	WE	A12,A13	A11 - A0	Description		140103
	L	L	L	L		P Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	Х	X	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	X	Precharge	ILLEGAL	4
	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4, 10
	L	Н	L	L	BS	Column	Write	ILLEGAL	4
Houvaing	L	Н	L	Н	BS	Column	Read	ILLEGAL	4
	L	Н	Н	L	Х	X	Burst Termination	No Operation; Row Active after t <sub>RCD</sub>	
	L	Н	Н	Н	Х	X	No Operation	No Operation; Row Active after t <sub>RCD</sub>	
	Н	Х	Х	Х	Х	Х	Device Deselect	No Operation; Row Active after t <sub>RCD</sub>	
	L	L	L	L	Ol	P Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	X	Х	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	X	Precharge	ILLEGAL	4
	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
Write Recovering	L	Н	L	L	BS	Column	Write	Start Write; Determine if Auto Precharge	9
recovering	L	Н	L	Н	BS	Column	Read	Start Read; Determine if Auto Precharge	9
	L	Н	Н	L	Х	X	Burst Termination	No Operation; Row Active after t <sub>DPL</sub>	
	L	Н	Н	Н	Х	Х	No Operation	No Operation; Row Active after t <sub>DPL</sub>	
	Н	Х	Х	Х	Х	Х	Device Deselect	No Operation; Row Active after t <sub>DPL</sub>	
	L	L	L	L	Ol	P Code	Mode Register Set	ILLEGAL	
	L	L	L	Н	Х	X	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	Χ	Precharge	ILLEGAL	4
Write Recoverina	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	4
with	L	Н	L	L	BS	Column	Write	ILLEGAL	4, 9
Auto Pre- charge	L	Н	L	Н	BS	Column	Read	ILLEGAL	4, 9
5.15.95	L	Н	Н	L	X	Χ	Burst Termination	No Operation; Precharge after t <sub>DPL</sub>	
	L	Н	Н	Н	Х	Х	No Operation	No Operation; Precharge after t <sub>DPL</sub>	
	Н	Х	Х	Х	Х	Х	Device Deselect	No Operation; Precharge after t <sub>DPL</sub>	

- 1. CKE is assumed to be active (high) in the previous cycle for all entries. The Current State is the state of the bank that the Command is being applied to.
- 2. All Banks must be idle; otherwise, it is an illegal action.
- 3. If CKE is active (high) the SDRAM will start the Auto (CBR) Refresh operation, if CKE is inactive (low) than the Self Refresh mode is entered.
- 4. The Current State refers to only one of the banks. If BS selects this bank then the action is illegal. If BS selects the bank not being referenced by the Current State then the action may be legal depending on the state of that bank.
- 5. If CKE is inactive (low) then the Power Down mode is entered; otherwise there is a No Operation.
- 6. The minimum and maximum Active time  $(t_{\mathsf{RAS}})$  must be satisfied.
- 7. The  $\overline{RAS}$  to  $\overline{CAS}$  Delay ( $t_{RCD}$ ) must occur before the command is given.
- 8. Column address A10 is used to determine if the Auto Precharge function is activated.
- 9. The command must satisfy any bus contention, bus turn around, and/or write recovery requirements.
- 10. The command is illegal if the minimum bank to bank delay time (t<sub>RRD</sub>) is not satisfied.



### Current State Truth Table (Part 4 of 4)(See note 1)

Current State	Command							Action	Notes
	CS	RAS	CAS	WE	A12,A13	A11 - A0	Description	Action	notes
Refreshing	L	L	L	L	OP Code		Mode Register Set	ILLEGAL	
	L	L	L	Н	Х	X	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	X	Precharge	ILLEGAL	
	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	
	L	Н	L	L	BS	Column	Write	ILLEGAL	
	L	Н	L	Н	BS	Column	Read	ILLEGAL	
	L	Н	Н	L	Х	X	Burst Termination	No Operation; Idle after t <sub>RC</sub>	
	L	Н	Н	Н	Х	Х	No Operation	No Operation; Idle after t <sub>RC</sub>	
	Н	Х	Х	Χ	Х	Х	Device Deselect	No Operation; Idle after t <sub>RC</sub>	
Mode Register Accessing	L	L	L	L	OP Code		Mode Register Set	ILLEGAL	
	L	L	L	Н	X	Х	Auto or Self Refresh	ILLEGAL	
	L	L	Н	L	BS	X	Precharge	ILLEGAL	
	L	L	Н	Н	BS	Row Address	Bank Activate	ILLEGAL	
	L	Н	L	L	BS	Column	Write	ILLEGAL	
	L	Н	L	Н	BS	Column	Read	ILLEGAL	
	L	Н	Н	L	Х	X	Burst Termination	ILLEGAL	
	L	Н	Н	Н	Х	X	No Operation	No Operation; Idle after two clock cycles	
	Н	Χ	Χ	Χ	Χ	X	Device Deselect	No Operation; Idle after two clock cycles	

- 1. CKE is assumed to be active (high) in the previous cycle for all entries. The Current State is the state of the bank that the Command is being applied to.
- 2. All Banks must be idle; otherwise, it is an illegal action.
- 3. If CKE is active (high) the SDRAM will start the Auto (CBR) Refresh operation, if CKE is inactive (low) than the Self Refresh mode is entered.
- 4. The Current State refers to only one of the banks. If BS selects this bank then the action is illegal. If BS selects the bank not being referenced by the Current State then the action may be legal depending on the state of that bank.
- 5. If CKE is inactive (low) then the Power Down mode is entered; otherwise there is a No Operation.
- 6. The minimum and maximum Active time  $(t_{\text{RAS}})$  must be satisfied.
- 7. The  $\overline{RAS}$  to  $\overline{CAS}$  Delay  $(t_{RCD})$  must occur before the command is given.
- 8. Column address A10 is used to determine if the Auto Precharge function is activated.
- 9. The command must satisfy any bus contention, bus turn around, and/or write recovery requirements.
- 10. The command is illegal if the minimum bank to bank delay time (t<sub>RRD</sub>) is not satisfied.

# **Absolute Maximum Ratings**

Symbol	Parameter	Rating	Units	Notes
$V_{DD}$	Power Supply Voltage	-0.3 to +4.6	V	1
$V_{DDQ}$	Power Supply Voltage for Output	-0.3 to +4.6	V	1
$V_{IN}$	Input Voltage	-0.3 to V <sub>DD</sub> +0.3	V	1
V <sub>OUT</sub>	Output Voltage	-0.3 to V <sub>DD</sub> +0.3	V	1
T <sub>A</sub>	Operating Temperature (ambient)	0 to +70	°C	1
T <sub>STG</sub>	Storage Temperature	-55 to +125	°C	1
$P_{D}$	Power Dissipation	1.0	W	1
I <sub>OUT</sub>	Short Circuit Output Current	50	mA	1

Stresses greater than those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a
stress rating only and functional operation of the device at these or any other conditions above those indicated in the operational
sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.



## Recommended DC Operating Conditions ( $T_A = 0 \text{ to } 70^{\circ}\text{C}$ )

Cumbal	Daramatar		Units	Notes		
Symbol	Parameter	Min. Typ.		Max.	Units	Notes
V <sub>DD</sub>	Supply Voltage	3.0	3.3	3.6	V	1
$V_{DDQ}$	Supply Voltage for Output	3.0	3.3	3.6	V	1
V <sub>IH</sub>	Input High Voltage	2.0	_	V <sub>DD</sub> + 0.3	V	1, 2
V <sub>IL</sub>	Input Low Voltage	-0.3	_	0.8	V	1, 3

- $\begin{array}{ll} \text{1. All voltages referenced to $V_{SS}$ and $V_{SSQ}$.} \\ \text{2. $V_{IH}$ (max) = $V_{DD}\!/V_{DDQ}$ + 1.2V for pulse width $\leq 5 \text{ns.}} \\ \text{3. $V_{IL}$ (min) = $V_{SS}\!/V_{SSQ}$ 1.2V for pulse width $\leq 5 \text{ns.}} \\ \end{array}$

## **Capacitance** ( $T_A = 25^{\circ}C$ , f = 1MHz, $V_{DD} = 3.3V \pm 0.3V$ )


Symbol	Parameter	Min.	Тур	Max.	Units
C	Input Capacitance (A0-A11, BS0, BS1, CS, RAS, CAS, WE, CKE, DQM)	2.5	3.0	3.8	pF
C <sub>I</sub>	Input Capacitance (CLK)	2.5	2.8	3.5	pF
c <sub>o</sub>	Output Capacitance (DQ0 - DQ15)	4.0	4.5	6.5	pF



## **DC Electrical Characteristics** ( $T_A = 0 \text{ to } +70^{\circ}\text{C}, V_{DD} = 3.3\text{V} \pm 0.3\text{V}$ )

Symbol	Parameter	Min.	Max.	Units
I <sub>I(L)</sub>	Input Leakage Current, any input $(0.0V \le V_{IN} \le V_{DD})$ , All Other Pins Not Under Test = 0V	-1	+1	μΑ
I <sub>O(L)</sub>	Output Leakage Current $(D_{OUT}$ is disabled, $0.0V \le V_{OUT} \le V_{DDQ})$	-1	+1	μΑ
V <sub>OH</sub>	Output Level (LVTTL) Output "H" Level Voltage (IOUT = -2.0mA)	2.4	_	V
V <sub>OL</sub>	Output Level (LVTTL) Output "L" Level Voltage (I <sub>OUT</sub> = +2.0mA)	_	0.4	V

## **DC Output Load Circuit**

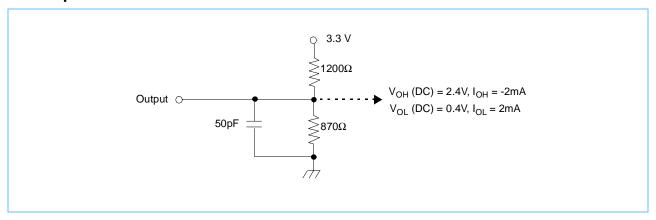



## Operating, Standby, and Refresh Currents ( $T_A = 0 \text{ to } +70^{\circ}\text{C}, V_{DD} = 3.3\text{V} \pm 0.3\text{V}$ )

Parameter	Sumbol	Test Condition			Spe	eed		Units	Notes
Parameter	Symbol	rest Condition		-68	-75A	-260	-360	Units	Notes
Operating Current	I <sub>CC1</sub>	1 bank operation $t_{RC} = t_{RC}(min), t_{CK} = min$ Active-Precharge comm cycling without burst ope	and	75	75	70	70	mA	1, 2
Precharge Standby Cur-	I <sub>CC2P</sub>	$\frac{\text{CKE} \leq \text{V}_{\text{IL}}(\text{max}), \ t_{\text{CK}} = \text{n}}{\text{CS}} = \text{V}_{\text{IH}}(\text{min})$	nin,	1	1	1	1	mA	7
rent in Power Down Mode	I <sub>CC2PS</sub>	$\frac{\text{CKE} \leq \text{V}_{\text{IL}}(\text{max}), \ t_{\text{CK}} = \text{Ir}}{\text{CS}} = \text{V}_{\text{IH}}(\text{min})$	nfinity,	1	1	1	1	mA	7
Precharge Standby Cur- rent in Non-Power Down			nin,	40	35	25	25	mA	4
Mode	I <sub>CC2NS</sub>	$CKE \ge V_{IH}(min), t_{CK} = Ir$	ifinity,	6	6	6	6	mA	6
No Operating Current	I <sub>ССЗN</sub>	$\frac{\text{CKE} \ge \text{V}_{\text{IH}}(\text{min}), \ \text{t}_{\text{CK}} = \text{m}}{\text{CS}} = \text{V}_{\text{IH}}(\text{min})$	nin,	45	40	30	30	mA	4
(Active state: 4 bank)	I <sub>CC3P</sub>	$CKE \le V_{IL}(max), t_{CK} = n$	nin,	3	3	3	3	mA	5, 7
Operating Current (Burst Mode)	I <sub>CC4</sub>	t <sub>CK</sub> = min, Read/ Write command of Multiple banks active, ga data, BL = 4		135	120	90	90	mA	2, 3
Auto (CBR) Refresh Current	I <sub>CC5</sub>	$t_{CK} = min, t_{RC} = t_{RC}(mir$ CBR command cycling	n)	150	145	140	140	mA	7
Calf Dafragh Current	1	CKE ≤ 0.2V	SP	1	1	1	1	mA	-
Self Refresh Current	I <sub>CC6</sub>	UNE ≥ U.ZV	LP	400	400	400	400	μΑ	7

<sup>1.</sup> These parameters depend on the cycle rate and are measured with the cycle determined by the minimum value of  $t_{CK}$  and  $t_{RC}$ . Input signals are changed up to three times during  $t_{RC}$  (min).


- 2. The specified values are obtained with the output open.
- 3. Input signals are changed once during  $t_{CK}(min)$ .
- 4. Input signals are changed once during three clock cycles.
- 5. Active Standby Current will be higher if Clock Suspend is entered during a burst read cycle (add 1mA per DQ).
- 6. Input signals are stable.
- 7. SP: Standard power; LP: Low power.



## AC Characteristics ( $T_A = 0 \text{ to } +70^{\circ}\text{C}, V_{DD} = 3.3\text{V} \pm 0.3\text{V}$ )

- An initial pause of 200
  μs, with DQM and CKE held high, is required after power-up. A Precharge All Banks command must be given followed by a minimum of eight Auto (CBR) Refresh cycles before or after the Mode Register Set operation.
- 2. The Transition time is measured between  $V_{IH}$  and  $V_{IL}$  (or between  $V_{IL}$  and  $V_{IH}$ )
- 3. In addition to meeting the transition rate specification, the clock and CKE must transit between  $V_{IH}$  and  $V_{IH}$  (or between  $V_{IL}$  and  $V_{IH}$ ) in a monotonic manner.
- 4. Load Circuit A: AC timing tests have  $V_{IL} = 0.4 \text{ V}$  and  $V_{IH} = 2.4 \text{ V}$  with the timing referenced to the 1.40V crossover point
- 5. Load Circuit A: AC measurements assume  $t_T = 1.0$ ns.
- 6. Load Circuit B: AC timing tests have  $V_{IL} = 0.8 \text{ V}$  and  $V_{IH} = 2.0 \text{ V}$  with the timing referenced to the 1.40V crossover point
- 7. Load Circuit B: AC measurements assume  $t_T = 1.2$ ns.

## **AC Output Diagrams**

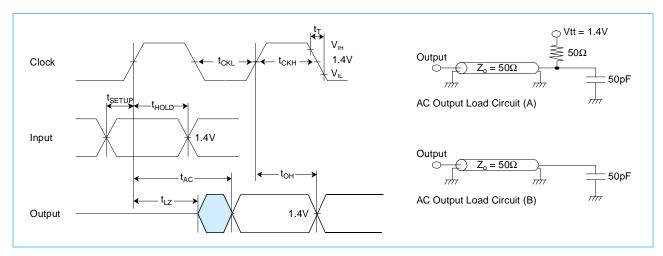

## Clock and Clock Enable Parameters

Symbol	Parameter	-(	68	-7	5A	-2	60	-360		Units	Notes
Symbol	Farameter	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Units	ivotes
t <sub>CK3</sub>	Clock Cycle Time, CAS Latency = 3	6.67	1000	7.5	1000	10	1000	10	1000	ns	
t <sub>CK2</sub>	Clock Cycle Time, CAS Latency = 2	_	_	_	_	10	1000	15	1000	ns	
t <sub>AC3 (A)</sub>	Clock Access Time, CAS Latency = 3	_	6	_	_	_	_	_	_	ns	1
t <sub>AC2 (A)</sub>	Clock Access Time, CAS Latency = 2	_	_	_	_	_	_	_	_	ns	1
t <sub>AC3 (B)</sub>	Clock Access Time, CAS Latency = 3	_	_	_	5.4	_	6	_	6	ns	2
t <sub>AC2 (B)</sub>	Clock Access Time, CAS Latency = 2	_	_	_	_	_	6	_	9	ns	2
t <sub>CKH</sub>	Clock High Pulse Width	3	_	2.5	_	3	_	3	_	ns	
t <sub>CKL</sub>	Clock Low Pulse Width	3	_	2.5	_	3	_	3	_	ns	
t <sub>CES</sub>	Clock Enable Set-up Time	2	_	1.5	_	2	_	2	_	ns	
t <sub>CEH</sub>	Clock Enable Hold Time	1	_	0.8	_	1	_	1	_	ns	
t <sub>SB</sub>	Power down mode Entry Time	0	6.67	0	7.5	0	10	0	10	ns	
t <sub>T</sub>	Transition Time (Rise and Fall)	0.5	10	0.5	10	0.5	10	0.5	10	ns	

- 1. Access time is measured at 1.4V. See AC Characteristics: notes 1, 2, 3, 4, 5 and load circuit A.
- 2. Access time is measured at 1.4V. See AC Characteristics: notes 1, 2, 3, 6, 7 and load circuit B.



## **Common Parameters**

Courada ad	Danamatan	-6	88	-7	5A	-2	60	-360		l laita	Natas
Symbol	Parameter	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Units	Notes
t <sub>CS</sub>	Command Setup Time	2	_	1.5	_	2	_	2	_	ns	
t <sub>CH</sub>	Command Hold Time	1	_	0.8	_	1	_	1	_	ns	
t <sub>AS</sub>	Address and Bank Select Set-up Time	2	_	1.5	_	2	_	2	_	ns	
t <sub>AH</sub>	Address and Bank Select Hold Time	1	_	0.8	_	1	_	1	_	ns	
t <sub>RCD</sub>	RAS to CAS Delay	20	_	20	_	20	_	20	_	ns	1
t <sub>RC</sub>	Bank Cycle Time	66.7	_	67.5	_	70	_	70	_	ns	1
t <sub>RAS</sub>	Active Command Period	46.7	100K	45	100K	50	100K	50	100K	ns	1
t <sub>RP</sub>	Precharge Time	20	_	20	_	20	_	20	_	ns	1
t <sub>RRD</sub>	Bank to Bank Delay Time	13.3	_	15	_	20	_	20	_	ns	1
t <sub>CCD</sub>	CAS to CAS Delay Time	1	_	1	_	1	_	1	_	CLK	

<sup>1.</sup> These parameters account for the number of clock cycle and depend on the operating frequency of the clock, as follows: the number of clock cycles = specified value of timing / clock period (count fractions as a whole number).

## **Mode Register Set Cycle**

Symbol	Dorometer	-68		-75A		-260		-360		Units	Notes
Symbol	nbol Parameter		Max.	Min.	Max.	Min.	Max.	Min.	Max.	Units	notes
t <sub>RSC</sub>	Mode Register Set Cycle Time	2	_	2	_	2	_	2	_	CLK	1

<sup>1.</sup> These parameters account for the number of clock cycles and depend on the operating frequency of the clock, as follows: the number of clock cycles = specified value of timing / clock period (count fractions as a whole number).



## **Read Cycle**

Cumbal	Parameter	-68		-75A		-260		-360		Llaita	Notes
Symbol	Parameter	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Units	notes
+.	Data Out Hold Time	2.5	_	_	_	2.5	_	2.5	_	ns	1
tон	Data Out Hold Time	_	_	2.7	_	3	_	3	_	ns	2, 4
t <sub>LZ</sub>	Data Out to Low Impedance Time	0	_	0	_	0	_	0	_	ns	
t <sub>HZ3</sub>	Data Out to High Impedance Time	3	6	3	5.4	3	6	3	6	ns	3
t <sub>HZ2</sub>	Data Out to High Impedance Time	3	6	_	_	3	6	3	8	ns	3
t <sub>DQZ</sub>	DQM Data Out Disable Latency	2	_	2	_	2	_	2	_	CLK	

- 1. AC Output Load Circuit A.
- 2. AC Output Load Circuit B.
- 3. Referenced to the time at which the output achieves the open circuit condition, not to output voltage levels.
- 4. Data Out Hold Time with no load must meet 1.8ns (-75A).

## **Refresh Cycle**

Symbol	Parameter	-68		-75A		-260		-360		Units	Notes
Symbol	Parameter		Max.	Min.	Max.	Min.	Max.	Min.	Max.	UTIILS	Notes
t <sub>REF</sub>	Refresh Period	_	64	_	64	_	64	_	64	ms	1
t <sub>SREX</sub>	Self Refresh Exit Time	10		10		10		10		ns	

<sup>1. 4096</sup> auto refresh cycles.

## **Write Cycle**

Cumbal	Parameter -	-6	88	-75A		-260		-360		Units
Symbol	Falametei		Max.	Min.	Max.	Min.	Max.	Min.	Max.	Units
t <sub>DS</sub>	Data In Set-up Time	2	_	1.5	_	2	_	2	_	ns
t <sub>DH</sub>	Data In Hold Time	1	_	0.8	_	1	_	1	_	ns
t <sub>DPL</sub>	Data input to Precharge	13.3	_	15	_	15	_	15	_	ns
t <sub>DAL3</sub>	Data In to Active Delay CAS Latency = 3	5	_	5	_	5	_	5	_	CLK
t <sub>DAL2</sub>	Data In to Active Delay CAS Latency = 2	_	_	_	_	4	_	3	_	CLK
t <sub>DQW</sub>	DQM Write Mask Latency	0	_	0	_	0	_	0	_	CLK



## **Clock Frequency and Latency**

Symbol	Parameter	-68	-75A	-2	60	-3	60	Units
f <sub>CK</sub>	Clock Frequency	150	133	100	100	100	66	MHz
t <sub>CK</sub>	Clock Cycle Time	6.67	7.5	10	10	10	15	ns
t <sub>AA</sub>	CAS Latency	3	3	3	2	3	2	CLK
t <sub>RP</sub>	Precharge Time	3	3	2	2	2	2	CLK
t <sub>RCD</sub>	RAS to CAS Delay	3	3	2	2	2	2	CLK
t <sub>RC</sub>	Bank Cycle Time	10	9	7	7	7	6	CLK
t <sub>RAS</sub>	Minimum Bank Active Time	7	6	5	5	5	4	CLK
t <sub>DPL</sub>	Data In to Precharge	2	2	2	2	2	1	CLK
t <sub>DAL</sub>	Data In to Active/Refresh	5	5	5	4	5	3	CLK
t <sub>RRD</sub>	Bank to Bank Delay Time	2	2	2	2	2	2	CLK
t <sub>CCD</sub>	CAS to CAS Delay Time	1	1	1	1	1	1	CLK
$t_{WL}$	Write Latency	0	0	0	0	0	0	CLK
t <sub>DQW</sub>	DQM Write Mask Latency	0	0	0	0	0	0	CLK
t <sub>DQZ</sub>	DQM Data Disable Latency	2	2	2	2	2	2	CLK
t <sub>CSL</sub>	Clock Suspend Latency	1	1	1	1	1	1	CLK




Timing Diagrams	Page
AC Parameters for Write Timing	45
AC Parameters for Read Timing (3/3/3), BL=4	46
AC Parameters for Read Timing (2/2/2), BL=2	47
AC Parameters for Read Timing (3/2/2), BL=2	48
AC Parameters for Read Timing (3/3/3), BL=2	49
Mode Register Set	50
Power on Sequence and Auto Refresh (CBR)	51
Clock Suspension / DQM During Burst Read	52
Clock Suspension / DQM During Burst Write	53
Power Down Mode and Clock Suspend	54
Auto Refresh (CBR)	55
Self Refresh (Entry and Exit)	56
Random Row Read (Interleaving Banks) with Precharge, BL=8	57
Random Row Read (Interleaving Banks) with Auto-precharge, BL=8	58
Random Row Write (Interleaving Banks) with Auto-Precharge, BL=8	59
Random Row Write (Interleaving Banks) with Precharge, BL=8	60
Read/Write Cycle	61
Interleaved Column Read Cycle	62
Auto Precharge after a Read Burst, BL=4	63
Auto Precharge after a Write Burst, BL=4	64
Burst Read and Single Write Operation	65
Full Page Burst Read and Single Write Operation	66
CS Function (Only CS signal needs to be asserted at minimum rate)	67



## AC **Parameters for Write Timing**

|||---||

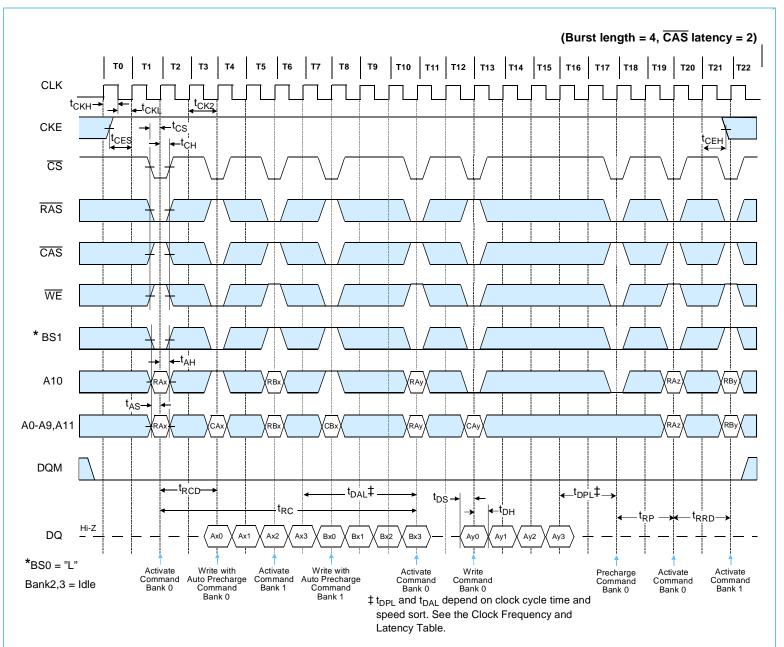

# AC Parameters for Read Timing (3/3/3)

## (Burst length = 4, $\overline{CAS}$ latency = 3; $t_{RCD}$ , $t_{RP}$ = 3) T0 T2 Т3 T4 T5 **T6 T7** T10 T11 T12 T13 CLK t<sub>CK3</sub> Begin Auto Precharge Bank 0 Begin Auto Precharge Bank 1 CKE CS RAS CAS WE \* BS1 A10 RBx RAx RAy A0-A9,A11 RAx CAx СВх RBx RAy t<sub>RRD</sub> -t<sub>RAS</sub> $t_{RP}$ DQM t<sub>RC</sub> $t_{AC3}$ t<sub>OH</sub> t<sub>RCD</sub> Hi-Z DQ Bx1 Bx2 Ax0 Ax1 АхЗ Bx0 Ax2 \* BS0 = "L" Read with Auto Precharge Command Bank 1 Activate Command Read with Auto Precharge Command Activate Activate Bank2,3 = IdleCommand Command Bank 0 Bank 1 Bank 0 Bank 0

Page 46 of 71

Ax1

Read with Auto Precharge

Command Bank 1

Activate

Command

Bank 1

(Burst length = 2,  $\overline{CAS}$  latency = 2;  $t_{RCD}$ ,  $t_{RP}$  = 2)

Bx0

Bx1

Activate Command

Bank 0

IBMN364164 IBMN364804 IBMN364404 **64Mb Synchronous DRAM - Die Revision C** 

DQ

\* BS0 = "L"

Bank2,3 = Idle

Activate

Command


Bank 0

Read with Auto Precharge

Command` Bank 0

|||||||||

# AC Parameters for Read Timing (3/2/2)

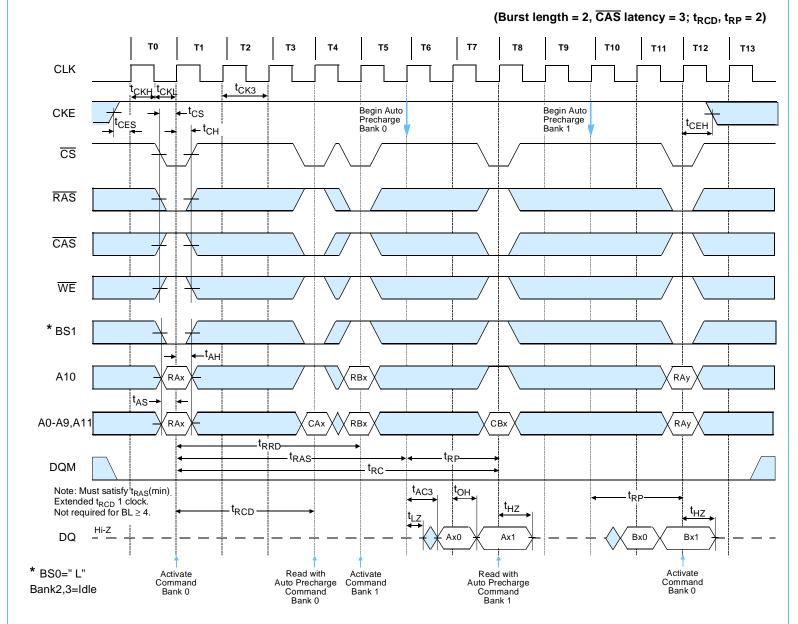


## IBMN364164 IBMN364804 IBMN364404 **64Mb Synchronous DRAM - Die Revision C**

## Parameters for Read Timing (3/3/3)


AC

|||----||

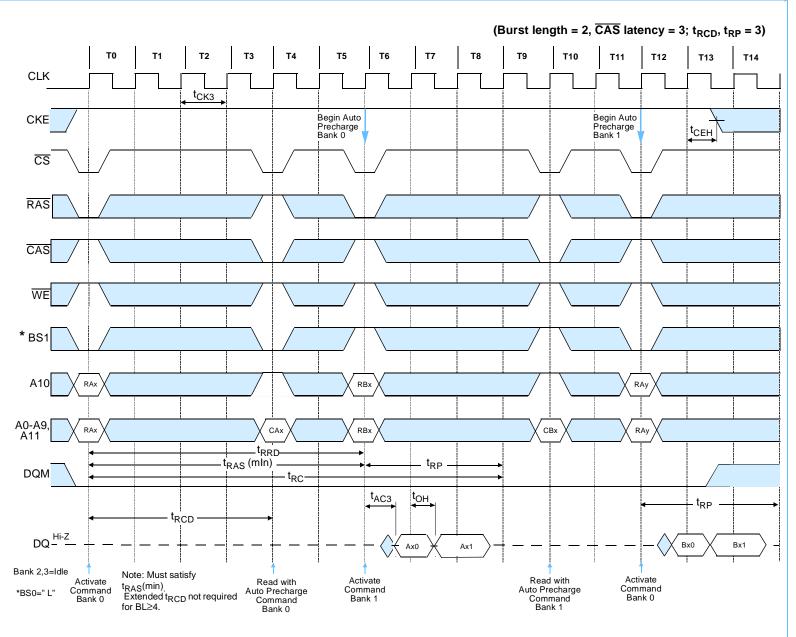




## **Mode Register Set**

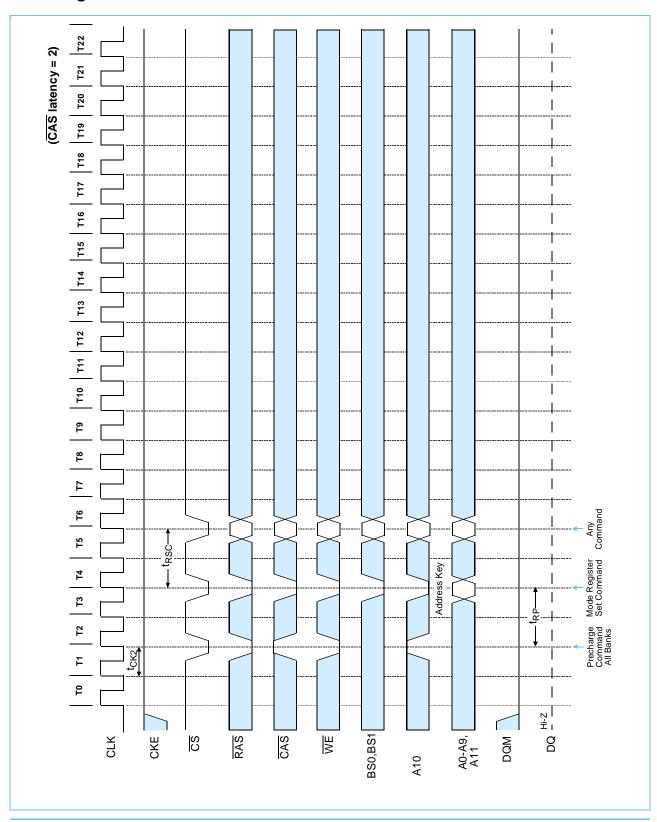


[[....]]

## IBMN364164 IBMN364804 IBMN364404 64Mb Synchronous DRAM - Die Revision C

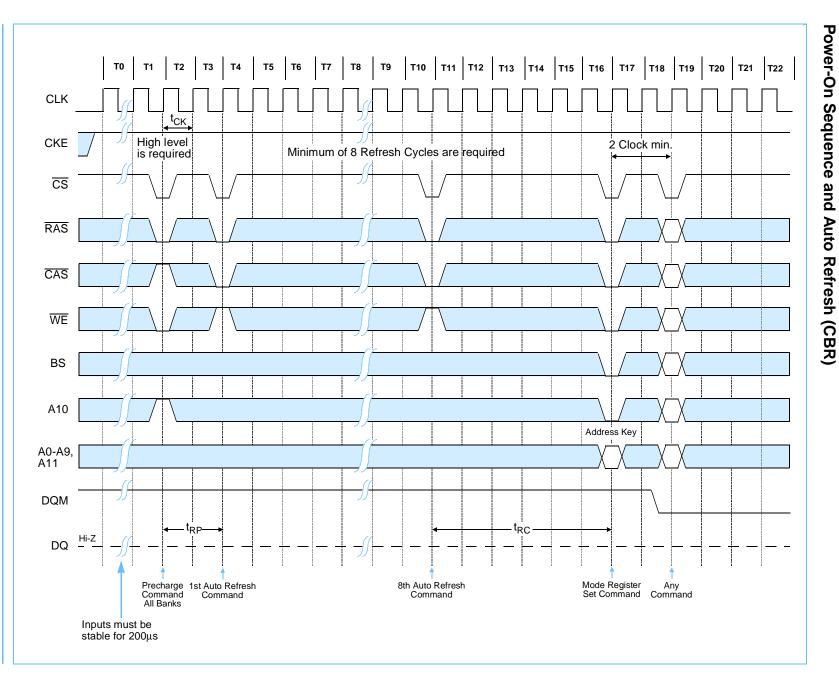


# Clock Suspension / DQM During Burst Read

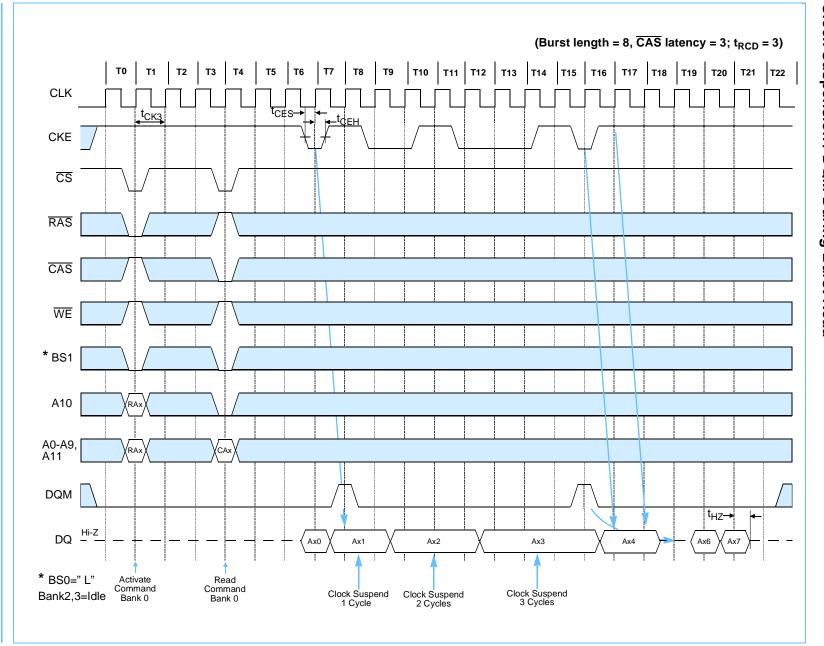


Page 52 of 71

## ||m||

# Clock Suspension / DQM During Burst Write

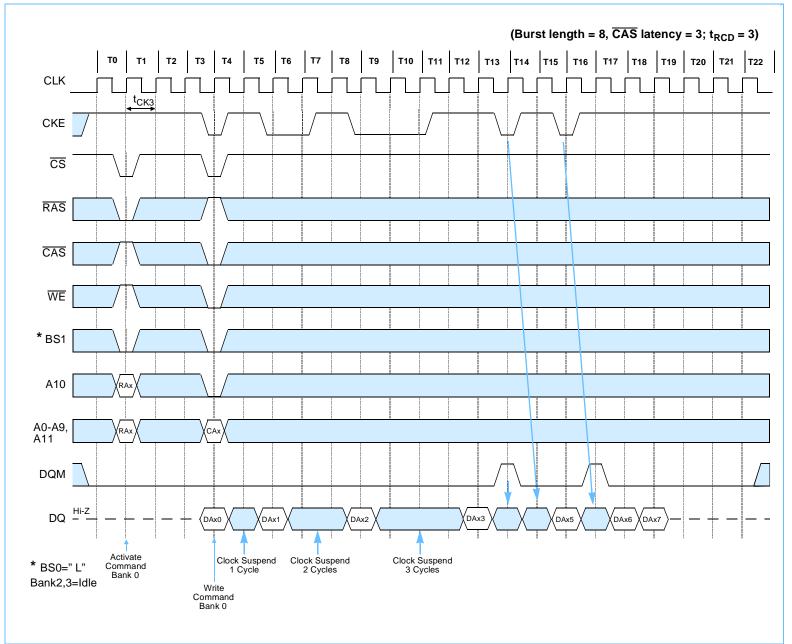


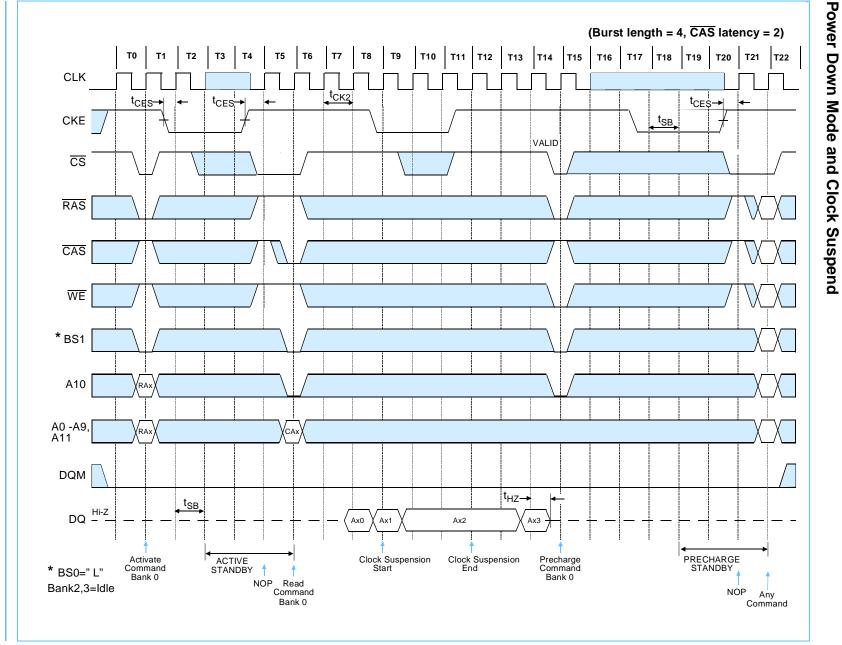

Page 54 of 71




## Auto Refresh (CBR)

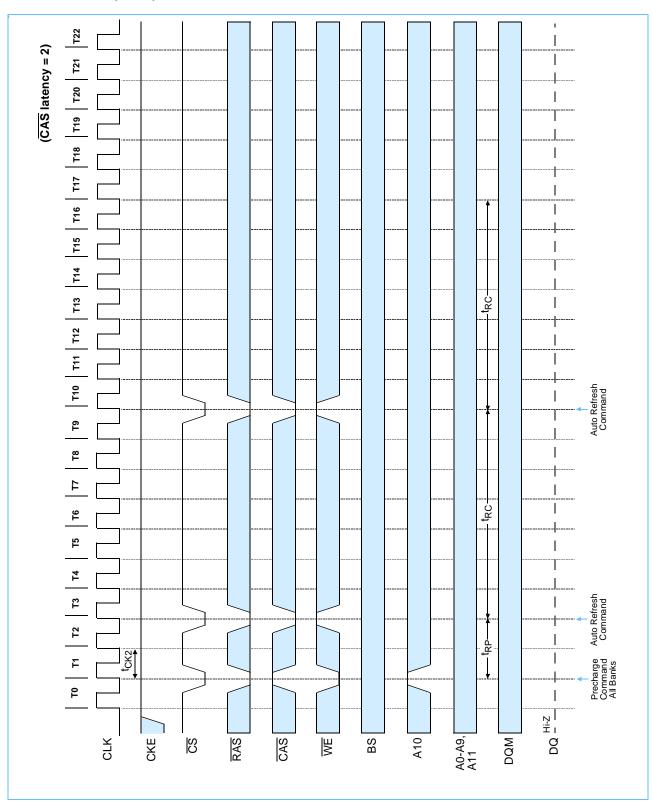


||mn||

## Self Refresh (Entry and Exit)

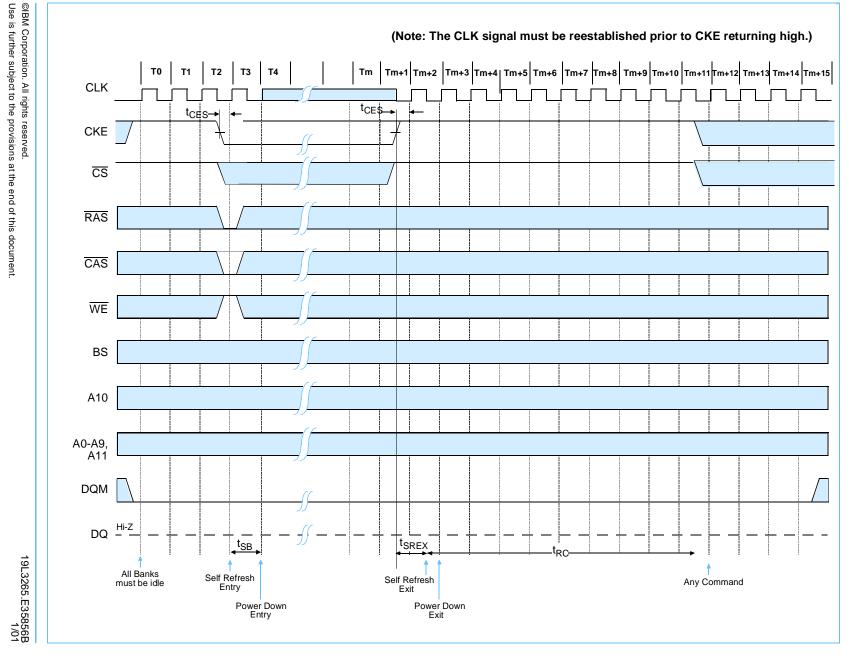

Page 56 of 71

# Random Row Read (Interleaving Banks) with Precharge

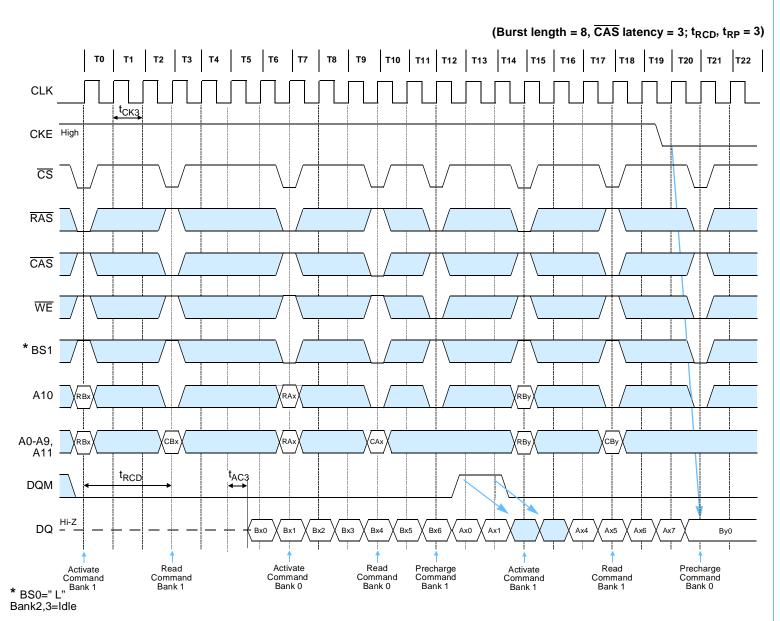


(Burst length =  $8\overline{CAS}$  latency = 3;  $t_{RCD}$ ,  $t_{RP}$  = 3)

|||----||

Page 58 of 71

## ©IBM Corporation. All rights reserved. Use is further subject to the provisions at the end of this document.

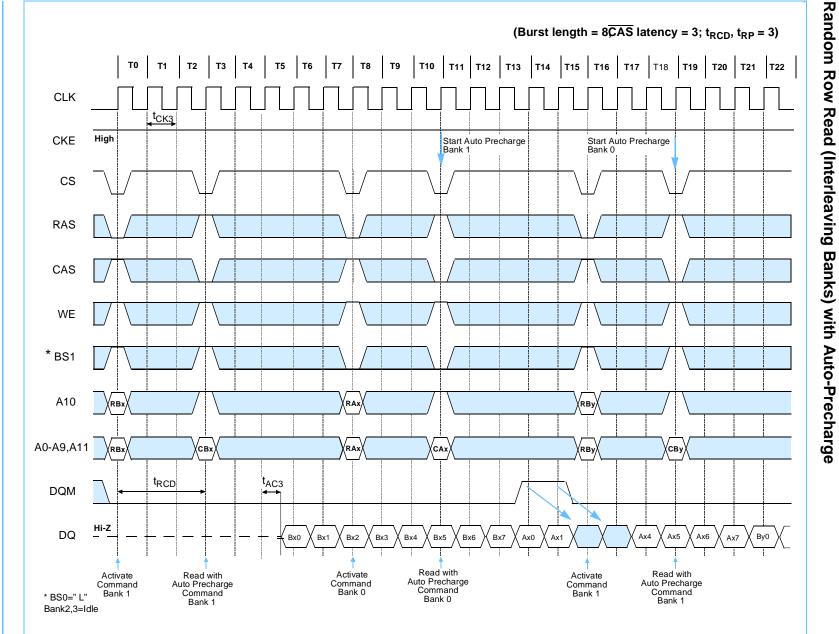





|||---||

## IBMN364164 IBMN364804 IBMN364404 64Mb Synchronous DRAM - Die Revision C

Random Row Write (Interleaving Banks) with Auto-Precharge

t<sub>DAL</sub>‡





CS

RAS

CAS

\* BS1

(CAX (RBx A0-A9,A11 t<sub>RCD</sub> DQM

> Hi-Z DAx0 DAx1 Write with Auto Precharge Activate Command Command

Bank 0

\* BS0=" L" Bank2,3=Idle

DQ

Bank 0 Bank 0 ‡ Number of clocks depends on clock cycle time and speed sort. See the Clock Frequency and Latency table. Bank may be reactivated at the completion of t<sub>DAL</sub>.

RAy

RAy

DBx5

Activate

Command

DBx6

DBx7

DAy0

Write with Auto Precharge

Command

DBx4

 $t_{DAL}$ ‡

DBx2

DBx3

Write with Auto Precharge Command Bank 1

СВх

DBx0

DBx1

DAx7

Command Bank 1


RBx

DAx5

Activate

DAx6


# Random Row Write (Interleaving Banks) with Precharge

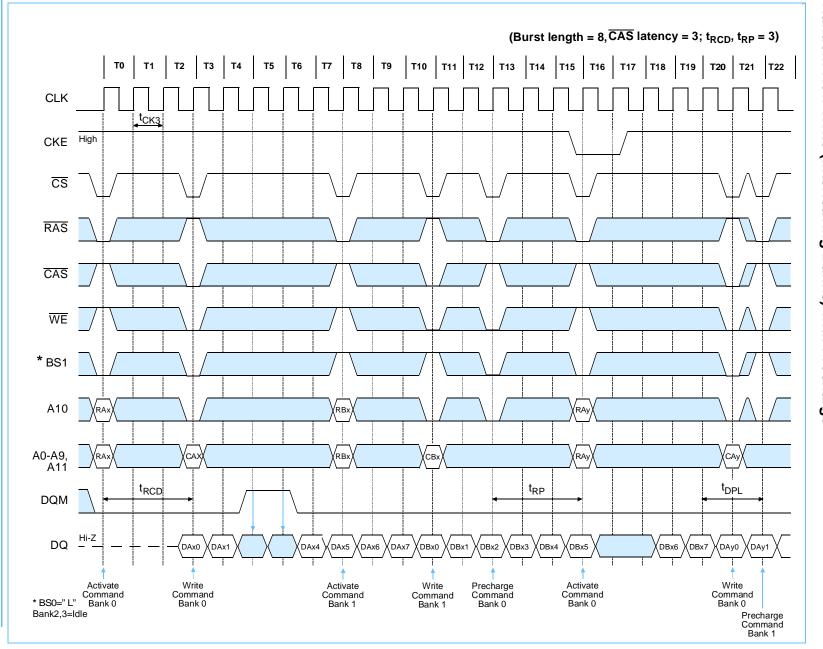

Page 60 of 71



||m||

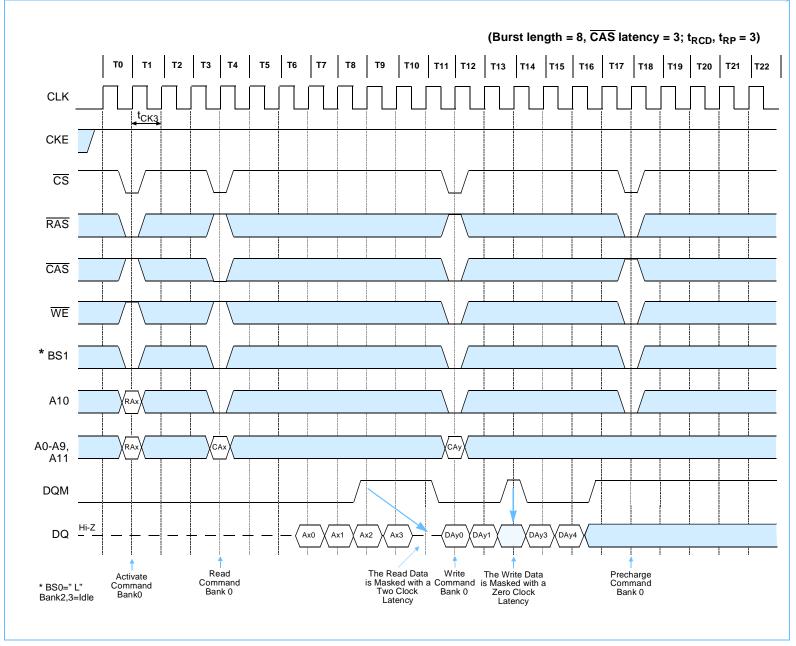

Interleaved Column Read Cycle

## CLK t<sub>CK3</sub> CKE CS

T4

T5

Т6

**T7** 

**T8** 

Т9


T10

T11 T12 T13 T14 T15

T1


T2


Т3





Read

Activate Command Bank 1











Bx0



Bx1

CBz



By0

(CAy

By1

Read with Bank 0

Bz0

Precharge Command Bank 1

Bz1

Ay0

Ay1

Ay2

АуЗ

(Burst length = 4,  $\overline{CAS}$  latency = 3;  $t_{RCD}$ ,  $t_{RP}$  = 3)

T16 T17 T18 T19 T20 T21 T22

Start Auto Precharge Bank 0



Page 62 of 71

A10

A0-A9, A11

DQM

DQ -'''

\* BS0="L"

Bank2,3=Idle


(RAx

(RAx)

Activate

Command

 $\|\mathbf{u}_{\mathbf{u}}\|$ 

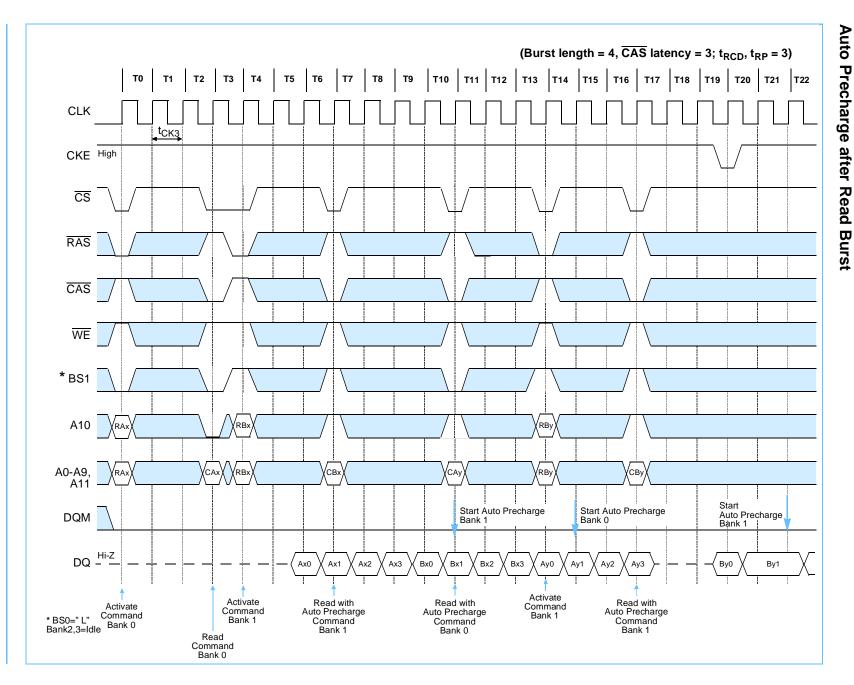

|||----||

## CLK CKE High

CS

RAS

\* BS1

Write

Command

Bank 0

Activate

Command

Bank 0

\* BS0=" L"

Bank2,3=Idle

Write with

Auto Precharge

Command`


Bank 1

Activate

Command

Bank 1

## Auto Precharge after Write Burst (Burst length = 4, $\overline{CAS}$ latency = 2) T0 T2 ТЗ T5 **T7** T8 Т9 T1 **T6** T10 T11 T12 T13 T14 T15 T16 T18 T19 T20 T21 T22 \_t<sub>CK2</sub>

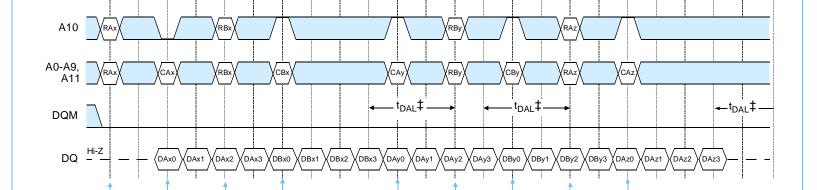

Write with

Auto Precharge

Command

Bank 0

Activate

Command

Bank 1

Write with

Auto Precharge

Command

Bank 1

‡ Number of clocks depends on clock cycle and speed sort. See the Clock Frequency and Latency table.

Bank may be reactivated at the completion of tDAL

Activate

Bank 0

Command

Write with


Auto Precharge

Command`


Bank 0

IBMN364164 IBMN364804 IBMN364404 **64Mb Synchronous DRAM - Die Revision C** 

[[....]]

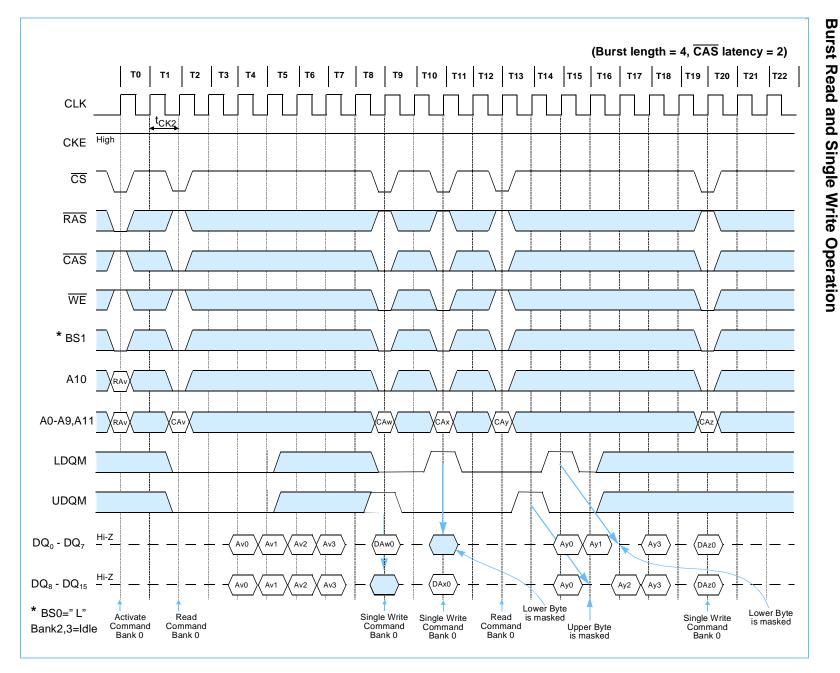


# Full Page Burst Read and Single Write Operation

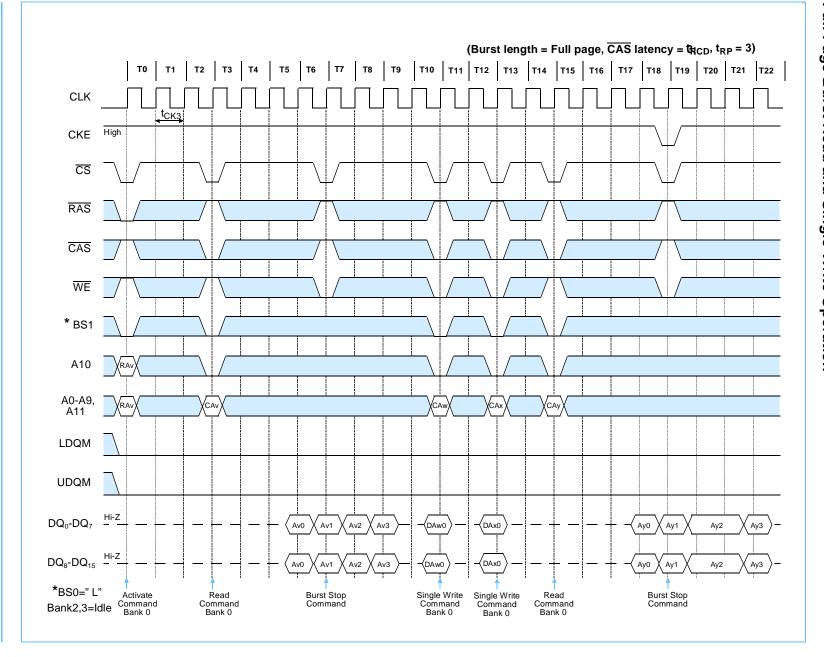

Page 66 of 71


# Function (Only $\overline{\text{CS}}$ signal needs to be asserted at minimum rate)

CS

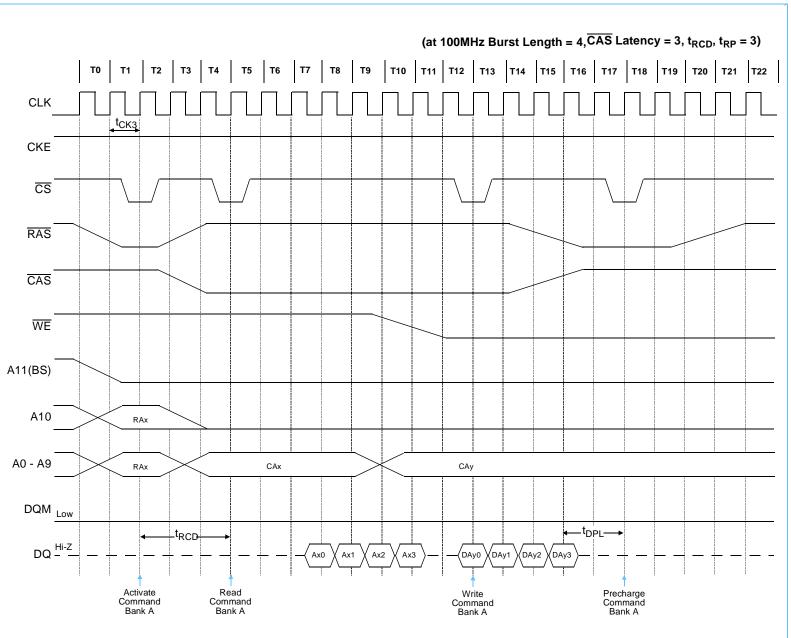



## Package Dimensions (400mil; 54 lead; Thin Small Outline Package)

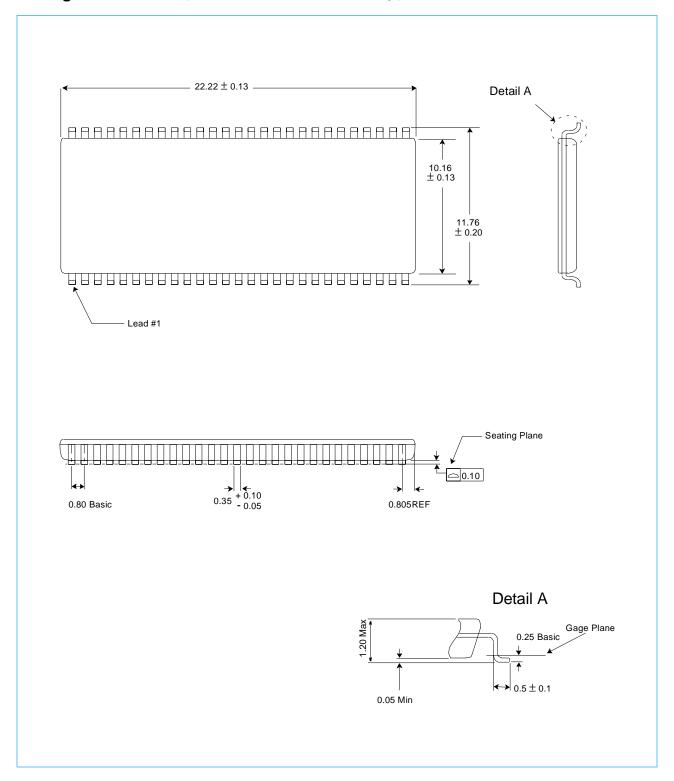



## **Revision Log**

Revision	Contents of Modification			
11/21/97	Initial release.	Initial release.		
4/17/98	page 1	Change PN designations: -322 -> -360, -222 -> -260. Also, page 19-page 23, page 25, page 39-page 42.		
	page 1	Add 2 high stack (x4). Also, page 9, page 27, page 31, page 37-page 39.		
	page 28	Clarify Power Down Mode.		
	page 39	Add low power current specification. Also, page 1.		
	page 40-page 42	Modify sorts/timing information: 1) separate -80 sort added and/or 2) 322 (360) and 222 (260) sorts modified (t <sub>CK3</sub> , t <sub>SB</sub> , t <sub>RAS</sub> , t <sub>RRD</sub> , t <sub>RSC</sub> , t <sub>DPL3</sub> (t <sub>CK3</sub> changed from 8ns 10ns); t <sub>HZ</sub> ). Also, page 1, page 4, page 10, page 39.		
	page 1	Add -68; changed $CL = 3$ timings (-260, -360) and $CL = 2$ timings (-260) to encompass JEDEC 1 MHz requirements. Also, page 40-page 42.		
	page 22	Add note for -68 t <sub>DPL</sub> (2 clocks) / update wording. Also, page 26, page 60.		
5/1/98	page 39	Update currents based on timing changes.		
G, iiee	page 43	Add -68; update -260, -360 (125MHz), remove -10 CL = 1.		
	page 46	Correct CKE. Also, page 50, page 52.		
	page 49	Add note: t <sub>RAS</sub> (min).		
5/14/98	page 37	Include minimum capacitance specification, update maximum for CLK.		
5/29/98	page 19	Clarify Read with auto-precharge description.		
	page 1	Change -260, -360 timings.		
		Remove x4, -68. Add x8, x16, -260, LP. Change clock cycle for -260, -360.		
12/14/98	pages 22 to 23, and 59 and 64	Update of notes, description, regarding Auto Precharge. Change in implementation of auto-precharge for Write with Auto-Precharge command and for in ruption of Auto Precharge.		
	page 23	Clarify wording for timing of precharge (Read).		
	pages 24, 26, 42, 43, and 45	t <sub>DPL</sub> or t <sub>DAL</sub> updated.		
	page 28	Correct Power Down Mode Exit requirements (NOP required on clock following CKE transition). Remove note (buffer enable) in diagram.		
	page 31	Change WE in Self Refresh Exit Command from "X" to "H" (NOP). Also, in Power Down Mode Entry/Exit. Note edited: NOP or Device Deselect required.		
	page 32	Correct note regarding CKE low to high transition.		
	page 39	Update currents to reflect -260, -360 timing changes (scale for t <sub>CK</sub> (min)).  Drop LP requirements for I <sub>CC3P</sub> , I <sub>CC2PS</sub> , I <sub>CC2PS</sub> , I <sub>CC5</sub> .		
	page 40	Correct $t_{CKH}$ , $t_{CKL}$ in diagram. Remove note 4 ( $t_{CKH}$ , $t_{CKL}$ measurement). Update -260, -360 timings. Also page 41-page 43. Rew method of specifying $t_{RSC}$ (clk versus ns).		
	page 42	Clarify t <sub>OH</sub> / load conditions across speed sorts.		
	page 48	Correct Read (322) timing: Auto-precharge start, extend t <sub>RCD</sub> .		
	page 49	Clarify note about t <sub>RAS</sub> (min).		
	page 58	Correct timing (last activate/read commands).		
2/3/99	page 1	Change timings, delete -68, add -75A.		
	page 4	Remove -68, add -75A, change clock cycle for -260, -360.		
	page 37	Update Capacitance Table (max values), add typical values.		
	page 39	Update currents to reflect -260, -360 timing changes, added sort.		
	page 40	Update sorts, timings. Also, page 41 - page 43.		



## **Revision Log**

Revision	Contents of Modification	
3/21/99	page 41	Change t <sub>RP</sub> , t <sub>RCD</sub> for -75A (22.5 to 20ns)
4/22/99	page 39	Update I <sub>CC2NS</sub> (5 to 6mA)
5/14/99	page 50	Corrected addessing in timing diagram - Mode Register Set.
7/2/99	page 1,page 4, page 38-47	Add x16, -68
10/20/99		Removed Preliminary.
01/00	page 4	Updated Ordering information.
8/9/00		Updated entire docuement removing all stacked information and -10 speed sort.
1/30/01		Updated ordering information to add -75A and -260 speed sorts to x16 parts.



© Copyright International Business Machines Corporation 1997- 2001

All Rights Reserved
Printed in the United States of America January 2001

The following are trademarks of International Business Machines Corporation in the United States, or other countries, or both.

IBM IBM Logo

Other company, product and service names may be trademarks or service marks of others.

All information contained in this document is subject to change without notice. The products described in this document are NOT intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change IBM product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of IBM or third parties. All information contained in this document was obtained in specific environments, and is presented as an illustration. The results obtained in other operating environments may vary.

THE INFORMATION CONTAINED IN THIS DOCUMENT IS PROVIDED ON AN "AS IS" BASIS. In no event will IBM be liable for damages arising directly or indirectly from any use of the information contained in this document.

IBM Microelectronics Division 1580 Route 52, Bldg. 504 Hopewell Junction, NY 12533-6351

The IBM home page can be found at http://www.ibm.com

The IBM Microelectronics Division home page can be found at http://www.chips.ibm.com

19L3265.E35856B 1/01