




11 UV 04 RC Transmitter Diagram

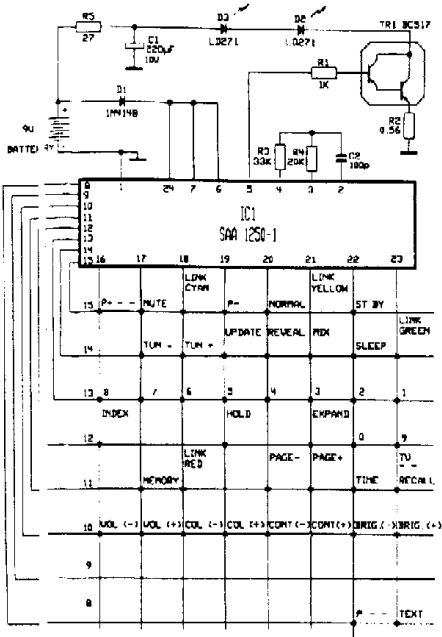


11 OY 01 IR Pre-Amp Diagram

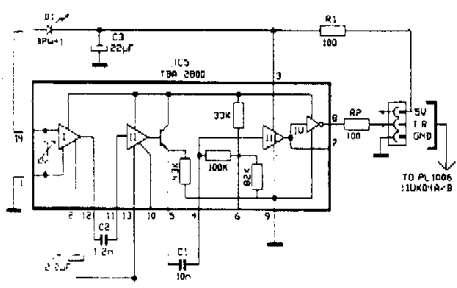



11 SC 01 SECAM & CTI Diagram

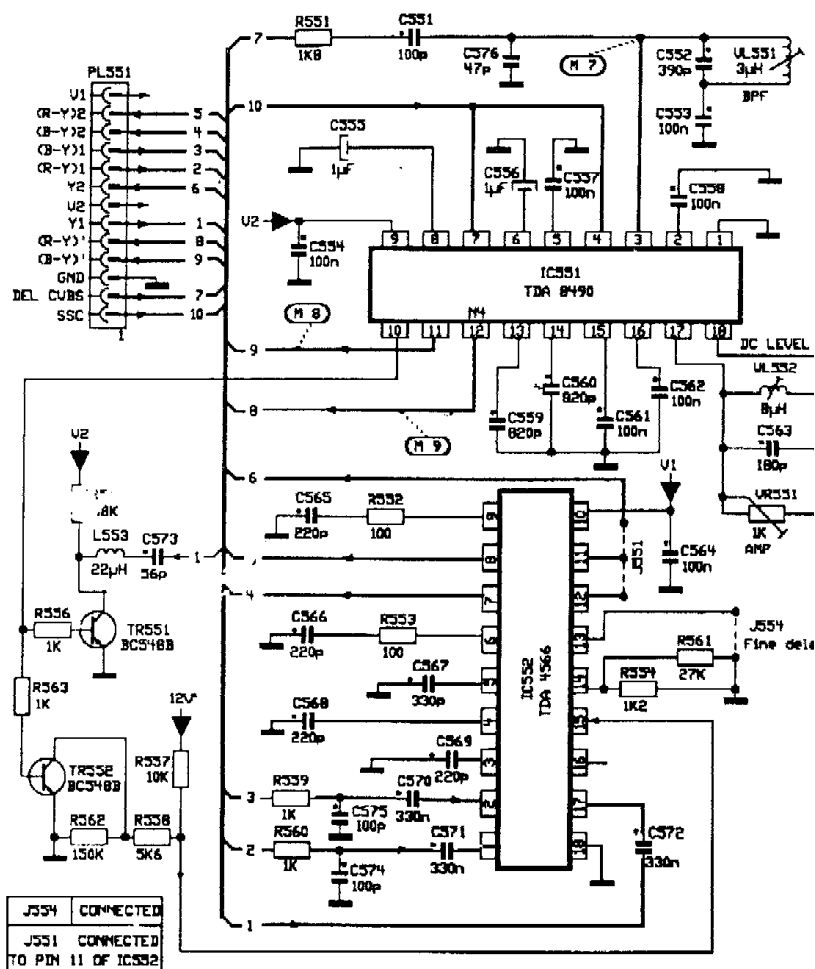


Tuner Diagram

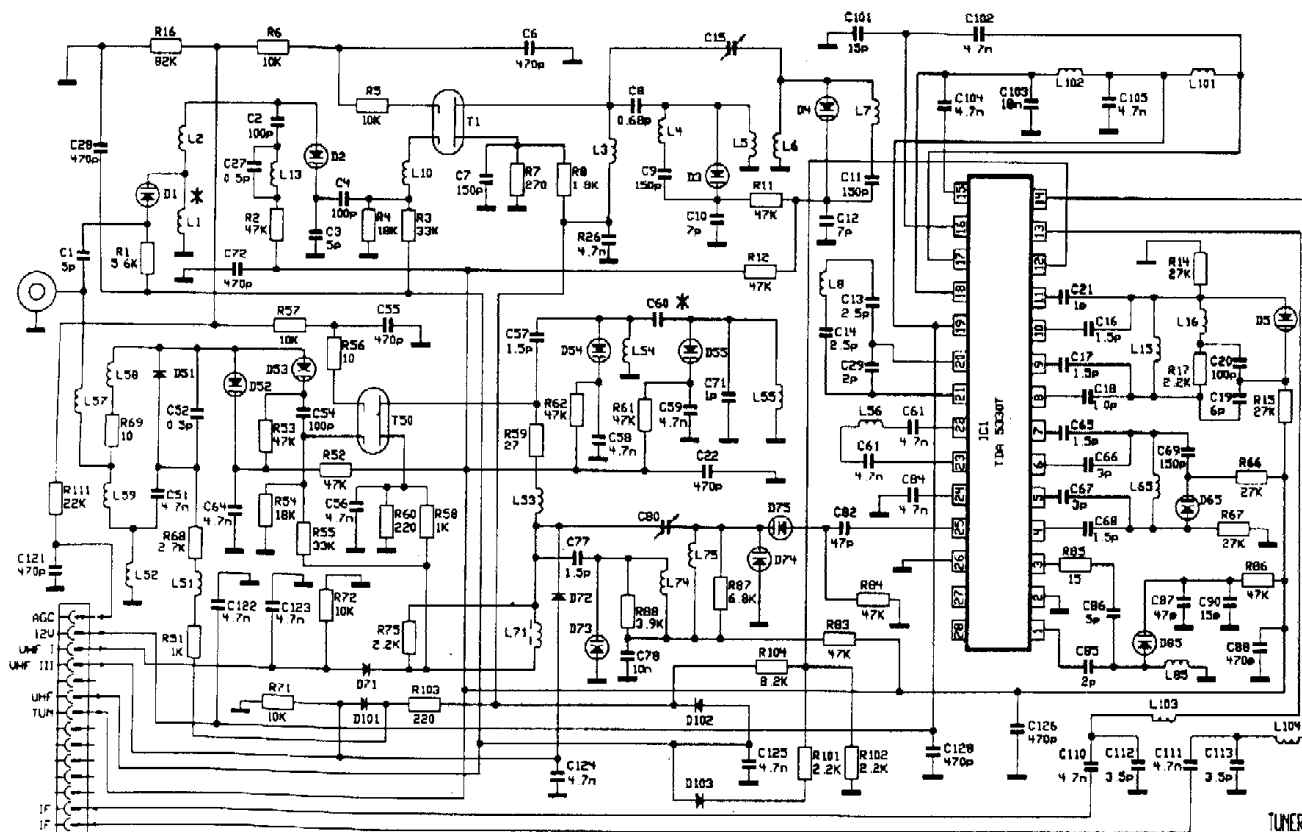

Main Diagram

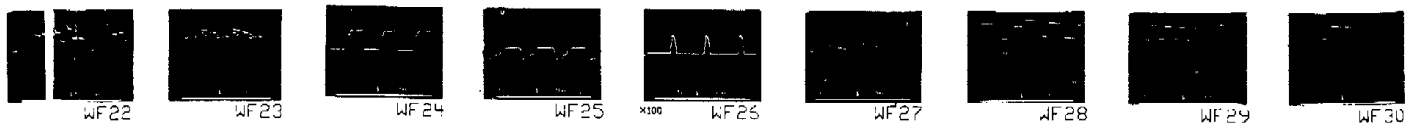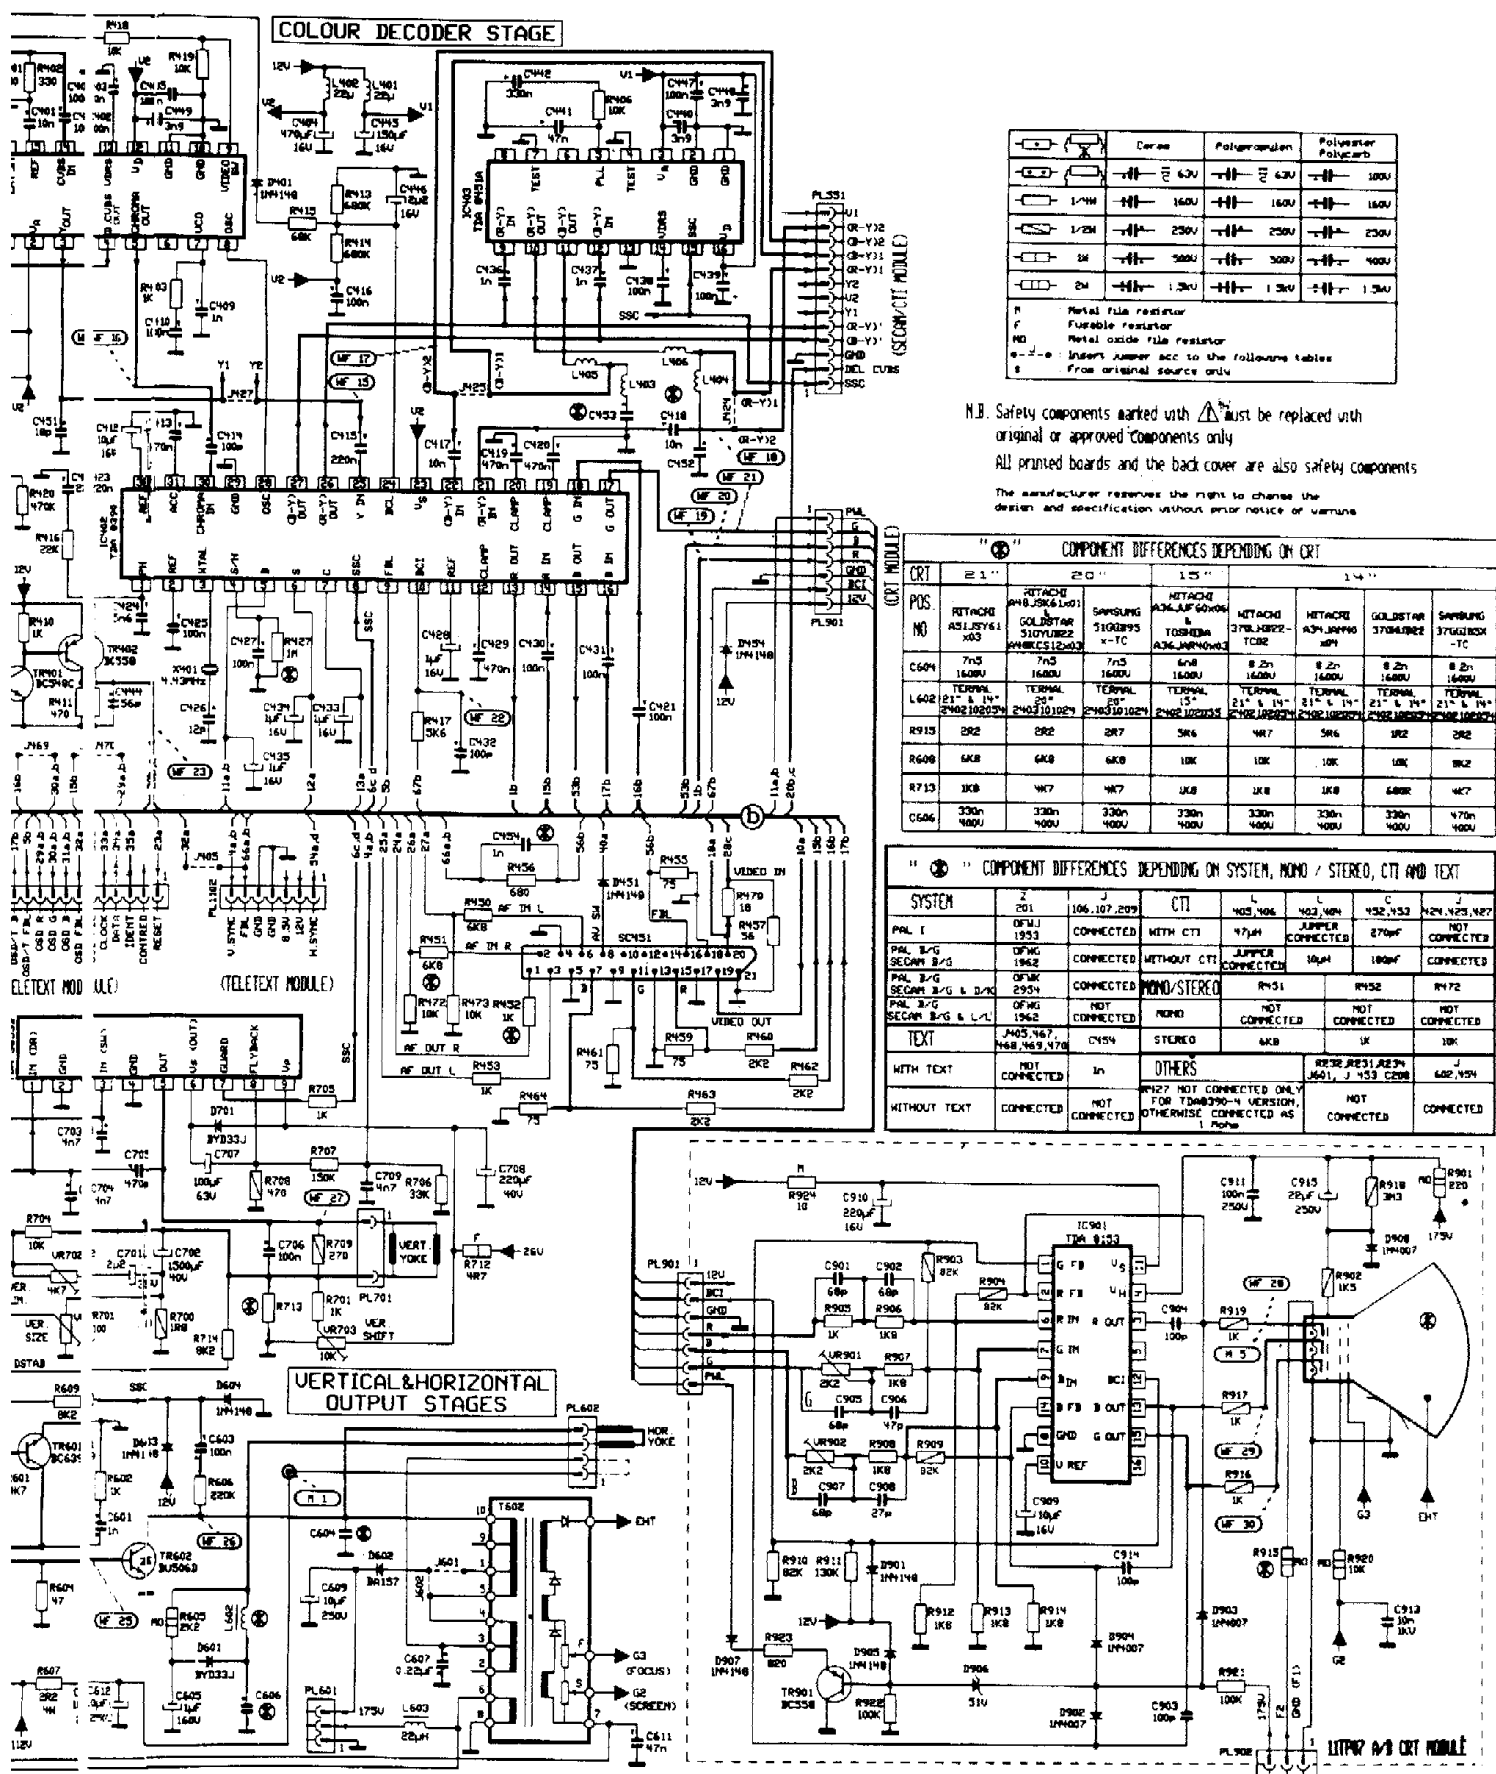

11 SO 01 Sound Diagram (L/L & B/G)

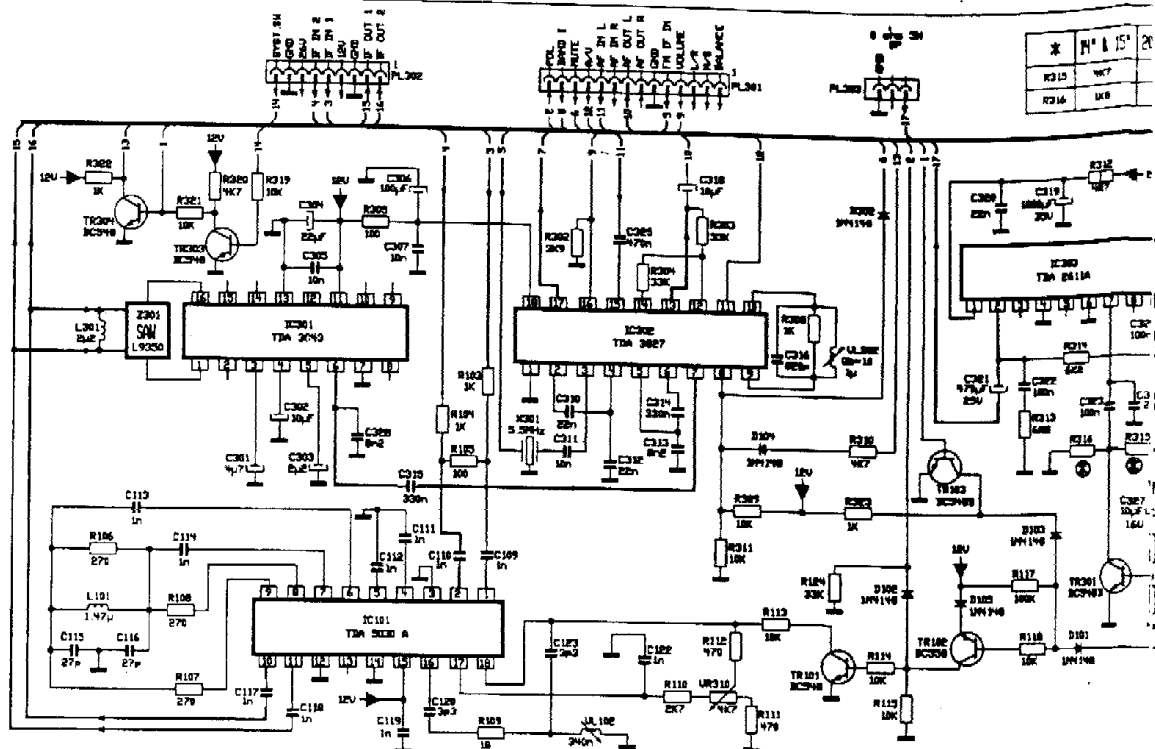


Electrical Parts List IC's

IC302	IC TDA 3827 - 013242352
IC303	IC TDA 2611A - 013242402
IC201	IC TDA 4504A - 013242472
IC401	IC TDA 8452A - 013242522
IC402	IC TDA 8390 4 - 013242582
IC403	IC TDA 8451A - 013242602
IC701	IC TDA 3853B - 013229812
IC801	IC TDA 4601 - 013223402
IC802	IC LM 317T - 013242102
IC901	IC TDA 8153 - 013242802
IC1001	IC LM 78L05 - 013240852
IC1003	IC MDA 2062 - 013200320
IC1003	IC MDA 2062 - 013200330
IC1002	IC 7805 - 013225002
IC1004	IC TPO 2066 VES 05 - 013242412
IC1005	IC LM 2901 - 013206302
IC1102	IC DPU 2543 - 013240352
IC1103	IC LM 317T - 013242102
IC1104	IC TPU 2732 - 013230852
IC1105	IC HM 4164 - 013231352

Transistors

TR201	TR BC548B - 013120702
TR202	TR BC548B - 013120702
TR401	TR BC548C - 013120712
TR402	TR BC558B - 013120902
TR601	TR BC639 - 013100902
TR602	TR BU506D - 013118082
TR801	TR BU508A - 013108102
TR802	TR BC548B - 013120702
TR1002	TR BC848B SMD - 013720882
TR1003	TR BC848B SMD - 013720882
TR1004	TR BC848B SMD - 013720882
TR1006	TR BF240 - 013115102
TR1007	TR BC848B SMD - 013720882
TR1010	SMD JUMPER WIRE - 014031441
TR1011	TR BC848B SMD - 013720882
TR1012	TR BC848B SMD - 013720882
TR1014	TR BC548B - 013120702
TR1102	TR BC548B - 013120702
TR1103	TR BF240 - 013115102
TR1104	TR BC548B - 013120702
TR1105	TR BC548B - 013120702
TR1106	TR BC548B - 013120702
TR1107	TR BC548B - 013120702
TR1108	TR BC548B - 013120702
TR1109	TR BC548B - 013120702
TR1110	TR BC548B - 013120702
TR1111	TR BC548B - 013120702
TR1112	TR BC548B - 013120702
TR1113	TR BC548B - 013120702


11 SD 01 - C Sound Diagram (B/G,I,D/K)

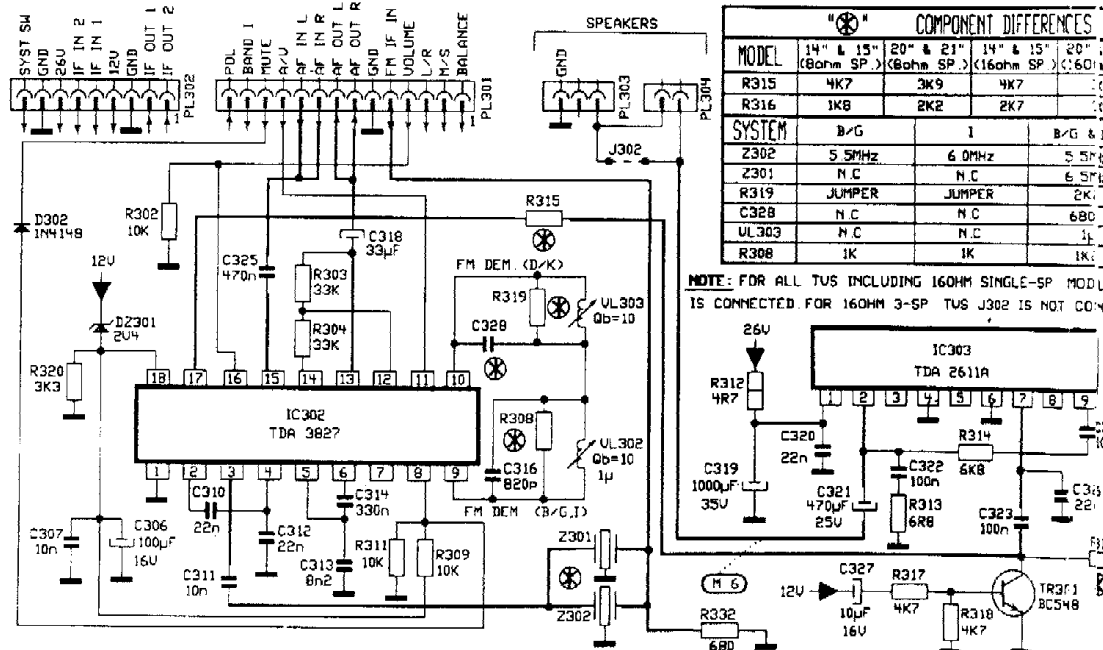


MODEL	14" & 15" (8ohm SP.)	20" & 21" (8ohm SP.)	14" & 15" (16ohm SP.)	20" & 21" (16ohm SP.)
R315	4K7	3K9	4K7	
R316	1K8	2K2	2K7	
SYSTEM	B/G	I	B/G & I	
Z302	5.5MHz	6.0MHz	5.5MHz	
Z301	N.C.	N.C.	6.5MHz	
R319	JUMPER	JUMPER	2K1	
C328	N.C.	N.C.	680	
UL303	N.C.	N.C.	1p	
R308	1K	1K	1K1	

NOTE: FOR ALL TUS INCLUDING 160HM SINGLE-SP. MOD. IS CONNECTED. FOR 160HM 3-SP. TUS J302 IS NOT CONN.

11 CT 01 CTI Diagram

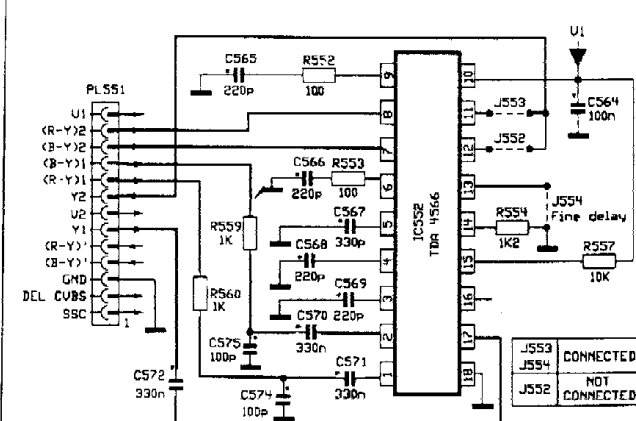

11 SM 01 SECAM Diagram

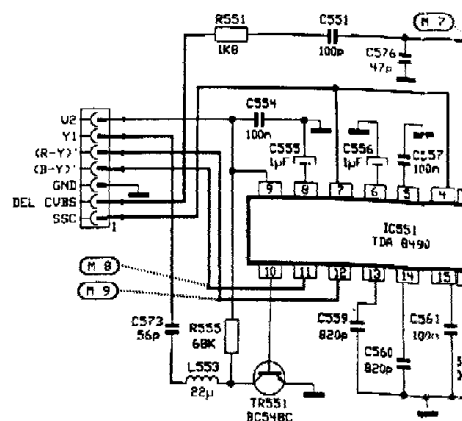

T'

94

Figure 1 illustrates the experimental setup. A subject is seated at a table, viewing a video screen. A video camera is positioned above the screen. A light source is positioned to the left of the screen. A target is positioned on the screen. The subject's hand is positioned near the target. The diagram shows the relative positions of the subject, camera, screen, light source, and target.

11. C

14


—

—

CRT	R315	R316
14615	467	148
30421	269	262
SYSTEM	R268	C316
SECAR	4	6200

J53	CONNECTED
J54	CONNECTED
J55	CONNECTED
J56	CONNECTED
J57	CONNECTED
J58	CONNECTED
J59	CONNECTED
J60	CONNECTED
J61	CONNECTED
J62	CONNECTED
J63	CONNECTED
J64	CONNECTED
J65	CONNECTED
J66	CONNECTED
J67	CONNECTED
J68	CONNECTED
J69	CONNECTED
J70	CONNECTED
J71	CONNECTED
J72	CONNECTED
J73	CONNECTED
J74	CONNECTED
J75	CONNECTED
J76	CONNECTED
J77	CONNECTED
J78	CONNECTED
J79	CONNECTED
J80	CONNECTED
J81	CONNECTED
J82	CONNECTED
J83	CONNECTED
J84	CONNECTED
J85	CONNECTED
J86	CONNECTED
J87	CONNECTED
J88	CONNECTED
J89	CONNECTED
J90	CONNECTED
J91	CONNECTED
J92	CONNECTED
J93	CONNECTED
J94	CONNECTED
J95	CONNECTED
J96	CONNECTED
J97	CONNECTED
J98	CONNECTED
J99	CONNECTED
J100	CONNECTED

IF & SYNC SEPARATOR STAGE

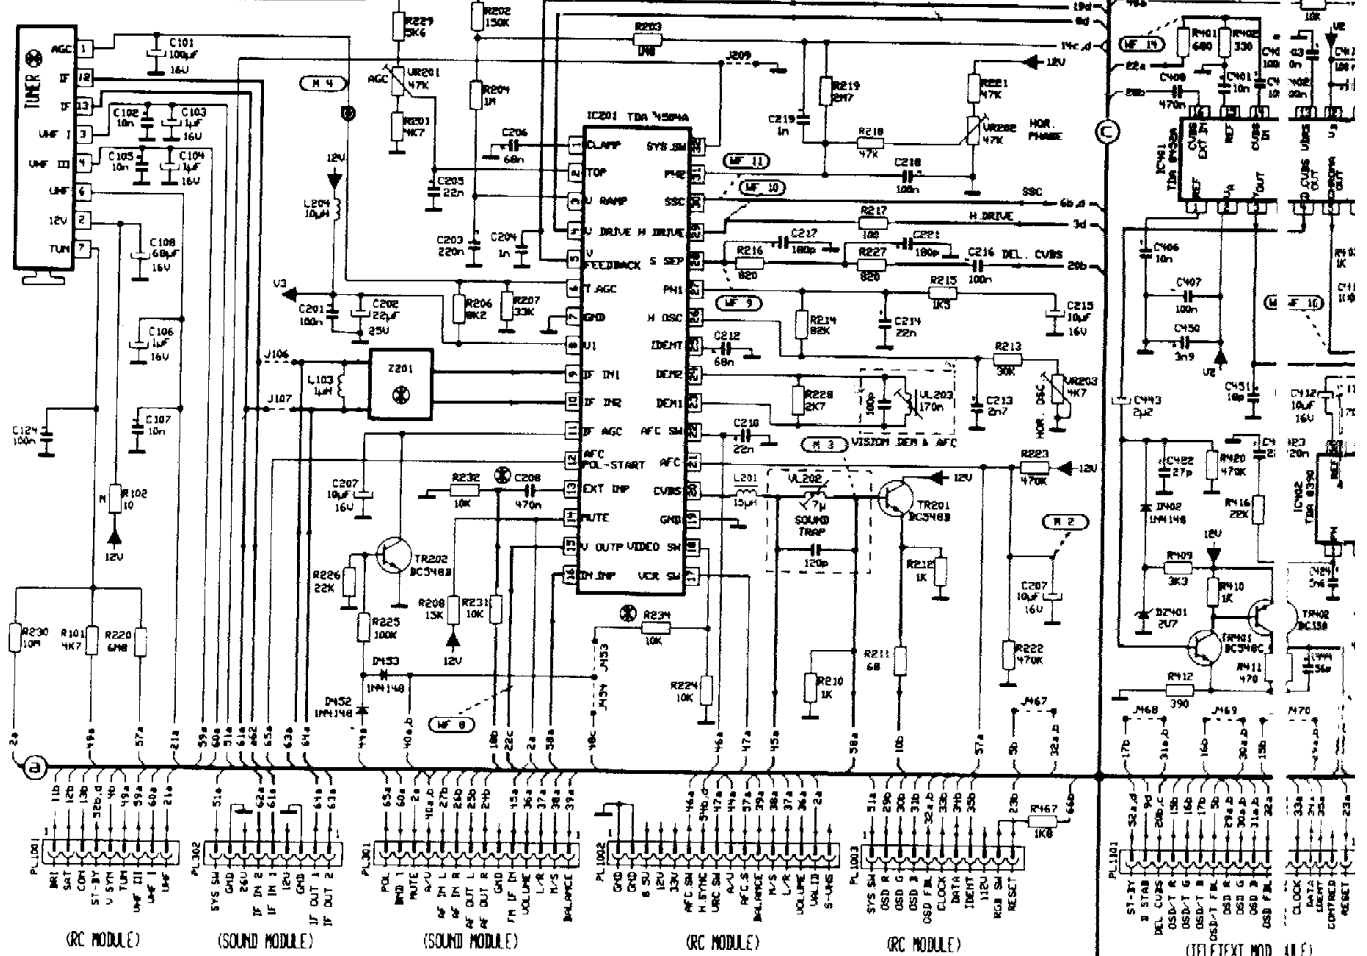

(RC MODULE)

(SOUND MODULE)


(SOUND MODULE)

(RC MODULE)

(RC MODULE)

(TELETEXT MOD. ULE)

SMPS STAGE

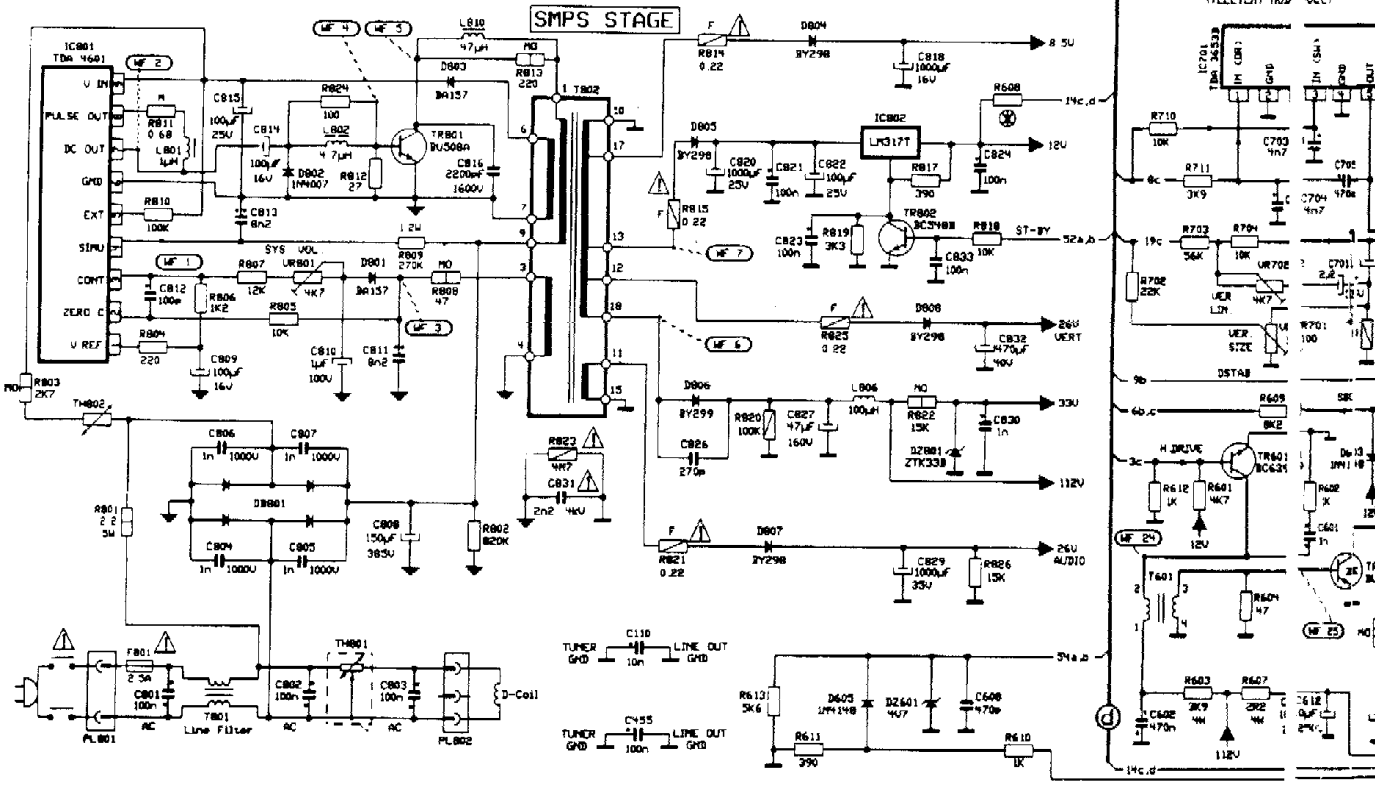

forms

WF1

WF2

WF3

WF4

WF5

WF6

WF7

WF8

WF9

WF10

WF11

WF12

WF13

WF14

WF15

WF16

WF17

WF18

WF19

WF20

WF21

WF22

WF23

WF24

WF25

WF26

WF27