

12-Rail Sequencer and System Health Monitor With Fan Control

Check for Samples :[UCD90124](#)

FEATURES

- **Monitor and Sequence 12 Voltage Rails**
 - All Rails Sampled Every 400 μ s
 - 12-bit ADC With 2.5-V, 0.5% Internal V_{REF}
 - Sequence Based on Time, Rail and Pin Dependencies
 - Four Programmable Undervoltage and Overvoltage Thresholds per Monitor
- **Fan Control and Monitoring**
 - Supports Four Fans With Five User-Defined Speed-vs-Temperature Setpoints
 - Supports Two-, Three-, and Four-Wire Fans
- **Nonvolatile Error and Peak-Value Logging per Monitor (up to 12 Faults)**
- **Closed-Loop Margining for 10 Rails**
 - Margin Output Adjusts Rail Voltage to Match User-Defined Margin Thresholds
- **Programmable Watchdog Timer and System Reset**
- **Flexible Digital I/O Configuration**
- **Multiphase PWM Clock Generator**
 - Clock Frequencies From 15.259 kHz to 125 MHz
 - Capability to Configure Independent Clock Outputs for Synchronizing Switch-Mode Power Supplies
- **Internal Temperature Sensor**
- **JTAG and I²C/SMBus/ PMBus™ Interfaces**

APPLICATIONS


- **Industrial / ATE**
- **Telecommunications and Networking Equipment**
- **Servers and Storage Systems**
- **Embedded Computing**
- **Any System Requiring Sequencing and Monitoring of Multiple Power Rails**

DESCRIPTION

The UCD90124 is a 12-rail PMBus/I²C addressable power-supply sequencer and system-health monitor. The device integrates a 12-bit ADC for monitoring up to 13 power-supply voltage, current, or temperature inputs. Twenty-six GPIO pins can be used for power supply enables, power-on reset signals, external interrupts, cascading, or other system functions. Twelve of these pins offer PWM functionality. Using these pins, the UCD90124 offers support for fan control, margining, and general-purpose PWM functions.

Fan-control signals can be sent using PMBus commands or generated from one of two built-in fan-control algorithms. PWM outputs combined with temperature and fan-speed measurements provide a complete fan-control solution for up to four independent fans.

The TI Fusion Digital Power™ designer software is provided for device configuration. This PC-based graphical user interface (GUI) offers an intuitive interface for configuring, storing, and monitoring all system operating parameters.

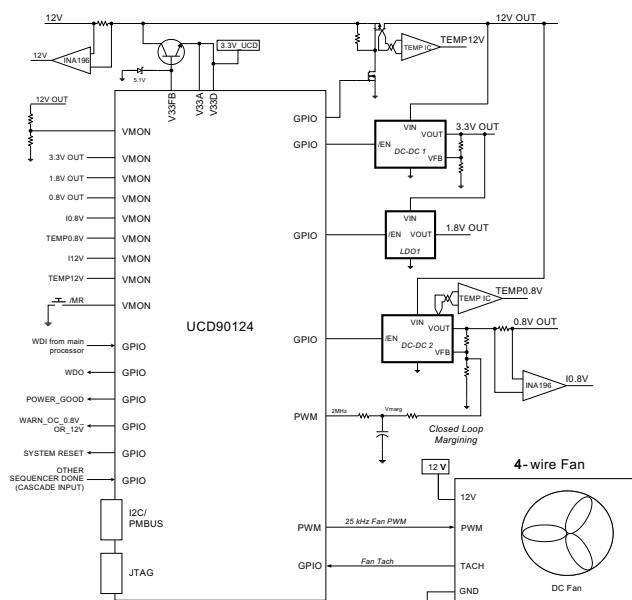

Please be aware that an important notice concerning availability, standard warranty, and use in critical applications of Texas Instruments semiconductor products and disclaimers thereto appears at the end of this data sheet.

PMBus, Fusion Digital Power are trademarks of Texas Instruments.

PRODUCTION DATA information is current as of publication date. Products conform to specifications per the terms of the Texas Instruments standard warranty. Production processing does not necessarily include testing of all parameters.

Copyright © 2009, Texas Instruments Incorporated

UCD90124


SLVSA29A –NOVEMBER 2009–REVISED DECEMBER 2009

www.ti.com


This integrated circuit can be damaged by ESD. Texas Instruments recommends that all integrated circuits be handled with appropriate precautions. Failure to observe proper handling and installation procedures can cause damage.

ESD damage can range from subtle performance degradation to complete device failure. Precision integrated circuits may be more susceptible to damage because very small parametric changes could cause the device not to meet its published specifications.

FUNCTIONAL BLOCK DIAGRAM

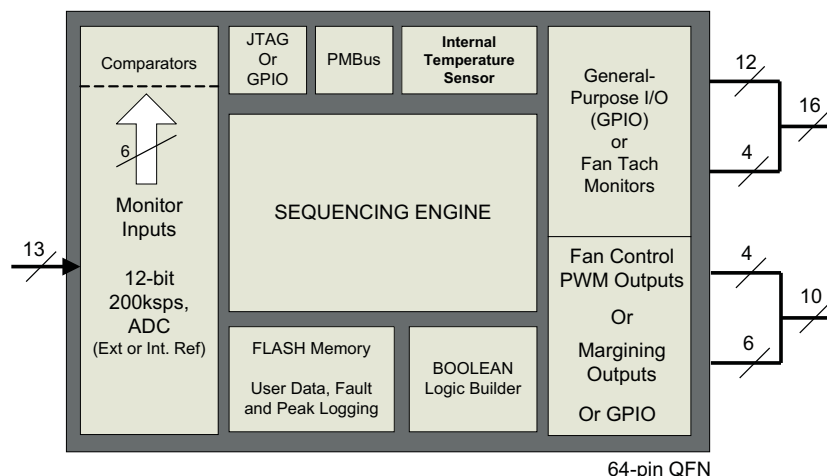

ORDERING INFORMATION

| ORDERABLE PART NUMBER | PACKAGE | Supply |
|-----------------------|------------|--------------|
| UCD90124RGCR | 64-pin QFN | Reel of 2000 |
| UCD90124RGCT | 64-pin QFN | Reel of 250 |

ABSOLUTE MAXIMUM RATINGS⁽¹⁾

| | VALUE | UNIT |
|---|----------------------------|------|
| Voltage applied at V33D to DV _{SS} | –0.3 V to 3.8 | V |
| Voltage applied at V33A to AV _{SS} | –0.3 V to 3.8 | V |
| Voltage applied at V33FB to AV _{SS} | –0.3 V to 5.5 | V |
| Voltage applied to any other pin ⁽²⁾ | –0.3 V to (V33A + 0.3 V) | V |
| Storage temperature (T _{stg}) | –40 to 150 | °C |
| ESD rating | Human-body model (HBM) | 2.5 |
| | Charged-device model (CDM) | 750 |

(1) Stresses beyond those listed under *Absolute Maximum Ratings* may cause permanent damage to the device. These are stress ratings only and functional operation of the device at these or any other conditions beyond those indicated under *Recommended Operating Conditions* is not implied. Exposure to absolute-maximum-rated conditions for extended periods may affect device reliability.

(2) All voltages referenced to V_{SS}

RECOMMENDED OPERATING CONDITIONS

| | MIN | NOM | MAX | UNIT |
|---|-----|-----|-----|------|
| Supply voltage during operation (V _{33D} , V _{33DIO} , V _{33A}) | 3 | 3.3 | 3.6 | V |
| Operating free-air temperature range, T _A | –40 | | 110 | °C |
| Junction temperature, T _J | | | 125 | °C |

ELECTRICAL CHARACTERISTICS

over operating free-air temperature range (unless otherwise noted)

| PARAMETER | | TEST CONDITIONS | MIN | NOM | MAX | UNIT | |
|---|-------------------------------------|---|---------------------------|-----|------|-------------|------|
| SUPPLY CURRENT | | | | | | | |
| I _{V33A} | Supply current ⁽¹⁾ | V _{V33A} = 3.3 V | 8 | | | mA | |
| I _{V33DIO} | | V _{V33DIO} = 3.3 V | 2 | | | mA | |
| I _{V33D} | | V _{V33D} = 3.3 V | 40 | | | mA | |
| I _{V33D} | | V _{V33D} = 3.3 V, storing configuration parameters in flash memory | 50 | | | mA | |
| INTERNAL REGULATOR CONTROLLER INPUTS/OUTPUTS | | | | | | | |
| V _{V33} | 3.3-V linear regulator | Emitter of NPN transistor | 3.25 | 3.3 | 3.35 | V | |
| V _{V33FB} | 3.3-V linear reg feedback | | 4 | | | 4.6 | V |
| I _{V33FB} | Series pass base drive | V _{VIN} = 12 V | 10 | | | mA | |
| Beta | Series NPN pass device | | 40 | | | | |
| EXTERNALLY SUPPLIED 3.3V POWER | | | | | | | |
| V _{V33D} , V _{V33DIO} | Digital 3.3-V power | T _A = 25°C | 3 | | | 3.6 | V |
| V _{V33A} | Analog 3.3-V power | T _A = 25°C | 3 | | | 3.6 | V |
| ANALOG INPUTS (MON1–MON13) | | | | | | | |
| V _{MON} | Input voltage range | MON1–MON9 | 0 | | | 2.5 | V |
| | | MON10–MON13 | 0.2 | | | 2.5 | V |
| INL | ADC integral nonlinearity | | –2.5 | | | 2.5 | mV |
| I _{lkg} | Input leakage current | 3 V applied to pin | | | | 100 | nA |
| I _{OFFSET} | Input offset current | 1-kΩ source impedance | –5 | | | 5 | μA |
| R _{IN} | Input impedance | MON1–MON9, ground reference | 8 | | | | MΩ |
| | | MON10–MON13, ground reference | 0.5 | | | 1.5 | 3 |
| C _{IN} | Input capacitance | | | | | 10 | pF |
| t _{CONVERT} | ADC sample period | 14 voltages sampled, 3.89 μsec/sample | 400 | | | | μsec |
| V _{REF} | ADC 2.5 V, internal | 0°C to 125°C | –0.5% | | | 0.5% | |
| | Reference accuracy | –40°C to 125°C | –1% | | | 1% | |
| ANALOG INPUT (PMBUS_ADDRx, INTERNAL TEMP SENSE) | | | | | | | |
| I _{BIAS} | Bias current for PMBus Addr pins | | 9 | | | 11 | μA |
| V _{ADDR_OPEN} | Voltage – open pin | AddrSens0,1 open | 2.26 | | | | V |
| V _{ADDR_SHORT} | Voltage – shorted pin | AddrSens0,1 short to ground | | | | 0.124 | V |
| T _{Internal} | Internal temperature-sense accuracy | Over range from 0°C to 100°C | –5 | | | 5 | °C |
| DIGITAL INPUTS AND OUTPUTS | | | | | | | |
| V _{OL} | Low-level output voltage | I _{OL} = 6 mA ⁽²⁾ , V _{33DIO} = 3 V | | | | Dgnd + 0.25 | V |
| V _{OH} | High-level output voltage | I _{OH} = –6 mA ⁽³⁾ , V _{33DIO} = 3 V | V _{33DIO} – 0.6V | | | | V |
| V _{IH} | High-level input voltage | V _{33DIO} = 3 V | 2.1 | | | 3.6 | V |
| V _{IL} | Low-level input voltage | V _{33DIO} = 3.5 V | | | | 1.4 | V |

(1) Typical supply current values are based on device programmed but not configured, and no peripherals connected to any pins.

(2) The maximum total current, I_{OHmax} and I_{OLmax} , for all outputs combined, should not exceed 12 mA to hold the maximum voltage drop specified.

(3) The maximum total current, I_{OHmax} and I_{OLmax} , for all outputs combined, should not exceed 48 mA to hold the maximum voltage drop specified.

UCD90124

SLVSA29A – NOVEMBER 2009 – REVISED DECEMBER 2009

www.ti.com

ELECTRICAL CHARACTERISTICS (continued)

over operating free-air temperature range (unless otherwise noted)

| PARAMETER | | TEST CONDITIONS | MIN | NOM | MAX | UNIT |
|---------------------------|---|--|------|-----|-----|----------|
| SYSTEM PERFORMANCE | | | | | | |
| V_{DD} Slew | Minimum V_{DD} slew rate | V_{DD} slew rate between 2.3 V and 2.9 V | 0.25 | | | V/ms |
| V_{RESET} | Supply voltage at which device comes out of reset | For power-on reset (POR) | | | 2.4 | V |
| t_{RESET} | Low-pulse duration needed at RESET pin | To reset device during normal operation | 2 | | | μ S |
| $f(PCLK)$ | Internal oscillator frequency | $T_A = 125^{\circ}\text{C}$, $T_A = 25^{\circ}\text{C}$ | 240 | 250 | 260 | MHz |
| $t_{retention}$ | Retention of configuration parameters | $T_J = 25^{\circ}\text{C}$ | 100 | | | Years |
| Write_Cycles | Number of nonvolatile erase/write cycles | $T_J = 25^{\circ}\text{C}$ | 20 | | | K cycles |

PMBus/SMBus/I²C

The timing characteristics and timing diagram for the communications interface that supports I²C, SMBus and PMBus is shown below.

I²C/SMBus/PMBus TIMING REQUIREMENTS

T_A = –40°C to 85°C, 3 V < V_{DD} < 3.6 V; typical values at T_A = 25°C and V_{CC} = 2.5 V (unless otherwise noted)

| PARAMETER | | TEST CONDITIONS | MIN | TYP | MAX | UNIT |
|-----------------------|--|---------------------------------|------|-----|------|------|
| FSMB | SMBus/PMBus operating frequency | Slave mode, SMBC 50% duty cycle | 10 | | 1000 | kHz |
| FI2C | I ² C operating frequency | Slave mode, SCL 50% duty cycle | 10 | | 1000 | kHz |
| t _{BUF} | Bus free time between start and stop | | 4.7 | | | μs |
| t _{HD:STA} | Hold time after (repeated) start | | 0.26 | | | μs |
| t _{SU:STA} | Repeated-start setup time | | 0.26 | | | μs |
| t _{SU:STO} | Stop setup time | | 0.26 | | | μs |
| t _{HD:DAT} | Data hold time | Receive mode | 0 | | | ns |
| t _{SU:DAT} | Data setup time | | 50 | | | ns |
| t _{TIMEOUT} | Error signal/detect | See ⁽¹⁾ | | | 35 | ms |
| t _{LOW} | Clock low period | | 0.5 | | | μs |
| t _{HIGH} | Clock high period | See ⁽²⁾ | 0.26 | | 50 | μs |
| t _{LOW:SEXT} | Cumulative clock low slave extend time | See ⁽³⁾ | | | 25 | ms |
| t _f | Clock/data fall time | See ⁽⁴⁾ | | | 120 | ns |
| t _r | Clock/data rise time | See ⁽⁵⁾ | | | 120 | ns |

- (1) The device times out when any clock low exceeds t_{TIMEOUT}.
- (2) t_{HIGH}, Max, is the minimum bus idle time. SMBC = SMBD = 1 for t > 50 ms causes reset of any transaction that is in progress. This specification is valid when the NC_SMB control bit remains in the default cleared state (CLK[0] = 0).
- (3) t_{LOW:SEXT} is the cumulative time a slave device is allowed to extend the clock cycles in one message from initial start to the stop.
- (4) Fall time t_f = 0.9 V_{DD} to (V_{IL}MAX – 0.15)
- (5) Rise time t_r = (V_{IL}MAX – 0.15) to (V_{IH}MIN + 0.15)

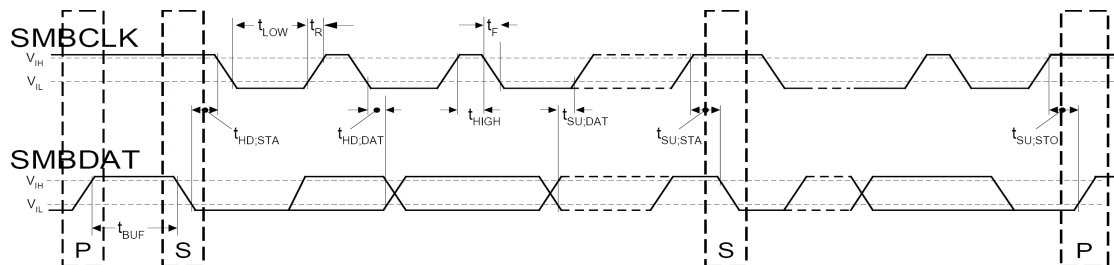


Figure 1. I²C/SMBus Timing Diagram

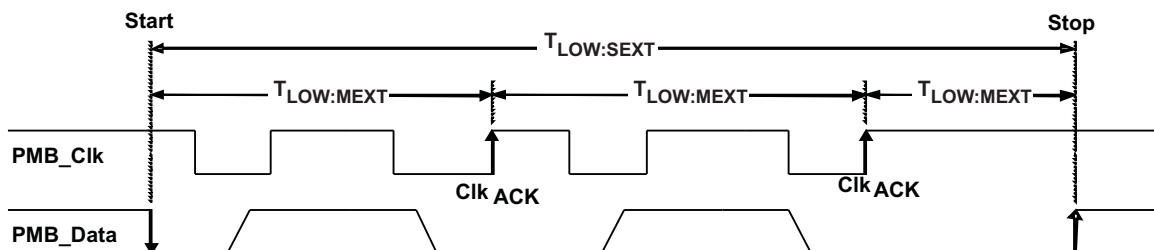


Figure 2. Bus Timing in Extended Mode



UCD90124

SLVSA29A – NOVEMBER 2009 – REVISED DECEMBER 2009

www.ti.com

DEVICE INFORMATION

UCD90124 PIN ASSIGNMENT

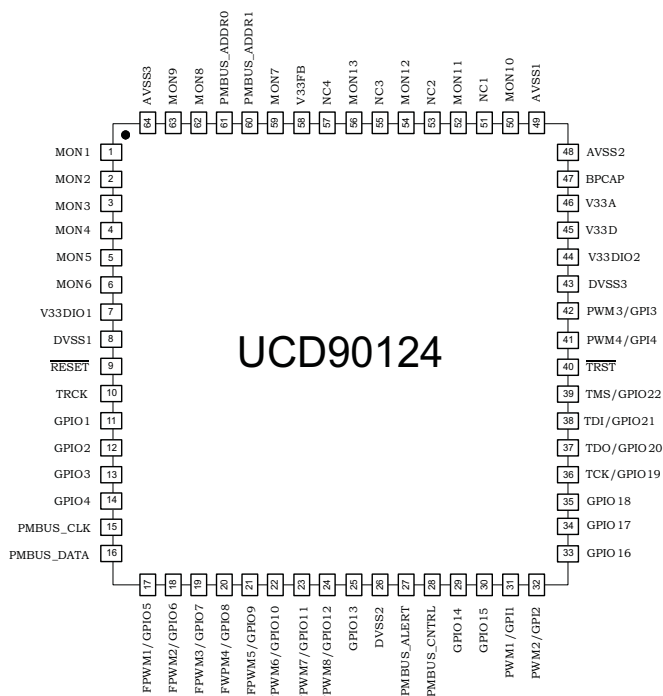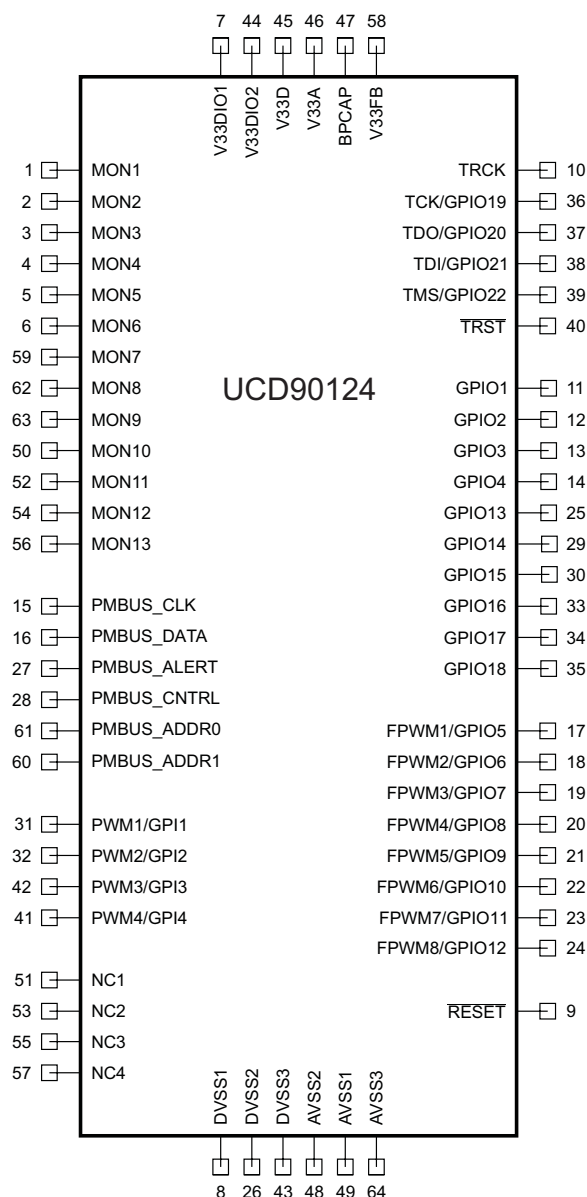

PIN FUNCTIONS

| PIN NAME | PIN NO. | I/O TYPE | DESCRIPTION |
|------------------------------|---------|----------|--------------------------|
| ANALOG MONITOR INPUTS | | | |
| MON1 | 1 | I | Analog input (0 V–2.5 V) |
| MON2 | 2 | I | Analog input (0 V–2.5 V) |
| MON3 | 3 | I | Analog input (0 V–2.5 V) |
| MON4 | 4 | I | Analog input (0 V–2.5 V) |
| MON5 | 5 | I | Analog input (0 V–2.5 V) |
| MON6 | 6 | I | Analog input (0 V–2.5 V) |
| MON7 | 59 | I | Analog input (0 V–2.5 V) |

PIN FUNCTIONS (continued)

| PIN NAME | PIN NO. | I/O TYPE | DESCRIPTION |
|-----------------------------|---------|----------|--|
| MON8 | 62 | I | Analog input (0 V–2.5 V) |
| MON9 | 63 | I | Analog input (0 V–2.5 V) |
| MON10 | 50 | I | Analog input (0.2 V–2.5 V) |
| MON11 | 52 | I | Analog input (0.2 V–2.5 V) |
| MON12 | 54 | I | Analog input (0.2 V–2.5 V) |
| MON13 | 56 | I | Analog input (0.2 V–2.5 V) |
| GPIO | | | |
| GPIO1 | 11 | I/O | General-purpose discrete I/O |
| GPIO2 | 12 | I/O | General-purpose discrete I/O |
| GPIO3 | 13 | I/O | General-purpose discrete I/O |
| GPIO4 | 14 | I/O | General-purpose discrete I/O |
| GPIO13 | 25 | I/O | General-purpose discrete I/O |
| GPIO14 | 29 | I/O | General-purpose discrete I/O |
| GPIO15 | 30 | I/O | General-purpose discrete I/O |
| GPIO16 | 33 | I/O | General-purpose discrete I/O |
| GPIO17 | 34 | I/O | General-purpose discrete I/O |
| GPIO18 | 35 | I/O | General-purpose discrete I/O |
| PWM OUTPUTS | | | |
| FPWM1/GPIO5 | 17 | I/O/PWM | PWM (15.259 kHz to 125 MHz) or GPIO |
| FPWM2/GPIO6 | 18 | I/O/PWM | PWM (15.259 kHz to 125 MHz) or GPIO |
| FPWM3/GPIO7 | 19 | I/O/PWM | PWM (15.259 kHz to 125 MHz) or GPIO |
| FPWM4/GPIO8 | 20 | I/O/PWM | PWM (15.259 kHz to 125 MHz) or GPIO |
| FPWM5/GPIO9 | 21 | I/O/PWM | PWM (15.259 kHz to 125 MHz) or GPIO |
| FPWM6/GPIO10 | 22 | I/O/PWM | PWM (15.259 kHz to 125 MHz) or GPIO |
| FPWM7/GPIO11 | 23 | I/O/PWM | PWM (15.259 kHz to 125 MHz) or GPIO |
| FPWM8/GPIO12 | 24 | I/O/PWM | PWM (15.259 kHz to 125 MHz) or GPIO |
| PWM1/GPI1 | 31 | I/PWM | Fixed 10-kHz PWM output or GPI |
| PWM2/GPI2 | 32 | I/PWM | Fixed 1-kHz PWM output or GPI |
| PWM3/GPI3 | 42 | I/PWM | PWM (0.93 Hz to 7.8125 MHz) or GPI |
| PWM4/GPI4 | 41 | I/PWM | PWM (0.93 Hz to 7.8125 MHz) or GPI |
| PMBus COMM INTERFACE | | | |
| PMBUS_CLK | 15 | I/O | PMBus clock (must have pullup to 3.3 V) |
| PMBUS_DATA | 16 | I/O | PMBus data (must have pullup to 3.3 V) |
| PMBALERT# | 27 | O | PMBus alert, active-low, open-drain output (must have pullup to 3.3 V) |
| PMBUS_CNTRL | 28 | I | PMBus control |
| PMBUS_ADDR0 | 61 | I | PMBus analog address input. Least-significant address bit |
| PMBUS_ADDR1 | 60 | I | PMBus analog address input. Most-significant address bit |
| JTAG | | | |
| TRCK | 10 | O | Test return clock |
| TCK/GPIO19 | 36 | I/O | Test clock or GPIO |
| TDO/GPIO20 | 37 | I/O | Test data out or GPIO |
| TDI/GPIO21 | 38 | I/O | Test data in (tie to V _{dd} with 10-kΩ resistor) or GPIO |
| TMS/GPIO22 | 39 | I/O | Test mode select (tie to V _{dd} with 10-kΩ resistor) or GPIO |
| TRST | 40 | I | Test reset – tie to ground with 10-kΩ resistor |

PIN FUNCTIONS (continued)

| PIN NAME | PIN NO. | I/O TYPE | DESCRIPTION |
|--------------------------------|---------|----------|---|
| INPUT POWER AND GROUNDS | | | |
| RESET | 9 | | Active-low device reset input. Hold low for at least 2 μ s to reset the device. |
| V33FB | 58 | | 3.3-V linear regulator feedback connection |
| V33A | 46 | | Analog 3.3-V supply |
| V33D | 45 | | Digital core 3.3-V supply |
| V33DIO1 | 7 | | Digital I/O 3.3-V supply |
| V33DIO2 | 44 | | Digital I/O 3.3-V supply |
| BPCap | 47 | | 1.8-V bypass capacitor – tie 0.1- μ F capacitor to analog ground. |
| AVSS1 | 49 | | Analog ground |
| AVSS2 | 48 | | Analog ground |
| AVSS3 | 64 | | Analog ground |
| DVSS1 | 8 | | Digital ground |
| DVSS2 | 26 | | Digital ground |
| DVSS3 | 43 | | Digital ground |
| QFP ground pad | NA | | Thermal pad – tie to ground plane. |

FUNCTIONAL DESCRIPTION

TI FUSION GUI

The Texas Instruments *Fusion Digital Power Designer* is provided for device configuration. This PC-based graphical user interface (GUI) offers an intuitive I²C/PMBus interface to the device. It allows the design engineer to configure the system operating parameters for the application without directly using PMBus commands, store the configuration to on-chip nonvolatile memory, and observe system status (voltage, temperature, etc). Fusion is referenced throughout the data sheet and many sections include screenshots.

PMBUS INTERFACE

The PMBus is a serial interface specifically designed to support power management. It is based on the SMBus interface that is built on the I²C physical specification. The UCD90124 supports revision 1.1 of the PMBus standard. Wherever possible, standard PMBus commands are used to support the function of the device. For unique features of the UCD90124, MFR_SPECIFIC commands are defined to configure or activate those features. These commands are defined in the UCD90xxx Sequencer and System Health Controller PMBUS Command Reference ([SLVU352](#)).

This document makes frequent mention of the PMBus specification. Specifically, this document is *PMBus Power System Management Protocol Specification Part II – Command Language*, Revision 1.1, dated 5 February 2007. The specification is published by the Power Management Bus Implementers Forum and is available from www.pmbus.org.

The UCD90124 is PMBus compliant, in accordance with the *Compliance* section of the PMBus specification. The firmware is also compliant with the SMBus 1.1 specification, including support for the SMBus ALERT function. The hardware can support either 100-kHz or 400-kHz PMBus operation.

THEORY OF OPERATION

Modern electronic systems often use numerous microcontrollers, DSPs, FPGAs, and ASICs. Each device can have multiple supply voltages to power the core processor, analog-to-digital converter or I/O. These devices are typically sensitive to the order and timing of how the voltages are sequenced on and off. The UCD90124 can sequence supply voltages to prevent malfunctions, intermittent operation, or device damage caused by improper power up or power down. Appropriate handling of under- and overvoltage faults, overcurrent faults and overtemperature faults can extend system life and improve long term reliability. The UCD90124 stores power supply faults to on-chip nonvolatile flash memory for aid in system failure analysis.

Tach monitor inputs, PWM outputs and temperature measurements can be combined with a choice between two built-in fan-control algorithms to provide a stand-alone fan controller for independent operation of up to four fans.

System reliability can be improved through four-corner testing during system verification. During four-corner testing, the system is operated at the minimum and maximum expected ambient temperature and with each power supply set to the minimum and maximum output voltage, commonly referred to as margining. The UCD90124 can be used to implement accurate closed-loop margining of up to 10 power supplies.

The UCD90124 12-rail sequencer can be used in a PMBus- or pin-based control environment. The TI Fusion GUI provides a powerful but simple interface for configuring sequencing solutions for systems with between one and 12 power supplies using 13 analog voltage-monitor inputs, four GPIs and 22 highly configurable GPIOs. A rail can include voltage, temperature, current, a power-supply enable and a margining output. At least one must be included in a rail definition. Once the user has defined how the power-supply rails should operate in a particular system, analog input pins and GPIOs can be selected to monitor and enable each supply (Figure 3).

Vout Config
Pin Assignment
Run Time Clock
Other Config
All Config

| Rails - Monitors & Enables | | | | | | | 3 of 12 Rails Assigned | |
|----------------------------|----------------------|----------------------------|------------------------------|------------------------------|------------------------------|------------------------------------|------------------------|---------------------------|
| | Rail Name | Voltage | Temperature | Current | Enable | Margin | Actions | |
| Rail #1 | <input type="text"/> | Pin 1 MON1 | Pin 56 MON13 | <None> | Pin 11 GPIO1 | Pin 17 FPWM1 GPIO5 | Delete | Configure |
| Rail #2 | <input type="text"/> | Pin 3 MON3 | <None> | Pin 54 MON12 | Pin 13 GPIO3 | <None> | Delete | Configure |
| Rail #3 | <input type="text"/> | Pin 4 MON4 | <None> | <None> | Pin 14 GPIO4 | <None> | Delete | Configure |
| Add Rail | | | | | | | | |

GPIs - General Purpose Inputs
0 of 8 GPIs Assigned

You have not configured any sequencing inputs; click the Add link below to add

[Add GPI](#)

GPOs - General Purpose Outputs
0 of 12 GPOs Assigned

You have not configured any GPIO outputs; click the Add link below to add

[Add GPO](#)

Fans
0 of 4 Fans Assigned

You have not configured any Fans; click the Add link below to add

[Add Fan](#)

PWMs - General Purpose Pulse-Width Modulation Outputs
0 of 12 PWMs Assigned

You have not configured any PWMs; click the Add link below to add

[Add PWM](#)

Figure 3. Fusion Pin-Assignment Tab

After the pins have been configured, other key monitoring and sequencing criteria are selected for each rail from the Vout Config tab (Figure 4):

- Nominal operating voltage (Vout)
- Undervoltage (UV) and overvoltage (OV) warning and fault limits
- Margin-low and margin-high values
- Power-good on and power-good off limits
- PMBus or pin-based sequencing control (On/Off Config)
- Rails that must achieve power good, or input pins that must be at a defined logic state before a rail is enabled (rail and input-pin dependencies)
- Turnon and turnoff delay timing
- Maximum time allowed for a rail to reach POWER_GOOD_ON or POWER_GOOD_OFF after being enabled or disabled
- Other rails to turn off in case of a fault on a rail (fault-shutdown slaves)

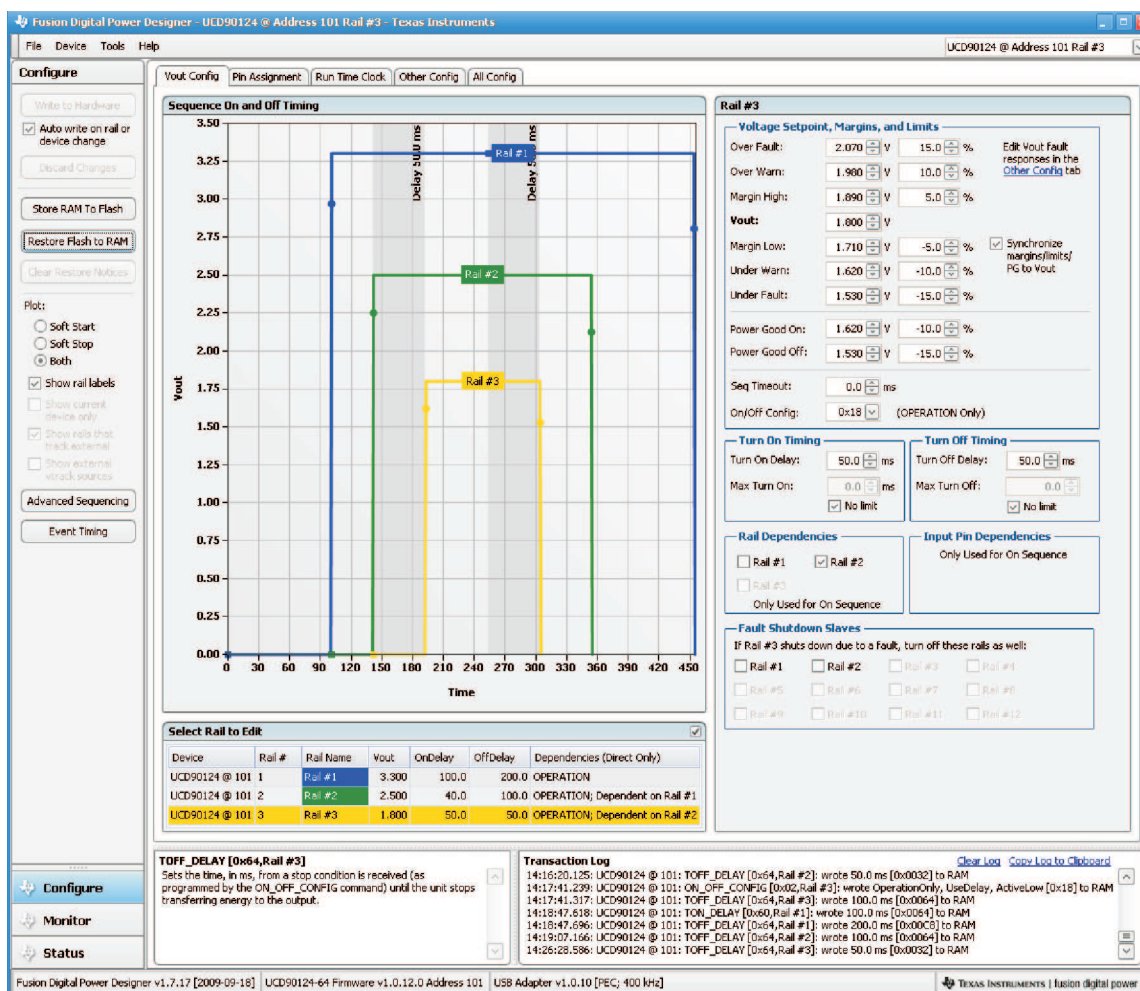


Figure 4. Fusion Vout-Config Tab

The **Synchronize margins/limits/PG to Vout** checkbox is an easy way to change the nominal operating voltage of a rail and also update all of the other limits associated with that rail according to the percentages shown to the right of each entry.

The plot in the upper left section of [Figure 4](#) shows a simulation of the overall sequence-on and sequence-off configuration, including the nominal voltage, the turnon and turnoff delay times, the power-good on and power-good off voltages and any timing dependencies between the rails.

After a rail voltage has reached its **POWER_GOOD_ON** voltage and is considered to be in regulation, it is compared against two UV and two OV thresholds in order to determine if a warning or fault limit has been exceeded. If a fault is detected, the UCD90124 responds based on a variety of flexible, user-configured options. Faults can cause rails to restart, shut down immediately, sequence off using turnoff delay times or shut down a group of rails and sequence them back on. Different types of faults can result in different responses.

Vout Config
Pin Assignment
Run Time Clock
Other Config
All Config

Device Info
Device ID: UCD90124|1.0.13.0000|090918
Capability: Max Bus: 400 KHz; PEC: Yes; SMBALERT#: Yes
PMBus Revision: 1.1/1.1
Vout Mode: EXP -12
IC Package: QFN-64

Other Warning & Fault Limits

| | | |
|---------------------|--------|--------|
| | Warn | Fault |
| Iout Over Current: | 0.00 A | 0.00 A |
| Iout Under Current: | | 0.00 A |
| Over Temp: | 255 °C | 255 °C |

Vout warning and fault limits are edited in the [Vout Config](#) tab; Vout fault responses are edited below

Manufacturing Info
Manuf Date: (max 6 chars)
Manuf ID: (max 18 chars)
Manuf Location: (max 12 chars)
Manuf Model: (max 12 chars)
Manuf Revision: (max 12 chars)
Manuf Serial: (max 12 chars)

These fields can be customized to suit your needs and are not used at runtime by the device.

Fault Responses
Time between restarts: msec
Voltage fault max glitch time: msec
Non-voltage fault max glitch time: msec

| Fault | Glitch Filter | Response | Restart | |
|--------------------|---------------|-----------------------|-----------------------|----------------------|
| Vout Over Voltage | Disabled | Ignore | N/A | Edit |
| Vout Under Voltage | Disabled | Shut down immediately | Restart up to 1 times | Edit |
| Iout Over Current | Disabled | Ignore | N/A | Edit |
| Iout Under Current | Disabled | Ignore | N/A | Edit |
| Over Temp | Disabled | Ignore | N/A | Edit |
| Time On Max | Disabled | Shut down immediately | Restart continuously | Edit |

Scaling
Vout Scale Monitor: Iout Cal Gain: mΩ Temp Cal Gain: °C/V
Vout Cal Monitor: V Iout Cal Offset: A Temp Cal Offset: °C

Figure 5. Fusion Other Config Tab for Fault Responses

Fault responses, along with a number of other parameters including user-specific manufacturing information and external scaling and offset values, are selected in the Fusion **Other Config** tab. Once the configuration satisfies the user requirements, it can be written to device SRAM if Fusion is connected to a UCD90124 using an I²C/PMBus. SRAM contents can then be stored to data flash memory so that the configuration remains in the device after a reset or power cycle.

The Fusion Monitor page has a number of options, including a device dashboard and a system dashboard, for viewing and controlling device and system status.

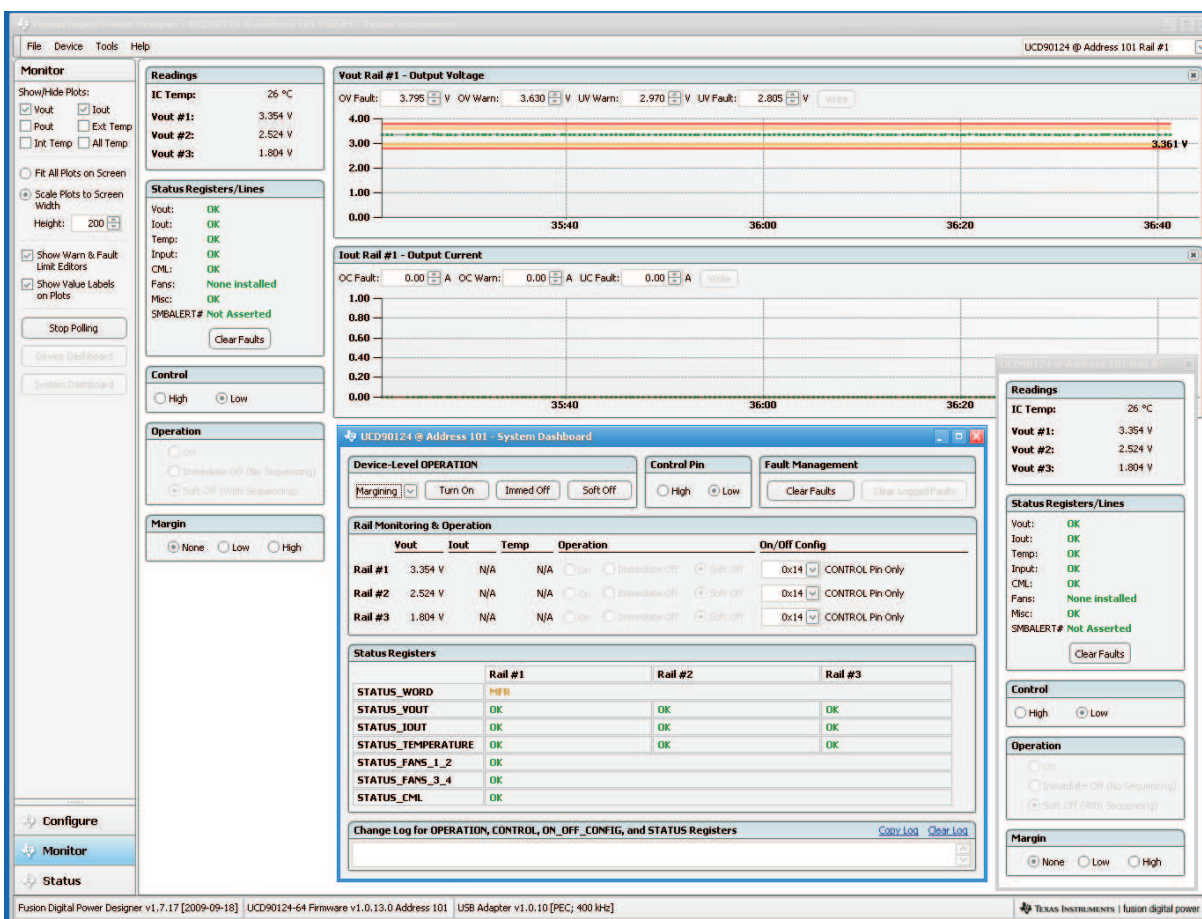


Figure 6. Fusion Monitor Page with Device Dashboard and System Dashboard

The UCD90124 also has status registers for each rail and the capability to log faults to flash memory for use in system troubleshooting. This is helpful in the event of a power-supply or system failure. The status registers (Figure 7) and the fault log (Figure 8) are available in Fusion. See the *UCD90xxx Sequencer and System Health Controller PMBus Command Reference* and the *PMBus Specification* for detailed descriptions of each status register and supported PMBus commands.

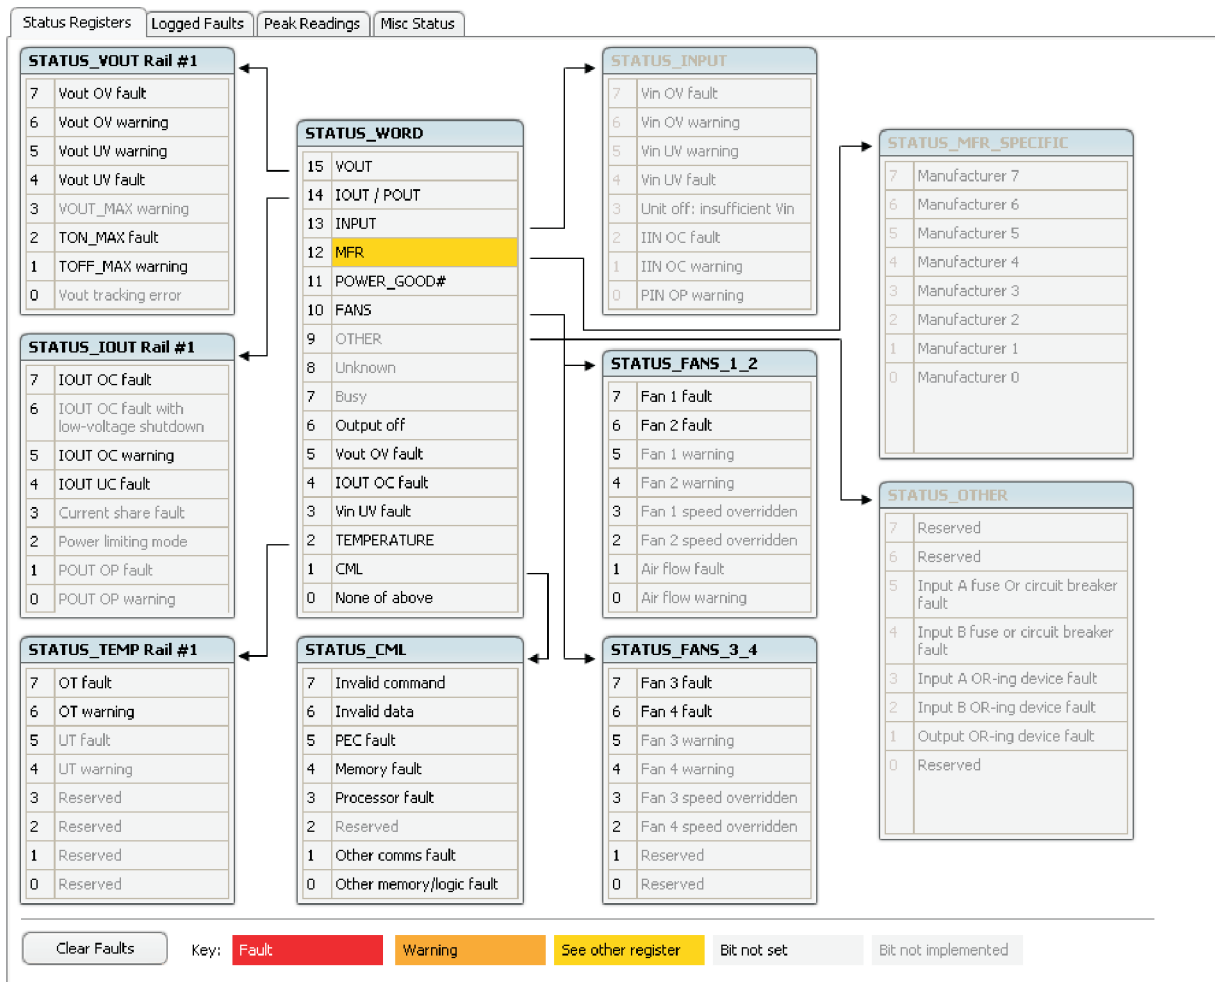


Figure 7. Fusion Rail-Status Register

Figure 8 displays the Fusion Flash-Error Log (Logged Faults). The interface shows a list of common faults, rail-specific faults, and a detailed log of 10 faults.

Common Faults:

- 7: Fan #4 fault
- 6: Fan #3 fault
- 5: Fan #2 fault
- 4: Fan #1 fault
- 3: Watchdog Timeout
- 2: Re-Sequence Error
- 1: Reserved
- 0: Log not empty

Rail #1 Faults:

- 7: Slaved Fault
- 6: SEQ_TIMEOUT
- 5: OT fault
- 4: IOUT UC fault
- 3: IOUT OC fault
- 2: TON_MAX fault
- 1: Vout UV fault
- 0: Vout OV fault

Rail #2 Faults:

- 7: Slaved Fault
- 6: SEQ_TIMEOUT
- 5: OT fault
- 4: IOUT UC fault
- 3: IOUT OC fault
- 2: TON_MAX fault
- 1: Vout UV fault
- 0: Vout OV fault

Rail #3 Faults:

- 7: Slaved Fault
- 6: SEQ_TIMEOUT
- 5: OT fault
- 4: IOUT UC fault
- 3: IOUT OC fault
- 2: TON_MAX fault
- 1: Vout UV fault
- 0: Vout OV fault

Logged Faults Detail:

10 of 10 Logged Faults

| Fault # | Time | Rail | Fault Description |
|----------|-------------------------|---------|-------------------------|
| Fault #1 | 0 Days, 00:02:19.534 | Rail #4 | Vout OV fault |
| Fault #2 | 0 Days, 00:02:19.534 | Rail #3 | Vout OV fault @ 0.000 V |
| Fault #3 | 2009-09-22 09:28:29.173 | Rail #1 | Vout OV fault @ 0.000 V |
| Fault #4 | 2009-09-22 09:28:29.225 | Rail #1 | OT fault @ 23.0 °C |
| Fault #5 | 2009-09-22 09:37:47.418 | Rail #3 | Vout OV fault @ 0.000 V |
| Fault #6 | 2009-09-22 09:37:47.418 | Rail #2 | Vout OV fault @ 0.000 V |

Figure 8. Fusion Flash-Error Log (Logged Faults)

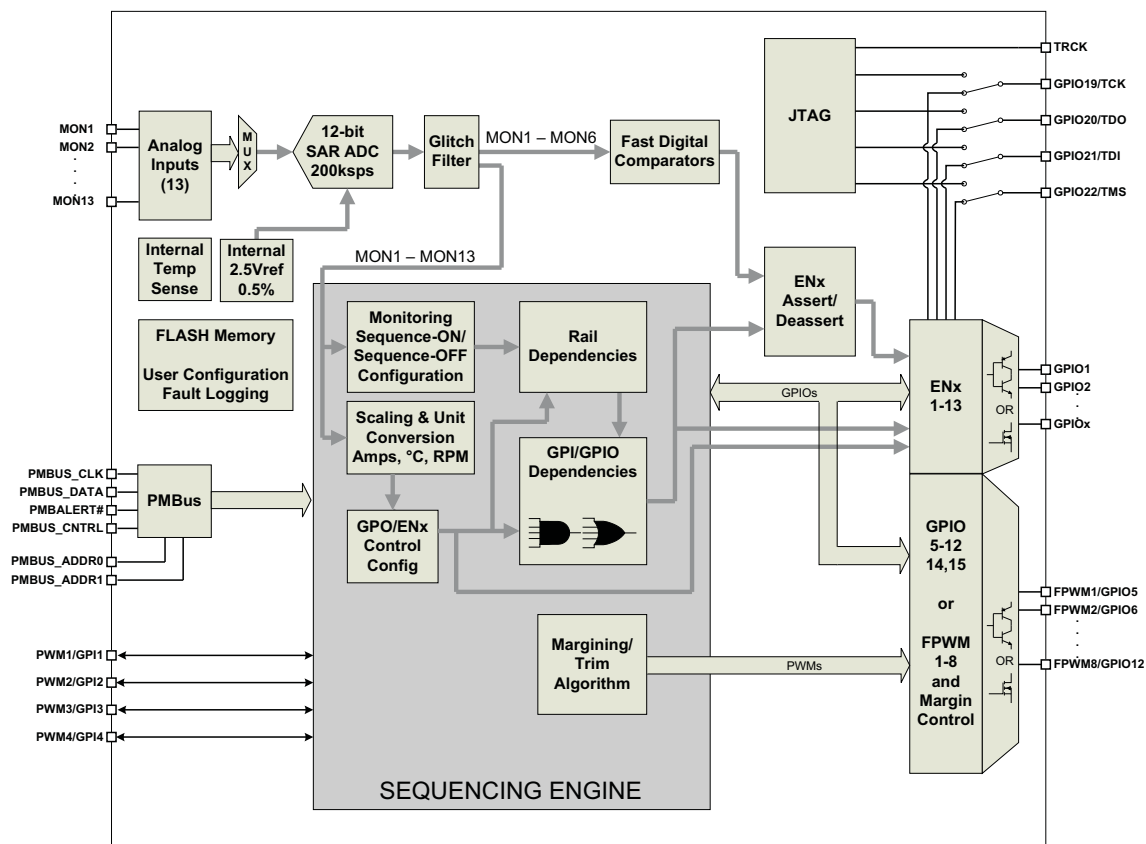


Figure 9. Detailed Block Diagram

POWER-SUPPLY SEQUENCING

The UCD90124 can control the turnon and turnoff sequencing of up to 12 voltage rails by using a GPIO to set a power-supply enable pin high or low. In PMBus-based designs, the system PMBus master can initiate a sequence-on event by asserting the PMBUS_CNTRL pin or by sending the OPERATION command over the I²C serial bus. In pin-based designs, the PMBUS_CNTRL pin can also be used to sequence-on and sequence-off.

The auto-enable setting ignores the OPERATION command and the PMBUS_CNTRL pin. Sequence-on is started at power up after any dependencies and time delays are met for each rail. A rail is considered to be on or within regulation when the measured voltage for that rail crosses the power-good on (POWER_GOOD_ON⁽¹⁾) limit. The rail is still in regulation until the voltage drops below power-good off (POWER_GOOD_OFF).

- (1) In this document configuration parameters such as Power Good On are referred to using Fusion GUI names. The UCD90xxx Sequencer and System Health Controller PMBus Command Reference name is shown in parentheses (POWER_GOOD_ON) the first time the parameter appears.

Turnon Sequencing

The following sequence-on options are supported for each rail:

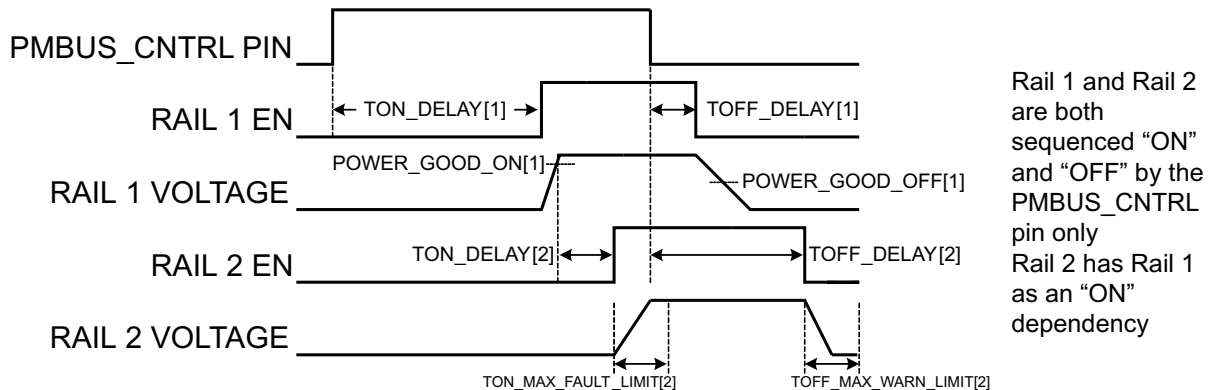


Figure 10. Sequence-on and Sequence-off Timing

- Monitor only – do not sequence-on
- Fixed delay time after a PMBus OPERATION command to turn on
- Fixed delay time after assertion of the PMBUS_CNTRL pin
- Fixed time after one or a group of parent rails achieves regulation
- Fixed time after a designated GPI has reached a user-specified state
- Any combination of the previous options

The maximum TON_DELAY time is 3276 ms.

Turn-off Sequencing

The following sequence-off options are supported for each rail:

- Monitor only – do not sequence-off
- Fixed delay time after a PMBus OPERATION command to turn off
- Fixed delay time after deassertion of the PMBUS_CNTRL pin
- Fixed delay time in response to an undervoltage, overvoltage, undercurrent, overcurrent, undertemperature, overtemperature, or max turnon fault on the rail
- Fixed delay time in response to a fault on a different rail when set as a fault shutdown slave to the faulted rail
- Fixed delay time in response to a GPIO reaching a user-specified state

The maximum TOFF_DELAY time is 3276 ms.

Sequencing Configuration Options

In addition to the turnon and turnoff sequencing options, the time between when a rail is enabled and when the monitored rail voltage must reach its power-good-on setting can be configured using max turnon (TON_MAX_FAULT_LIMIT). Max turnon can be set in 1-ms increments. A value of 0 ms means that there is no limit and the device can try to turn on the output voltage indefinitely.

Rails can be configured to turn off immediately or to sequence-off according to user-defined delay times. A sequenced shutdown is configured by selecting the appropriate turnoff delay (TOFF_DELAY) times for each rail. The turnoff delay times begin when the PMBUS_CNTRL pin is deasserted, when the PMBus OPERATION command is used to give a soft-stop command, or when a fault occurs on a rail that has other rails set as fault-shutdown slaves.

Shutdowns on one rail can initiate shutdowns of other rails or controllers. In systems with multiple UCD90124s, it is possible for each controller to be both a master and a slave to another controller.

VOLTAGE MONITORING

Up to 13 voltages can be monitored using the analog input pins. The input voltage range is 0 V–2.5 V for MON pins 1–6, 59, 62 and 63. Pins 50, 52, 54, and 56 can measure down to 0.2 V. Any voltage between 0 V and 0.2 V on these pins is read as 0.2 V. External resistors can be used to attenuate voltages higher than 2.5 V.

The ADC operates continuously, requiring 3.89 μ s to convert a single analog input and 54.5 μ s to convert all 14 of the analog inputs, including the onboard temperature sensor. Each rail is sampled by the sequencing and monitoring algorithm every 400 μ s. The maximum source impedance of any sampled voltage should be less than 4 k Ω . The source impedance limit is particularly important when a resistor-divider network is used to lower the voltage applied to the analog input pins.

MON pins selected for rail 1 through rail 6 have optional digital hardware comparators, which can be used to achieve faster fault responses. Each hardware comparator has two thresholds (one UV and one OV) as opposed to four software thresholds. The hardware comparators respond to UV or OV conditions in about 80 μ s (faster than 400 μ s for the ADC inputs) and can be used to disable rails or assert GPOs. The only fault response available for the hardware comparators is to shut down immediately.

An internal 2.5-V reference is used by the ADC. The ADC reference has a tolerance of $\pm 0.5\%$ between 0°C and 125°C and a tolerance of $\pm 1\%$ between –40°C and 125°C. An external voltage divider is required for monitoring voltages higher than 2.5 V. The nominal rail voltage and the external scale factor can be entered into the Fusion GUI and are used to report the actual voltage being monitored instead of the ADC input voltage. The nominal voltage is used to set the range and precision of the reported voltage according to [Table 1](#).

Table 1. Voltage Range and Resolution

| VOLTAGE RANGE (Volts) | RESOLUTION (millivolts) |
|--------------------------|----------------------------|
| 0 to 127.99805 | 1.95313 |
| 0 to 63.99902 | 0.97656 |
| 0 to 31.99951 | 0.48828 |
| 0 to 15.99976 | 0.24414 |
| 0 to 7.99988 | 0.12207 |
| 0 to 3.99994 | 0.06104 |
| 0 to 1.99997 | 0.03052 |
| 0 to 0.99998 | 0.01526 |

Although the monitor results can be reported with a resolution of about 15 μ V, the real conversion resolution of 610 μ V is fixed by the 2.5-V reference and the 12-bit ADC.

The MON pins can directly measure voltages, but each input can be defined as a voltage, current, or temperature. A single rail can include all three measurement types, each monitored on separate MON pins. If a rail has both voltage and current assigned to it, then power can be calculated and reported for the rail. Digital filtering applied to each MON input depends on the type of signal. Voltage inputs have no filtering. Current inputs have a low-pass filter with a time constant of about 1 second. Temperature inputs have a low-pass filter with a time constant of about 12.4 seconds.

CURRENT MONITORING

Current can be monitored using the analog inputs. External circuitry must be used in order to convert the current to a voltage within the range of the UCD90124 MONx input being used.

If a monitor input is configured as a current, the measurements are smoothed by a sliding-average digital filter with a time constant of approximately 1 second. The filter reduces the probability of false fault detections, and introduces a small delay to the current reading. If a rail is defined with a voltage monitor and a current monitor, then monitoring for undercurrent warnings begins once the rail voltage reaches POWER_GOOD_ON. If the rail does not have a voltage monitor, then current monitoring begins after TON_DELAY.

The device supports multiple PMBus commands related to current, including READ_IOUT, which reads external currents from the MON pins; IOUT_OC_FAULT_LIMIT, which sets the overcurrent fault limit; IOUT_OC_WARN_LIMIT, which sets the overcurrent warning limit; and IOUT_UC_FAULT_LIMIT, which sets the undercurrent fault limit. The *UCD90xxx Sequencer and System Health Controller PMBus Command Reference* contains a detailed description of how current fault responses are implemented using PMBus commands.

IOUT_CAL_GAIN is a PMBus command that allows the scale factor of an external current sensor and any amplifiers or attenuators between the current sensor and the MON pin to be entered by the user in milliohms. IOUT_CAL_OFFSET is the current that results in 0 V at the MON pin. The combination of these PMBus commands allows current to be reported in amperes.

REMOTE TEMPERATURE MONITORING AND INTERNAL TEMPERATURE SENSOR

The UCD90124 has support for internal and remote temperature sensing. The internal temperature sensor requires no calibration and can report the device temperature via the PMBus interface. The remote temperature sensor can report the remote temperature by using a configurable gain and offset for the type of sensor that is used in the application [P-N junction or a linear temperature sensor (LTS)] connected to the analog inputs.

External circuitry must be used in order to convert the temperature to a voltage within the range of the UCD90124 MONx input being used.

If an input is configured as a temperature, the measurements are smoothed by a sliding average digital filter with a time constant of approximately 12.4 seconds. The filter reduces the probability of false fault detections, and introduces a small delay to the temperature reading. The internal device temperature is measured using a silicon diode sensor with an accuracy of $\pm 5^{\circ}\text{C}$ and is also monitored using the ADC. Temperature monitoring begins immediately after reset and initialization.

The device supports multiple PMBus commands related to temperature, including READ_TEMPERATURE_1, which reads the internal temperature; READ_TEMPERATURE_2, which reads external temperatures; and OT_FAULT_LIMIT and OT_WARN_LIMIT, which set the overtemperature fault and warning limit. The *UCD90xxx Sequencer and System Health Controller PMBus Command Reference* contains a detailed description of how temperature-fault responses are implemented using PMBus commands.

TEMPERATURE_CAL_GAIN is a PMBus command that allows the scale factor of an external temperature sensor and any amplifiers or attenuators between the temperature sensor and the MON pin to be entered by the user in $^{\circ}\text{C}/\text{V}$. TEMPERATURE_CAL_OFFSET is the temperature that results in 0 V at the MON pin. The combination of these PMBus commands allows temperature to be reported in degrees Celsius.

Diode sensors require a different sensing technique. The UCD90124 measures the diode voltage at two different bias current settings. The UCD90124 calculates the temperature based on the difference between these two voltages using TEMPERATURE_CAL_GAIN and TEMPERATURE_CAL_OFFSET settings. Figure 11 shows a typical diode temperature-sensing circuit. When the I_{bias} source in the UCD90124 is off, the current through the diode is $(3.3\text{ V} - 0.3\text{ V}) / 1\text{ M}\Omega = \sim 3\text{ }\mu\text{A}$. When the I_{bias} source is on, the diode current is $\sim 3\text{ }\mu\text{A} + 10\text{ }\mu\text{A} = 13\text{ }\mu\text{A}$.

To reduce noise on the temperature measurement, a 1000-pF capacitor is recommended to be placed at the MONx input used to measure temperature.

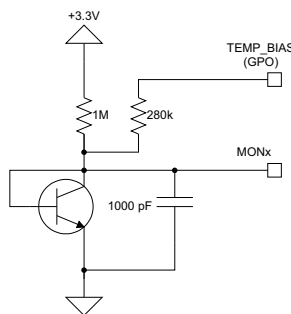


Figure 11. Diode Temperature-Sense Circuit

FAULT RESPONSES AND ALARM PROCESSING

Software monitors that the rail stays within a window of normal operation. There are two programmable warning levels (under and over) and two programmable fault levels (under and over). When any monitored voltage, current, or temperature goes outside of the warning or fault window, the PMBALERT# pin is asserted immediately, and the appropriate bits are set in the PMBus status registers (see [Figure 9](#)). Detailed descriptions of the status registers are provided in the *UCD90xxx Sequencer and System Health Controller PMBus Command Reference* and the *PMBus Specification*.

A programmable glitch filter can be enabled or disabled for each MON input. A glitch filter for an input defined as a voltage can be set between 0 and 102 ms with 400-μs resolution. A glitch filter for an input defined as a current or temperature can be between 0 and 25.5 seconds with 100-ms resolution. The longer time constants are due to the fixed low-pass digital filters associated with current and temperature inputs.

Fault-response decisions are based on results from the 12-bit ADC. The device cycles through the ADC results and compares them against the programmed limits. The time to respond to an individual event is determined by when the event occurs within the ADC conversion cycle and the selected fault response.

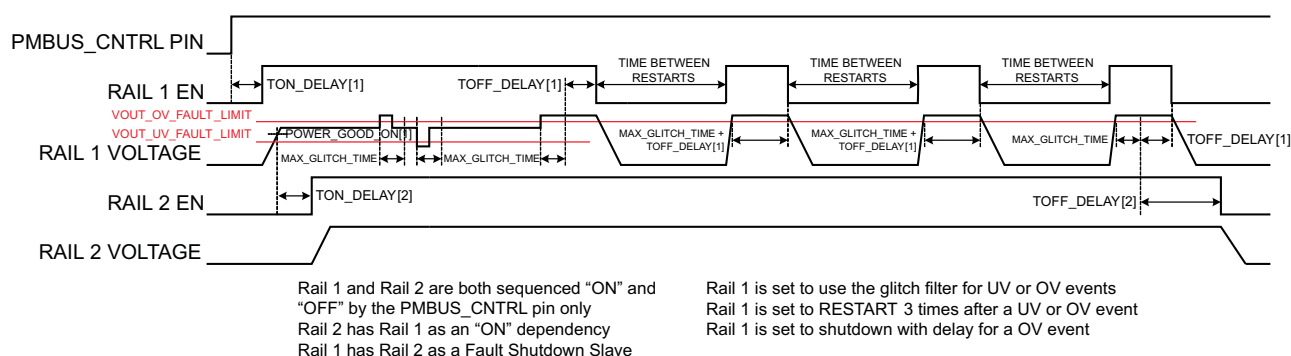


Figure 12. Sequencing and Fault-Response Timing

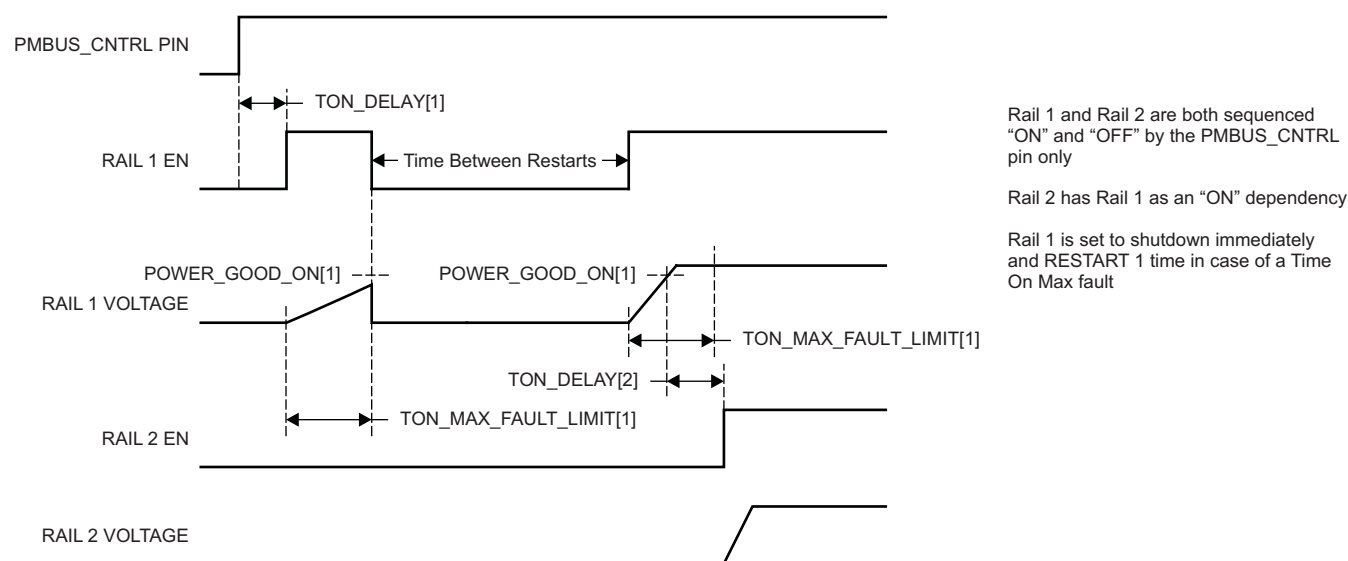


Figure 13. Maximum Turnon Fault

The configurable fault limits are:

Maximum turnon fault – Flagged if a rail that is enabled does not reach the POWER_GOOD_ON limit within the configured time

Undervoltage warning – Flagged if a voltage rail drops below the specified UV warning limit after reaching the POWER_GOOD_ON setting

Undervoltage fault – Flagged if a rail drops below the specified UV fault limit after reaching the POWER_GOOD_ON setting

Overvoltage warning – Flagged if a rail exceeds the specified OV warning limit at any time during startup or operation

Overvoltage fault – Flagged if a rail exceeds the specified OV fault limit at any time during startup or operation

Maximum turnoff warning – Flagged if a rail that is commanded to shut down does not reach 12.5% of the nominal rail voltage within the configured time

Faults are more serious than warnings. The PMBALERT# pin is always asserted immediately if a warning or fault occurs. If a warning occurs, the following takes place:

Warning Actions

- Immediately assert the PMBALERT# pin
- Status bit is flagged
- Assert a GPIO pin (optional)
- Warnings are not logged to flash

A number of fault response options can be chosen from:

Fault Responses

- *Continue Without Interruption:* Flag the fault and take no action
Shut Down Immediately: Shut down the faulted rail immediately and restart according to the rail configuration
- *Shut Down using TOFF_DELAY:* If a fault occurs on a rail, exhaust whatever retries are configured. If the rail does not come back, schedule the shutdown of this rail and all fault-shutdown slaves. All selected rails, including the faulty rail, are sequenced off according to their T_OFF_DELAY times. If Do Not Restart is selected, then sequence off all selected rails when the fault is detected.

Restart

- *Do Not Restart:* Do not attempt to restart a faulted rail after it has been shut down.
- *Restart Up To N Times:* Attempt to restart a faulted rail up to 14 times after it has been shut down. The time between restarts is measured between when the rail enable pin is deasserted (after any glitch filtering and turnoff delay times, if configured to observe them) and then reasserted. It can be set between 0 and 1275 ms in 5-ms increments.
- *Restart Continuously:* Same as *Restart Up To N Times* except that the device continues to restart until the fault goes away, it is commanded off by the specified combination of PMBus OPERATION command and PMBUS_CNTRL pin status, the device is reset, or power is removed from the device.
- *Shut Down Rails and Sequence On:* Shut down selected rails immediately or after continue-operation time is reached and then sequence-on those rails using turnon delay times

SHUT DOWN ALL RAILS AND SEQUENCE ON

In response to a fault, the UCD90124 can be configured to turn off a set of rails and then sequence them back on. To sequence all rails in the system, then all rails must be selected as fault-shutdown slaves of the faulted rail. If the faulted rail is set to stop immediately or stop with delay, then the rails designated as fault-shutdown slaves behave the same way. Shut-down-all-rails and sequence-on are not performed until retries are exhausted for a given fault.

While waiting for the rails to turn off, an error is reported if any of the rails reaches its TOFF_MAX_WARN_LIMIT. There is a configurable option to continue with the resequencing operation if this occurs. After the faulted rail and

UCD90124

SLVSA29A – NOVEMBER 2009 – REVISED DECEMBER 2009

www.ti.com

fault-shutdown slaves sequence-off, the UCD90124 waits for a programmable delay time between 0 and 1275 ms in increments of 5 ms and then sequences-on the faulted rail and fault-shutdown slaves according to the start-up sequence configuration. This is repeated until the faulted rail and fault-shutdown slaves successfully achieve regulation or for a user-selected 1, 2, 3, or 4 times. If the resequence operation is successful, the resequence counter is reset if all of the rails that were resequenced maintain normal operation for one second.

Once shut-down-all-rails and sequence-on begin, any faults on the fault-shutdown slave rails are ignored. If there are two or more simultaneous faults with different fault-shutdown slaves, the more conservative action is taken. For example, if a set of rails is already on its second resequence and the device is configured to resequence three times, and another set of rails enters the resequence state, that second set of rails is only resequenced once. Another example – if one set of rails is waiting for all of its rails to shut down so that it can resequence, and another set of rails enters the resequence state, the device now waits for all rails from both sets to shut down before resequencing.

GPIOs

The UCD90124 has 22 GPIO pins that can function as either inputs or outputs. Each GPIO has configurable output mode options including open-drain or push-pull outputs that can be actively driven to 3.3 V or ground. There are an additional four pins that can be used as either inputs or PWM outputs but not as GPOs. [Table 2](#) lists possible uses for the GPIO pins and the maximum number of each type for each use. GPIO pins can be dependents in sequencing and alarm processing. They can also be used for system-level functions such as external interrupts, power-goods, resets, or for the cascading of multiple devices. GPOs can be sequenced up or down by configuring a rail without a MON pin but with a GPIO set as an enable.

Table 2. GPIO Pin Configuration Options

| PIN NAME | PIN | RAIL EN (12 MAX) | GPI (8 MAX) | GPO (12 MAX) | FAN TACH (4 MAX) | FAN PWM (4 MAX) | PWM OUT (12 MAX) | MARGIN PWM (12 MAX) |
|-------------------|-----|---------------------|----------------|-----------------|---------------------|--------------------|---------------------|------------------------|
| FPWM1/GPIO5 | 17 | X | X | X | X | X | X | X |
| FPWM2/GPIO6 | 18 | X | X | X | X | X | X | X |
| FPWM3/GPIO7 | 19 | X | X | X | X | X | X | X |
| FPWM4/GPIO8 | 20 | X | X | X | X | X | X | X |
| FPWM5/GPIO9 | 21 | X | X | X | X | X | X | X |
| FPWM6/GPIO10 | 22 | X | X | X | X | X | X | X |
| FPWM7/GPIO11 | 23 | X | X | X | X | X | X | X |
| FPWM8/GPIO12 | 24 | X | X | X | X | X | X | X |
| FANTAC1/GPI1/PWM1 | 31 | | X | | X | X | X | X |
| FANTAC2/GPI2/PWM2 | 32 | | X | | X | X | X | X |
| FANTAC3/GPI3/PWM3 | 42 | | X | | X | X | X | X |
| FANTAC4/GPI4/PWM4 | 41 | | X | | X | X | X | X |
| GPIO1 | 11 | X | X | X | X | | | |
| GPIO2 | 12 | X | X | X | X | | | |
| GPIO3 | 13 | X | X | X | X | | | |
| GPIO4 | 14 | X | X | X | X | | | |
| GPIO13 | 25 | X | X | X | X | | | |
| GPIO14 | 29 | X | X | X | X | | | |
| GPIO15 | 30 | X | X | X | X | | | |
| GPIO16 | 33 | X | X | X | X | | | |
| GPIO17 | 34 | X | X | X | X | | | |
| GPIO18 | 35 | X | X | X | X | | | |
| TCK/GPIO19 | 36 | X | X | X | X | | | |
| TDO/GPIO20 | 37 | X | X | X | X | | | |
| TDI/GPIO21 | 38 | X | X | X | X | | | |
| TMS/GPIO22 | 39 | X | X | X | X | | | |

GPI Special Functions

Figure 14 lists and describes five special input functions for which GPIs can be used. There can be no more than one pin assigned to each of these functions.

GPI Polarity:

☒ Active Low

☐ Active High

☐ Sequencing timeout source
If checked and SEQ_TIMEOUT is non-zero on any rail, a fault will occur if this pin does not go active within SEQ_TIMEOUT time after the rail reaches its power good state. SEQ_TIMEOUT is configured in Vout Config.

☐ Latched Statuses Clear Source
When a GPO uses a latched status type (_LATCH), you can configure a GPI that will clear the latched status.

☐ Input Source for Margin Enable
When this pin is asserted, all rails with margining enabled will be put in a margined state (low or high).

☐ Input Source for Margin Low/Not-High
When this pin is asserted, all rails with margining enabled will be put in a margined state (low or high).

☐ Fans Installed
When this pin is asserted, fan control will be enabled. If de-asserted, all fans configured will be ignored.

Figure 14. GPI Configuration – Special Input Functions

PWM Outputs

Pins 17–24 can be configured as fast pulse-width modulators (FPWMs). The frequency range is 15.259 kHz to 125 MHz. FPWMs can be configured as closed-loop margining outputs or general-purpose PWMs.

Any FPWM pin not used as a PWM output can be configured as a GPIO. One FPWM in a pair can be used as a PWM output and the other pin can be used as a GPO. The FPWM pins are actively driven low from reset when used as GPOs.

The frequency settings for the FPWMs apply to pairs of pins:

- FPWM1 and FPWM2 – same frequency
- FPWM3 and FPWM4 – same frequency
- FPWM5 and FPWM6 – same frequency
- FPWM7 and FPWM8 – same frequency

If an FPWM pin from a pair is not used while its companion is set up to function, it is recommended to configure the unused FPWM pin as an active-low open-drain GPO so that it does not disturb the rest of the system. By setting an FPWM, it automatically enables the other FPWM within the pair if it was not configured for any other functionality.

Pins 31, 32, 41, and 42 can be used as GPIs or PWM outputs.

If configured as PWM outputs, then limitations apply:

- PWM1 has a fixed frequency of 10 kHz
- PWM2 has a fixed frequency of 1 kHz
- PWM3 and PWM4 frequencies can be 0.93 Hz to 7.8125 MHz.

Programmable Multiphase PWMs

The FPWMs can be aligned with reference to their phase. The phase for each FPWM is configurable from 0° to 360°. This provides flexibility in PWM-based applications such as power-supply controller, digital clock generation, and others. See an example of four FPWMs programmed to have phases at 0°, 90°, 180° and 270° (Figure 15).

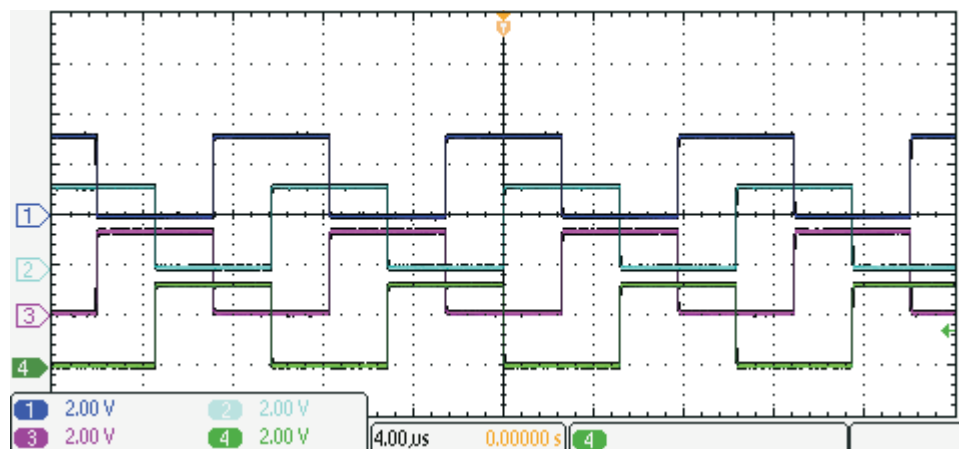


Figure 15. Multiphase PWMs

Power-Supply Enables

Each GPIO can be configured as a rail-enable pin with either active-low or active-high polarity. Output mode options include open-drain or push-pull outputs that can be actively driven to 3.3 V or ground. During reset, the GPIO pins are high-impedance except for FPWM/GPIO pins 17–24, which are driven low. External pulldown or pullup resistors can be tied to the enable pins to hold the power supplies off during reset. The UCD90124 can support a maximum of 12 enable pins.

Cascading Multiple Devices

A GPIO pin can be used to coordinate multiple controllers by using it as a power good-output from one device and connecting it to the PMBUS_CNTRL input pin of another. This imposes a master/slave relationship among multiple devices. During startup, the slave controllers initiate their start sequences after the master has completed its start sequence and all rails have reached regulation voltages. During shutdown, as soon as the master starts to sequence-off, it sends the shut-down signal to its slaves.

A shutdown on one or more of the master rails can initiate shutdowns of the slave devices. The master shutdowns can be initiated intentionally or by a fault condition. This method works to coordinate multiple controllers, but it does not enforce interdependency between rails within a single controller.

The PMBus specification implies that the power-good signal is active when ALL the rails in a controller are regulating at their programmed voltage. The UCD90124 allows GPIOs to be configured to respond to a desired subset of power-good signals.

GPO Dependencies

GPIOs can be configured as outputs that are based on Boolean combinations of up to four ANDs all ORed together (Figure 16). Inputs to the logic blocks can include GPIs and rail-status flags. One rail status type is selectable as an input for each AND gate in a Boolean block. For a selected rail status, the status flags of all active rails can be included as inputs to the AND gate. `_LATCH` rail-status types stay asserted until cleared by a MFR PMBus command or by a specially configured GPI pin. The different rail-status types are shown in Figure 18. See the *UCD90xxx Sequencer and System Health Controller PMBus Command Reference* for complete definitions of rail-status types.

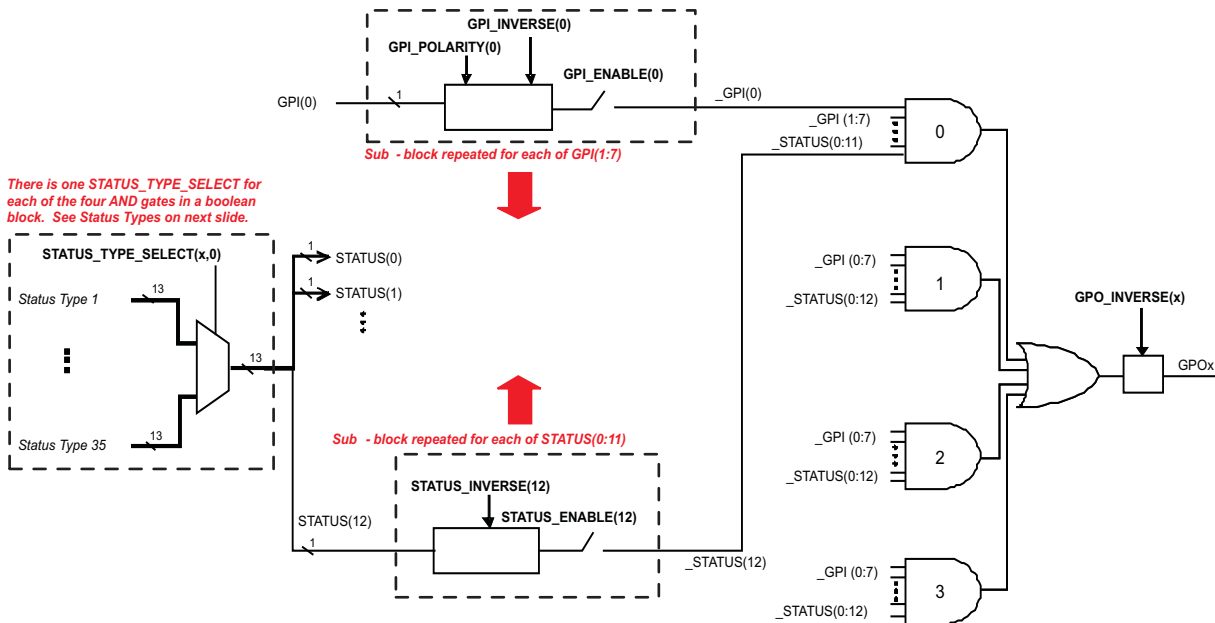


Figure 16. Boolean Logic Combinations

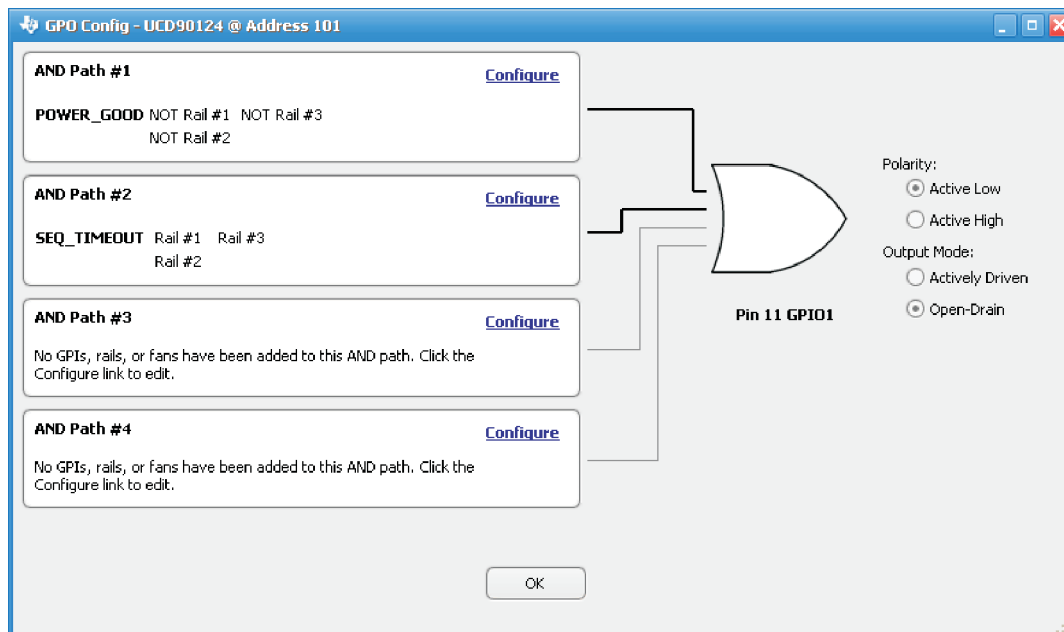


Figure 17. Fusion Boolean Logic Builder

| | | | |
|-----|----------------------------|-----|--------------------------------|
| 1. | POWER_GOOD(0:12) | 20. | TEMP_OT_FAULT(0:12) |
| 2. | VOUT_OV_FAULT(0:12) | 21. | TEMP_OT_FAULT_LATCH(0:12) |
| 3. | VOUT_OV_FAULT_LATCH(0:12) | 22. | TEMP_OT_WARN(0:12) |
| 4. | VOUT_OV_WARN(0:12) | 23. | TEMP_OT_WARN_LATCH(0:12) |
| 5. | VOUT_OV_WARN_LATCH(0:12) | 24. | INPUT_VIN_OV_FAULT(0:12) |
| 6. | VOUT_UV_WARN(0:12) | 25. | INPUT_VIN_OV_FAULT_LATCH(0:12) |
| 7. | VOUT_UV_WARN_LATCH(0:12) | 26. | INPUT_VIN_OV_WARN(0:12) |
| 8. | VOUT_UV_FAULT(0:12) | 27. | INPUT_VIN_OV_WARN_LATCH(0:12) |
| 9. | VOUT_UV_FAULT_LATCH(0:12) | 28. | INPUT_VIN_UV_WARN(0:12) |
| 10. | VOUT_TON_FAULT(0:12) | 29. | INPUT_VIN_UV_WARN_LATCH(0:12) |
| 11. | VOUT_TON_FAULT_LATCH(0:12) | 30. | INPUT_VIN_UV_FAULT(0:12) |
| 12. | VOUT_TOFF_WARN(0:12) | 31. | INPUT_VIN_UV_FAULT_LATCH(0:12) |
| 13. | VOUT_TOFF_WARN_LATCH(0:12) | 32. | MFR_SEQ_TIMEOUT(0:12) |
| 14. | IOUT_OC_FAULT(0:12) | 33. | MFR_SEQ_TIMEOUT_LATCH(0:12) |
| 15. | IOUT_OC_FAULT_LATCH(0:12) | | |
| 16. | IOUT_OC_WARN(0:12) | | |
| 17. | IOUT_OC_WARN_LATCH(0:12) | | |
| 18. | IOUT_UC_FAULT(0:12) | | |
| 19. | IOUT_UC_FAULT_LATCH(0:12) | | |

Figure 18. Rail-Status Types

MARGINING

Margining is used in product validation testing to verify that the complete system works properly over all conditions, including minimum and maximum power-supply voltages, load range, ambient temperature range, and other relevant parameter variations. Margining can be controlled over PMBus using the OPERATION command or by configuring two GPIO pins as margin-EN and margin-UP/DOWN inputs. The MARGIN_CONFIG command in the *UCD90xxx Sequencer and System Health Controller PMBus Command Reference* describes different available margining options, including ignoring faults while margining and using closed-loop margining to trim the power-supply output voltage one time at power up.

Open-loop margining is done by connecting a power-supply feedback node to ground through one resistor and to the margined power supply output (V_{OUT}) through another resistor. The power-supply regulation loop responds to the change in feedback node voltage by increasing or decreasing the power-supply output voltage to return the feedback voltage to the original value. The voltage change is determined by the fixed resistor values and the voltage at V_{OUT} and ground. Two GPIO pins must be configured as open-drain outputs for connecting resistors from the feedback node of each power supply to V_{OUT} or ground.

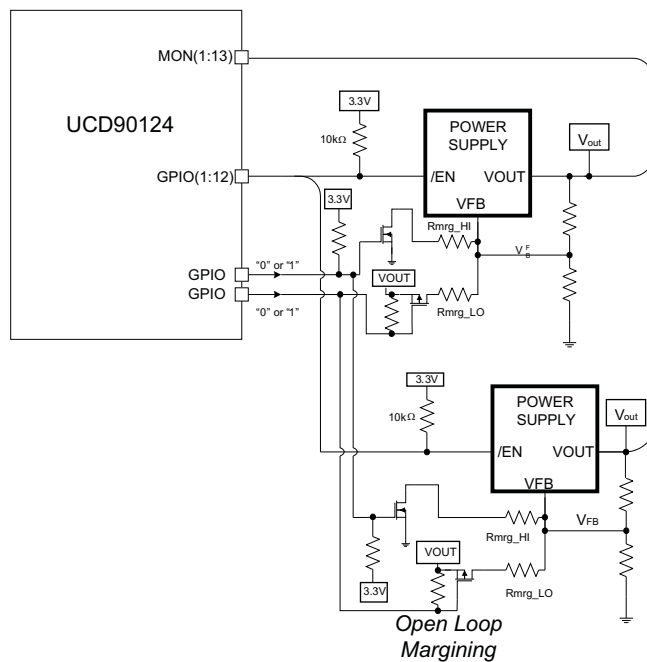


Figure 19. Open-Loop Margining

Closed-loop margining uses a PWM or FPWM output for each power supply that is being margined. An external RC network converts the FPWM pulse train into a dc margining voltage. The margining voltage is connected to the appropriate power-supply feedback node through a resistor. The power-supply output voltage is monitored, and the margining voltage is controlled by adjusting the PWM duty cycle until the power-supply output voltage reaches the margin-low and margin-high voltages set by the user. For more details on configuring the UCD90124 for margining, see the *Voltage Margining Using the UCD9012x* application note ([SLVA375](#)).

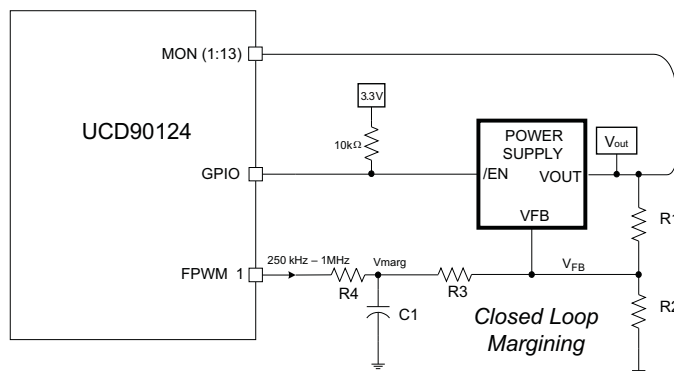


Figure 20. Closed-Loop Margining

UCD90124

SLVSA29A –NOVEMBER 2009–REVISED DECEMBER 2009

www.ti.com

FAN CONTROL

The UCD90124 can control and monitor up to four two-, three- or four-wire fans. Up to four GPIO pins can be used as tachometer inputs. The number of fan tach pulses per revolution for each fan can be entered using the Fusion GUI. A fan speed-fault threshold can be set to trigger an alarm if the measured speed drops below a user-defined value.

The two- and three-wire fans are controlled by connecting the positive input of the fan to the specified supply voltage for the fan. The negative input of the fan is connected to the collector or drain of a transistor. The transistor is turned off and on using a GPIO pin. Four-wire fans can be controlled the same way. However, four-wire fans should use the fan PWM input (the fourth wire). It can be driven directly by one of the eight FPWM or the two adjustable PWM outputs. The normal frequency range for the PWM input is 15 kHz to 40 kHz, but the specifications for the fan confirm the interface procedure.

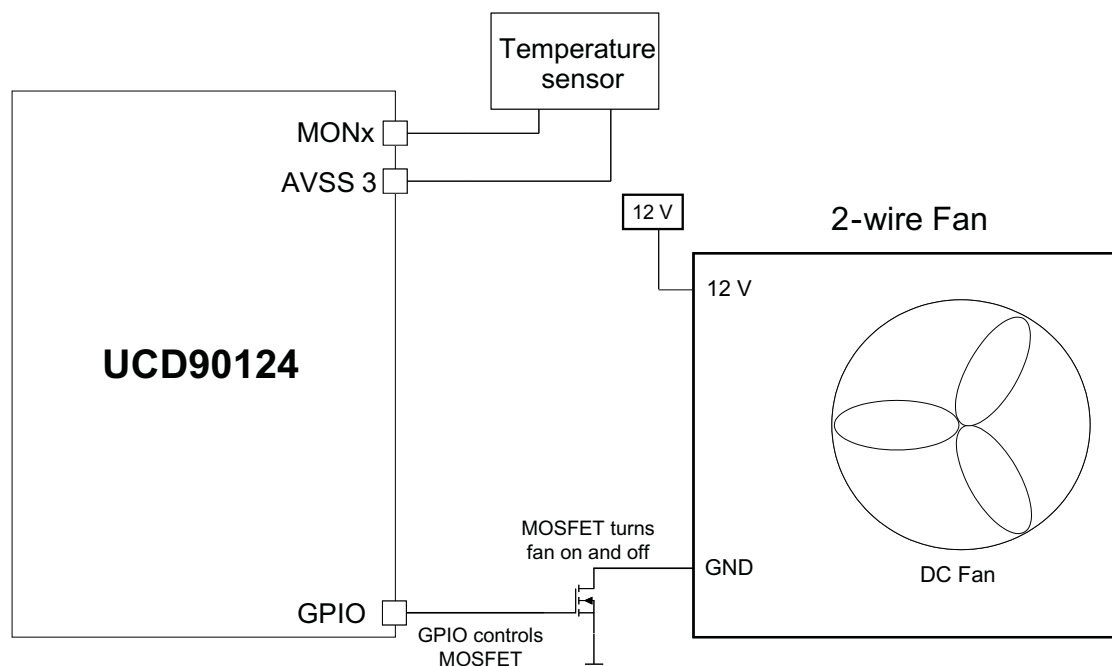


Figure 21. Two-Wire Fan Connection

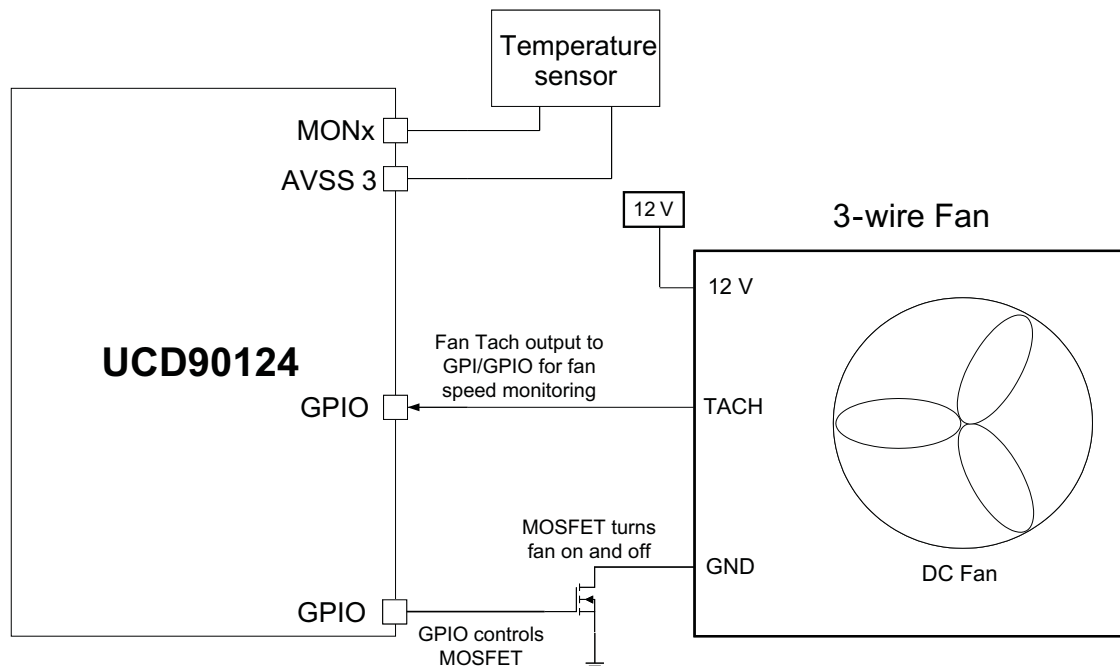


Figure 22. Three-Wire Fan Connection

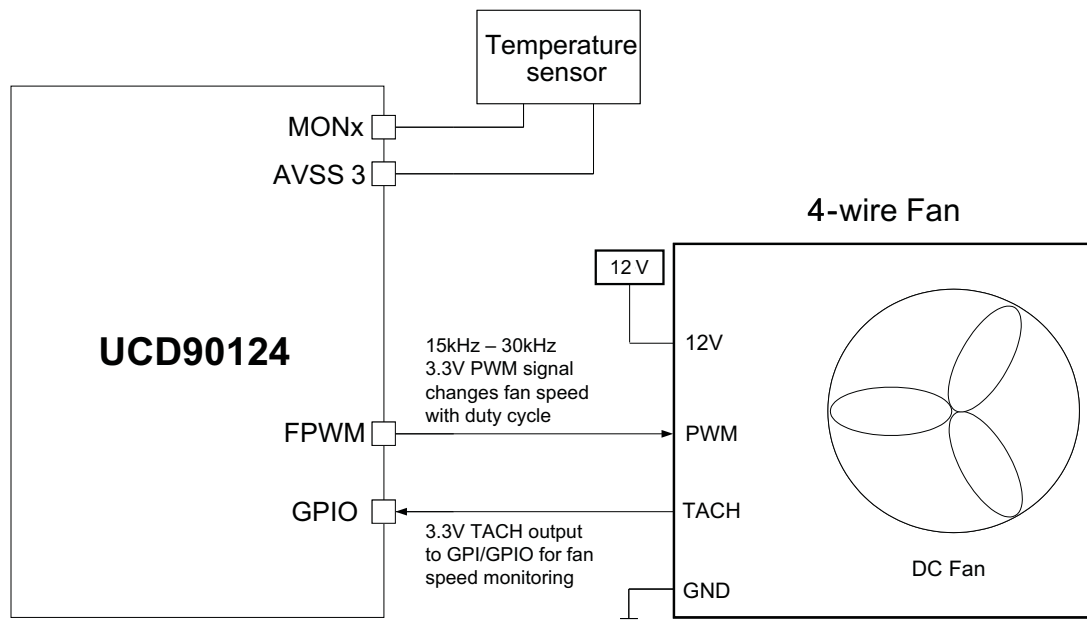


Figure 23. Four-Wire Fan Connection

The UCD90124 autocalibrate feature automatically finds and records the turnon, turnoff and maximum speeds and duty cycles for any fan. Fans have a minimum speed at which they turn on, a turn-off speed that is usually slightly lower than the turn-on speed, and a maximum speed that occurs at slightly less than 100% duty cycle. Each speed has a PWM duty cycle that goes with it. Every fan is slightly different, even if the model numbers are the same. The built-in temperature control algorithms use the actual measured operating speed range instead of 0 RPM to rated speed of the fan to improve the fan control algorithms. The user can choose whether to use autocalibrate or to manually enter the fan data.

UCD90124

SLVSA29A – NOVEMBER 2009 – REVISED DECEMBER 2009

www.ti.com

The UCD90124 can control up to four independent fans as defined in the PMBus standard. When enabled, the FAN-PWM control output provides a digital signal with a configurable frequency and duty cycle, with a duty cycle that is set based on the FAN_COMMAND_1 PMBus command. The PWM can be set to frequencies between 1 Hz and 125 MHz based on the UCD90124 PWM type selected for the fan control. The duty cycle can be set from 0% to 100% with 1% resolution. The FAN-TACH fan-control input counts the number of transitions in the tachometer output from the fan in each 1-second interval. The tachometer can be read by issuing the READ_FAN_SPEED_1 command. The speed is returned in RPMs.

Fault limits can also be set for the tachometer speed by issuing the FAN_SPEED_FAULT_LIMIT command and the status checked by issuing the STATUS_FAN_1_2 command. See the *UCD90xxx Sequencer and System Health Controller PMBus Command Reference* for a complete description of each command.

The UCD90124 also supports two fan control algorithms.

Hysteretic Fan Control

Temp_{ON} and Temp_{OFF} levels are input by the user. Temp_{ON} is higher than Temp_{OFF}. A GPIO pin is used to turn the fan or fans on at full speed when the monitored temperature reaches Temp_{ON} and to turn the fans off when the temperature drops below Temp_{OFF}.

Inputs: T_{ON}, T_{OFF}, T_{OT}, Update Interval, Rail where MEAS_TEMP is monitored, GPIOx pin

- System starts up at t = 0 seconds
- MEAS_TEMP = 25°C → ambient temp
- GPO/PWM is low and Fan is off
- Check MEAS_TEMP every 1 second (or 250 msec)
- When MEAS_TEMP = T_{ON}, set GPO/PWM = 1 → turn fan on
- Leave GPO/PWM = 1 unless MEAS_TEMP < T_{OFF}
- If MEAS_TEMP is > T_{ON}, declare a fault and take the prescribed action.

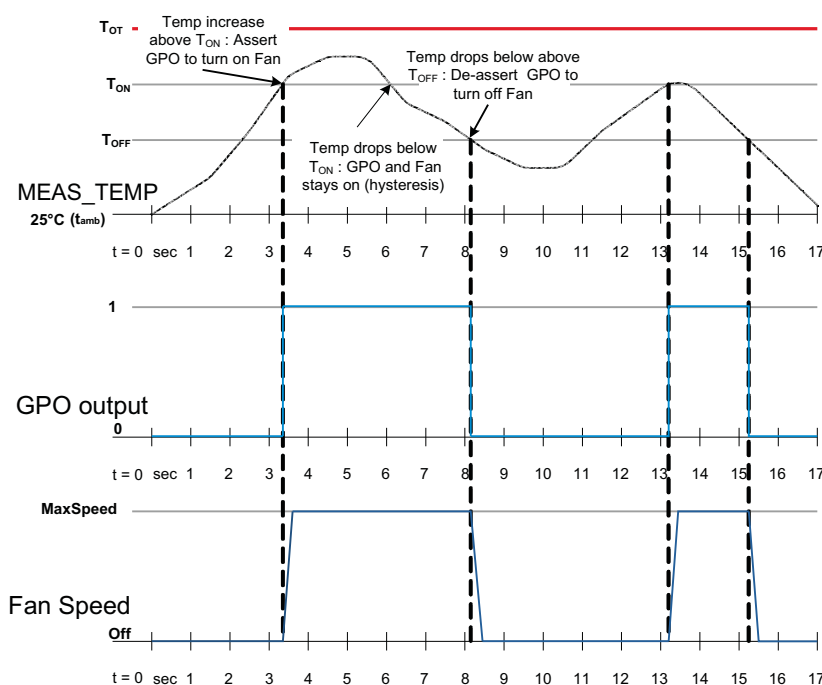


Figure 24. Hysteretic Temperature Control for 2- or 3-wire Fans

Set Point Fan Control

The second algorithm (Figure 25) uses five control set points that each have a temperature and a fan speed. When the monitored temperature increases above one of the set point temperatures, the fan speed is increased to the corresponding set point value. When the monitored temperature drops below a set point temperature, the fan speed is reduced to the corresponding set point value. The ramp rate for speed can be selected, allowing the user to optimize fan performance and minimize audible noise.

The fan speed is varied by changing the duty cycle of a PWM output. For two- and three-wire fans, as the fan is turned on and off, the inertia of the fan smoothes out the fan speed changes, resulting in variable speed operation. This approach can be taken with any fan, but would most likely be used with two- or three-wire fans at a PWM frequency in the 40-Hz to 80-Hz range. Four-wire fans would use the PWM input as described earlier in this section.

Inputs: T_{OT} , Updates Interval, Rail that MEAS_TEMP is being monitored on, PWM pin, PWM freq, PWM temp rate, FANTAC pin, 5x (TEMPn, SPEEDn) setpoints.

- System starts up at $t = 0$ seconds
- MEAS_TEMP = 25°C at ambient temp
- PWM DUTY_CYCLE = 0% and fan is off
- Check MEAS_TEMP every 250 ms (or 1 s)
- When MEAS_TEMP > TEMP1:
 - set SPEED_TARGET = SPEED1
 - increase DUTY_CYCLE to DUTY_CYCLE_ON
 - increase DUTY_CYCLE by ramp rate (10%/second) until SPEED = SPEED_TARGET
- When MEAS_TEMP > TEMP2:
 - set SPEED_TARGET = SPEED2
 - increase DUTY_CYCLE by ramp rate until SPEED = SPEED_TARGET
- Repeat as temperature is increased for each new setpoint
- If MEAS_TEMP > T_{OT} , declare a fault and take the prescribed action

- If temperature drops - above TEMP4 to below TEMP3 for example
 - when MEAS_TEMP drops below TEMP4, maintain SPEED4 → do not change the DUTY_CYCLE
 - when MEAS_TEMP drops below TEMP3, set SPEED_TARGET = SPEED3
 - decrease DUTY_CYCLE by ramp rate (10%/second) until SPEED = SPEED_TARGET
- To turn the fan off when MEAS_TEMP < TEMP1, set SPEED1 = 0 RPM

EXAMPLE: MEAS_TEMP = 25°C at ambient temp:

- $t = 0$ to 5 sec: MEAS_TEMP increases from ambient to TEMP1 → increases SPEED_TARGET from SPD0 (Off) to SPD1 → increases DUTY_CYCLE from 0% to DUTYON (30%) → ACTUAL fan speed ramps up from 0 RPM to SPD1.
- $t = 5$ to 10 sec: MEAS_TEMP increases > TEMP2 → increases SPEED_TARGET from SPD1 to SPD2 → increases DUTY_CYCLE → ACTUAL fan speed ramps up from SPD1 to SPD2.
- $t = 10$ to 25 sec: MEAS_TEMP increases to > TEMP5 → SPEED_TARGET increases from SPD2 to SPD5 → DUTY_CYCLE ramps to DUTYMAX → ACTUAL fan speed increases SPD5.
- $t = 25$ to 30 sec: MEAS_TEMP stays > TEMP5 → SPEED_TARGET and DUTY_CYCLE do not change → ACTUAL fan speed stays at SPD5.
- $t = 30$ to 35 sec: MEAS_TEMP decreases to < TEMP4 → SPEED_TARGET drops to SPD4 and then to SPD3 → decreases DUTY_CYCLE → ACTUAL fan speed ramps down from SPD5 to SPD3.
- $t = 35$ to 60 sec: MEAS_TEMP decreases to < TEMP1 → SPEED_TARGET drops to SPD0 → decreases DUTY_CYCLE to DUTYOFF → ACTUAL fan speed ramps down from SPD3 to SPD0 (Off).

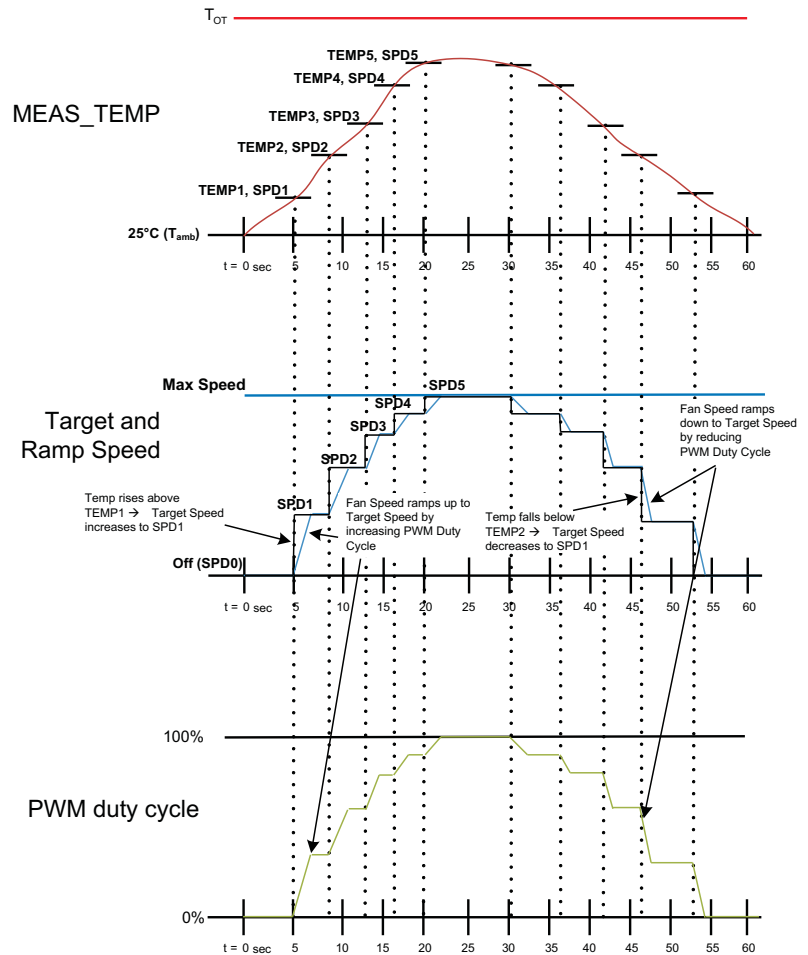


Figure 25. Temperature and Speed Set Point PWM Control for Four-Wire Fans

SYSTEM RESET SIGNAL

The UCD90124 can generate a programmable system-reset pulse as part of sequence-on. The pulse is created by programming a GPIO to remain deasserted until the voltage of a particular rail or combination of rails reach their respective POWER_GOOD_ON levels plus a programmable delay time. The system-reset pulse duration can be programmed as shown in [Table 3](#).

Table 3. System-Reset Pulse Duration

| Pulse Duration |
|----------------|
| 0 ms |
| 1 ms |
| 2 ms |
| 4 ms |
| 8 ms |
| 16 ms |
| 32 ms |
| 64 ms |
| 128 ms |
| 256 ms |
| 512 ms |
| 1.02 s |
| 2.05 s |
| 4.10 s |
| 8.19 s |
| 16.38 s |
| 32.8 s |

WATCH DOG TIMER

A GPI and GPO can be configured as a watchdog timer (WDT). The WDT can be independent of power-supply sequencing or tied to a GPIO configured to provide a system-reset signal. The WDT can be reset by toggling a watchdog input (WDI) pin or by writing to SYSTEM_WATCHDOG_RESET over I²C.

The WDT can be active immediately at power up or set to wait while the system initializes. [Table 4](#) lists the programmable wait times before the initial timeout sequence begins.

Table 4. WDT Initial Wait Time

| WDT INITIAL WAIT TIME |
|-----------------------|
| 0 ms |
| 100 ms |
| 200 ms |
| 400 ms |
| 800 ms |
| 1.6 s |
| 3.2 s |
| 6.4 s |
| 12.8 s |
| 25.6 s |
| 51.2 s |
| 102 s |
| 205 s |

Table 4. WDT Initial Wait Time (continued)

| WDT INITIAL WAIT TIME |
|-----------------------|
| 410 s |
| 819 s |
| 1638 s |

The watchdog timeout is programmable from 0 to 2.55 s with a 10-ms step size. If the WDT times out, the UCD90124 can assert a GPIO pin configured as WDO that is separate from a GPIO defined as system-reset pin, or it can generate a system-reset pulse. After a timeout, the WDT is restarted by toggling the WDI pin or by writing to SYSTEM_WATCHDOG_RESET over I²C.

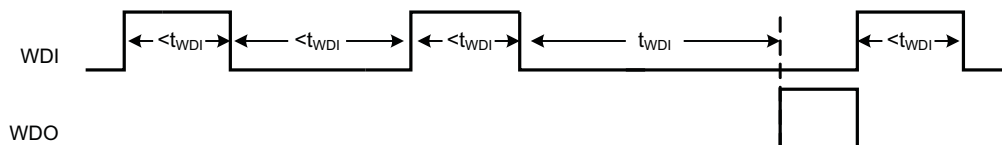


Figure 26. Timing of GPIOs Configured for Watchdog Timer Operation

DATA AND ERROR LOGGING TO FLASH MEMORY

The UCD90124 can log faults and the number of device resets to flash memory. Peak voltage, current, and temperature measurements are also stored for each rail. To reduce stress on the flash memory, a 30-second timer is started if a measured value exceeds the previously logged value. Only the highest value from the 30-second interval is written from RAM to flash.

Multiple faults can be stored in flash memory and can be accessed over PMBus to help debug power-supply bugs or failures. Each logged fault includes:

- Rail number
- Fault type
- Fault time since previous device reset
- Last measured rail voltage

The total number of device resets is also stored to flash memory. The value can be reset using PMBus.

With the brownout function enabled, the run-time clock value, peak monitor values, and faults are only logged to flash when a power-down is detected. The device run-time clock value is stored across resets or power cycles unless the brownout function is disabled, in which case the run-time clock is returned to zero after each reset.

It is also possible to update and calibrate the UCD90124 internal run-time clock via a PMBus host. For example, a host processor with a real-time clock could periodically update the UCD90124 run-time clock to a value that corresponds to the actual date and time. The host must translate the UCD90124 timer value back into the appropriate units, based on the usage scenario chosen. See the *REAL_TIME_CLOCK* command in the *UCD90xxx Sequencer and System Health Controller PMBus Command Reference* for more details.

BROWNOUT FUNCTION

The UCD90124 can be enabled to turn off all nonvolatile logging until a brownout event is detected. A brownout event occurs if V_{CC} drops below 2.9 V. In order to enable this feature, the user must provide enough local capacitance to deliver up to 80 mA for 5 ms while maintaining a minimum of 2.6 V at the device.

With this feature enabled, the UCD90124 saves faults, peaks, and other log data to SRAM during normal operation of the device. Once a brownout event is detected, all data is copied from SRAM to Flash. Use of this feature allows the UCD90124 to keep track of a single run-time clock that spans device resets or system power down (rather than resetting the run time clock after device reset). It can also improve the UCD90124 internal response time to events, because Flash writes are disabled during normal system operation. This is an optional feature and can be enabled using the *MISC_CONFIG* command. For more details, see the *UCD90xxx Sequencer and System Health Controller PMBus Command Reference*.

PMBus ADDRESS SELECTION

Two pins are allocated to decode the PMBus address. At power up, the device applies a bias current to each address-detect pin, and the voltage on that pin is captured by the internal 12-bit ADC. The PMBus address is calculated as follows.

$$\text{PMBus Address} = 12 \times \text{bin}(V_{\text{AD01}}) + \text{bin}(V_{\text{AD00}})$$

Where $\text{bin}(V_{\text{AD0x}})$ is the address bin for one of eight addresses as shown in Table 5. The address bins are defined by the MIN and MAX VOLTAGE RANGE (V). Each bin is a constant ratio of 1.25 from the previous bin. This method maintains the width of each bin relative to the tolerance of standard 1% resistors.

Table 5. PMBus Address Bins

| ADDRESS BIN | VPMBus PMBus VOLTAGE RANGE (V) | | RPMBus PMBus RESISTANCE (kΩ) |
|-------------|-----------------------------------|-------|---------------------------------|
| | MIN | MAX | |
| open | 2.226 | 3.300 | |
| 11 | 1.747 | 2.225 | 210 |
| 10 | 1.342 | 1.746 | 158 |
| 9 | 1.031 | 1.341 | 115 |
| 8 | 0.793 | 1.030 | 84.5 |
| 7 | 0.609 | 0.792 | 63.4 |
| 6 | 0.468 | 0.608 | 47.5 |
| 5 | 0.359 | 0.467 | 36.5 |
| 4 | 0.276 | 0.358 | 27.4 |
| short | 0 | 0.097 | |

A low impedance (short) on either address pin that produces a voltage below the minimum voltage causes the PMBus address to default to address 126 (0x7F). A high impedance (open) on either address pin that produces a voltage above the maximum voltage also causes the PMBus address to default to address 126 (0x7F).

Address 0 is not used because it is the PMBus general-call address. Addresses 11 and 127 can not be used by this device or any other device that shares the PMBus with it, because those are reserved for manufacturing programming and test. It is recommended that address 126 not be used for any devices on the PMBus, because this is the address that the UCD90124 defaults to if the address lines are shorted to ground or left open. Other SMBus/PMBus addresses have been assigned for specific devices. For a system with other types of devices connected to the same PMBus, see the SMBus device address assignments table in Appendix C of the latest version of the System Management Bus (SMBus) specification. The SMBus specification can be downloaded at <http://smbus.org/specs/smbus20.pdf>.

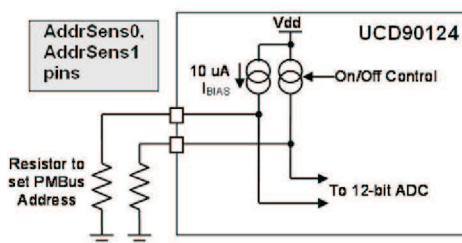


Figure 27. PMBus Address-Detection Method

HIGH VOLTAGE SUPPLY VOLTAGE REGULATOR

The UCD90124 requires 3.3 V to operate. It can be provided directly on the various V_{33x} pins using an external

3.3-V regulator, or it can be generated from a higher voltage using a built-in series regulator and an external transistor. The external transistor must be an NPN device with a beta of at least 40 and a V_{CE} rating appropriate for the high supply voltage. Figure 28 shows a typical circuit using the external series pass transistor. The NPN emitter output becomes the 3.3-V supply for the chip. A 4.7- μ F bypass capacitor is required to stabilize the series regulator.

To design this circuit, Q must be selected first. Two things are important about this NPN transistor: rated power and beta value (β or h_{FE}). A higher beta allows R to be larger, which results in a more efficient circuit. Also, Q must be able to dissipate the power lost in it, as it is the pass element in this linear regulator. This power can be calculated from Equation 1:

$$P_{diss_Q} = (V_{in_max} - 3.3 \text{ V}) \times I_{UCD90124} \quad (1)$$

$I_{UCD90124}$ is the maximum current drawn by the controller on the V33A and V33D pins and is 50 mA for the UCD90124.

Once a transistor is selected, R must be sized based on the maximum input voltage. At V_{in_max} , the current through R is highest, because the base voltage is still held at ~4 V. At high V_{in} , the base current is also constant, as the emitter current is still the same. Thus at V_{in_max} , more current must be sunk by the V33FB pin. Good design practice dictates keeping the current sink required by the V33FB pin at high input voltage to half of the maximum rating for the V33FB pin, thus, 5 mA. This corresponds to a minimum value for R. Therefore R must be set by Equation 2:

$$R = \frac{V_{in_max} - 4 \text{ V}}{5 \text{ mA} + \left(\frac{I_{UCD90124}}{\beta + 1} \right)} \quad (2)$$

A maximum value of R corresponds to the minimum input voltage. This assumes that the V33FB pin is sinking no current and all the current through R flows into the base of the BJT. R must be below this value, or else the linear regulator does not operate reliably at low input voltage:

$$R < \frac{V_{in_min} - 4 \text{ V}}{\frac{I_{UCD90124}}{\beta + 1}} \quad (3)$$

If the value of R from Equation 3 is less than the value of R from Equation 2, then a transistor with a larger beta must be chosen. For completion, the power lost in R can be calculated from Equation 4:

$$P_{diss_R} = \frac{(V_{in_max} - 4 \text{ V})^2}{R} \quad (4)$$

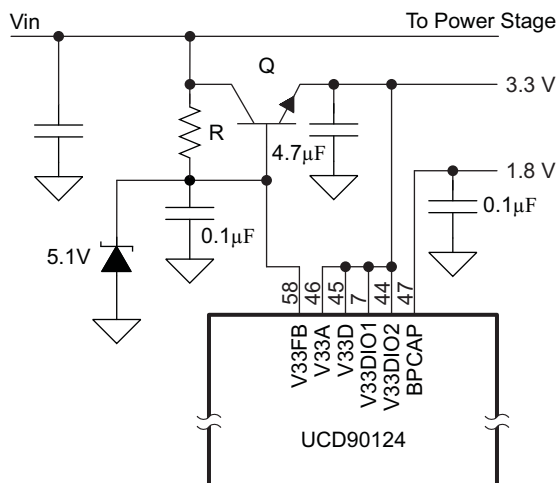


Figure 28. High-Voltage Supply With External Transistor

UCD90124

SLVSA29A – NOVEMBER 2009 – REVISED DECEMBER 2009

www.ti.com

Some circuits in the device require 1.8 V, which is generated internally from the 3.3-V supply. This voltage requires a 0.1-μF to 1-μF bypass capacitor from BPCAP to ground.

An external LDO, such as the TPS715A33, may be used to provide the needed 3.3 V instead of the previously described regulator. In this case, the V33FB pin may simply be left floating.

DEVICE RESET

The UCD90124 has an integrated power-on reset (POR) circuit which monitors the supply voltage. At power up, the POR detects the V_{33D} rise. When V_{33D} is greater than V_{RESET} , the device comes out of reset.

The device can be forced into the reset state by an external circuit connected to the \overline{RESET} pin. A logic-low voltage on this pin for longer than t_{RESET} holds the device in reset. It comes out of reset within 1 ms after \overline{RESET} is released and can return to a logic-high level. To avoid an erroneous trigger caused by noise, a pullup resistor to 3.3 V is recommended.

Any time the device comes out of reset, it begins an initialization routine that lasts about 20 ms. During the initialization routine, the FPWM pins are held low, and all other GPIO and GPI pins are open-circuit. At the end of initialization, the device begins normal operation as defined by the device configuration.

DEVICE CONFIGURATION AND PROGRAMMING

From the factory, the device contains the sequencing and monitoring firmware. It is also configured so that all GPOs are high-impedance, with no sequencing or fault-response operation. See *Configuration Programming of UCD Devices*, available at www.ti.com, for full UCD90124 configuration details.

After the user has designed a configuration file using Fusion, there are three general device-configuration programming options. Devices can be programmed in-circuit by a host microcontroller using PMBus commands over I²C to configure the device (see the *UCD90xxx Sequencer and System Health Controller PMBus Command Reference*).

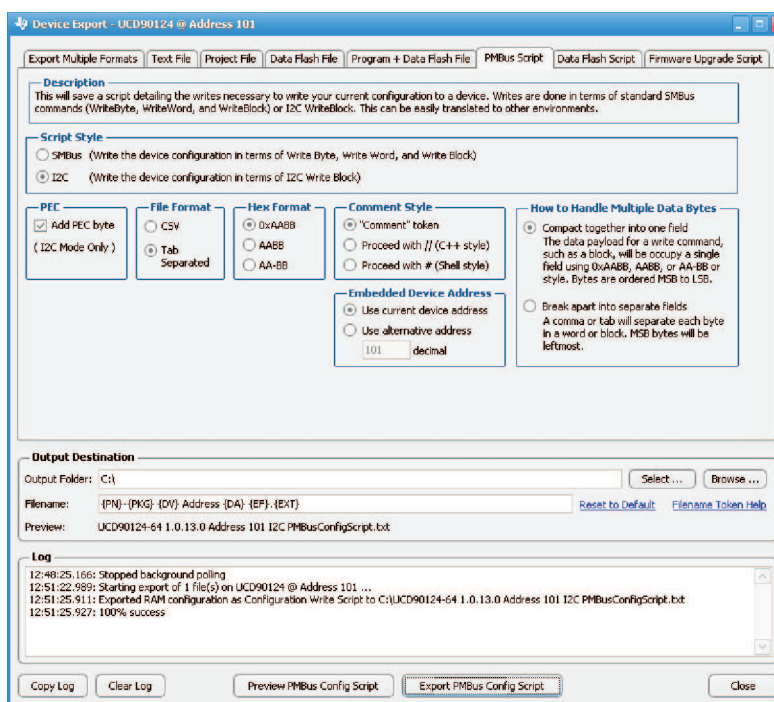


Figure 29. Fusion PMBus Configuration Script Export Tool

Each parameter write replaces the data in the associated memory (RAM) location. After all the required configuration data has been sent to the device, it is transferred to the associated nonvolatile memory (data flash) by issuing a special command, STORE_DEFAULT_ALL. This is how the Fusion GUI normally reads and writes a device configuration.

Fusion can create a PMBus or I²C command script file that can be used by the I²C master to configure the device. An example of a partial command script file is shown here:

```
Comment Format=Tab; Hex=CoderUpper; BreakOutBytes=False [DO NOT REMOVE THIS LINE IF YOU WANT TO IMPORT
USING THE FUSION GUI] Comment SMBus Fields are Request,Address,Command,Data Comment For reads, the
last field is what is expected back from the device Comment
Write MONITOR_CONFIG [MFR 05] Pin 1 MON1: Rail #1,
Type Voltage; Pin 2 MON2: Rail #2,
Type Voltage; Pin 3 MON3: Rail #3,
Type Voltage; Pin 4 MON4: Rail #4,
Type Voltage; Pin 5 MON5: Rail #5,
Type Voltage; Pin 6 MON6: Rail #6,
Type Voltage; Pin 59 MON7: Rail #7,
Type Voltage; Pin 62 MON8: Rail #8,
Type Voltage; Pin 63 MON9: Rail #9,
Type Voltage; Pin 50 MON10: Rail #10,
Type Voltage; Pin 52 MON11: Rail #11,
Type Voltage; Pin 54 MON12: Rail #12,
Type Voltage; Pin 56 MON13: Rail #1,
Type Temperature BlockWrite 0x65 0xD5 0x202122232425262728292A2B40
Comment Write GPI_CONFIG [MFR 41] Inputs: <None> BlockWrite 0x65 0xF9 0x000000000000000000000000
Comment Write SEQ_CONFIG [MFR 38,Rail #1] Rail Dep: <None> | Pin Dep: <None> | Fault Dep: <None> |
Enable: Pin 11 GPIO1 ActiveHigh ActivelyDrivenOutput
WriteByte 0x65 0x00 0x00
BlockWrite 0x65 0xF6 0x000000000000096
Comment Write SEQ_CONFIG [MFR 38,Rail #4] Rail Dep: <None> | Pin Dep: <None> | Fault Dep: <None> |
Enable: Pin 14 GPIO4 ActiveHigh ActivelyDrivenOutput
WriteByte 0x65 0x00 0x03 BlockWrite 0x65 0xF6 0x000000000000AE
Comment Write VOUT_SCALE_MONITOR [Rail #12] 0.500
WriteWord 0x65 0x2A 0x00B2 . . . Comment Store configuration to data flash Pause 100 Pausing 100 ms
Comment Execute STORE_DEFAULT_ALL SendByte 0x65 0x11 Pause 1000 Pausing 1,000 ms for StoreDefaultAll
```

Another in-circuit programming option is for Fusion to create a data flash image from the configuration file ([Figure 30](#)). The image file can be downloaded into the device using I²C or JTAG. Fusion Tools can be used on-board if Fusion can gain ownership of the target board I²C bus.

Devices can be programmed off board using TI Fusion Tools or a dedicated device programmer. For small runs, a ZIF socketed board with an I²C header can be used with the standard Fusion GUI or manufacturing GUI. Fusion can also create a data flash file that can then be loaded into the UCD90124 using a dedicated device programmer.

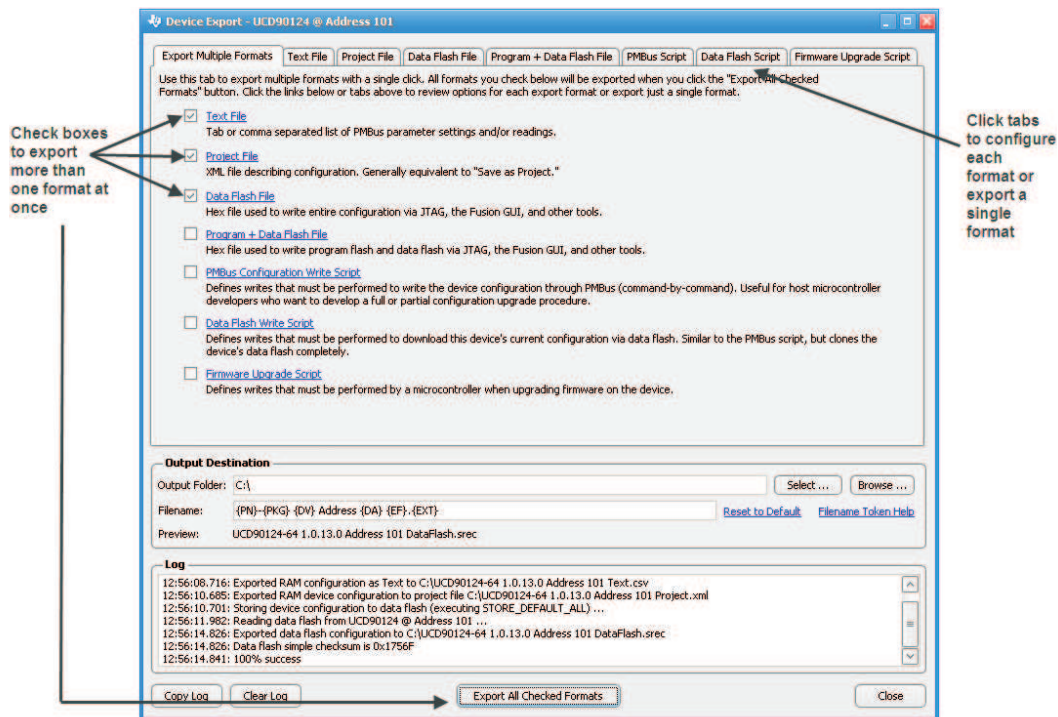


Figure 30. Fusion Device Configuration Export Tool

To configure the device over I²C or PMBus, the UCD90124 must be powered. The PMBus clock and data pins must be accessible and must be pulled high to the same V_{DD} supply that powers the device, with pullup resistors between 1 kΩ and 2 kΩ. Care should be taken to not introduce additional bus capacitance (<100 pF). The user configuration can be written to data flash using a gang programmer via JTAG or I²C before the device is installed in circuit. To use I²C, the clock and data lines must be multiplexed or the device addresses must be assigned by socket. Fusion tools can be used for socket addressing. Pre-programming can also be done using a single device test fixture.

Table 6. Configuration Options

| | Data Flash via JTAG | Data Flash via I ² C | PMBus Commands via I ² C |
|--------------------------------|------------------------------------|--|--|
| Off-Board Configuration | Data Flash Export (.svf type file) | Data Flash Export (.srec or hex type file) | Project file I ² C/PMBus script |
| | Dedicated programmer | Fusion tools (with exclusive bus access via USB to I ² C adapter) | Fusion tools (with exclusive bus access via USB to I ² C adapter) |
| On-Board Configuration | Data flash export | Fusion tools (with exclusive bus access via USB to I ² C adapter) | Fusion tools (with exclusive bus access via USB to I ² C adapter) |
| | IC | | |

The advantages of off-board configuration include:

- Does not require access to device I²C bus on board.
- Once soldered on board, full board power is available without further configuration.
- Can be partially reconfigured once the device is mounted.

JTAG INTERFACE

The JTAG port can be used for production programming. Four of the six JTAG pins can also be used as GPIOs during normal operation. See the Pin Functions table at the beginning of the document and [Table 2](#) for a list of the JTAG signals and which can be used as GPIOs. The JTAG port is compatible with the IEEE Standard 1149.1-1990, IEEE Standard Test-Access Port and Boundary Scan Architecture specification. Boundary scan is not supported on this device.

The JTAG interface can provide an alternate interface for programming the device. It is disabled by default in order to enable the GPIO pins with which it is multiplexed. There are three conditions under which the JTAG interface is enabled:

1. When the ROM_MODE PMBus command is issued
2. On power-up if the data flash is blank, allowing JTAG to be used for writing the configuration parameters to a programmed device with no PMBus interaction
3. When an invalid address is detected at power up. By shorting one of the address pins to ground, an invalid address can be generated that enables JTAG.

INTERNAL FAULT MANAGEMENT AND MEMORY ERROR CORRECTION (ECC)

The UCD90124 verifies the firmware checksum at each power up. If it does not match, then the device waits for I²C commands but does not execute the firmware. A device configuration checksum verification is also performed at power up. If it does not match, the factory default configuration is loaded. The PMBALERT# pin is asserted and a flag is set in the status register. The error-log checksum validates the contents of the error log to make sure that section of flash is not corrupted.

There is an internal firmware watchdog timer. If it times out, the device resets so that if the firmware program is corrupted, the device goes back to a known state. This is a normal device reset, so all of the GPIO pins are open-drain and the FPWM pins are driven low while the device is in reset. Checks are also done on each parameter that is passed, to make sure it falls within the acceptable range.

Error-correcting code (ECC) is used to improve data integrity and provide high-reliability storage of Data Flash contents. ECC uses dedicated hardware to generate extra check bits for the user data as it is written into the Flash memory. This adds an additional six bits to each 32-bit memory word stored into the Flash array. These extra check bits, along with the hardware ECC algorithm, allow for any single-bit error to be detected and corrected when the Data Flash is read.

APPLICATION INFORMATION

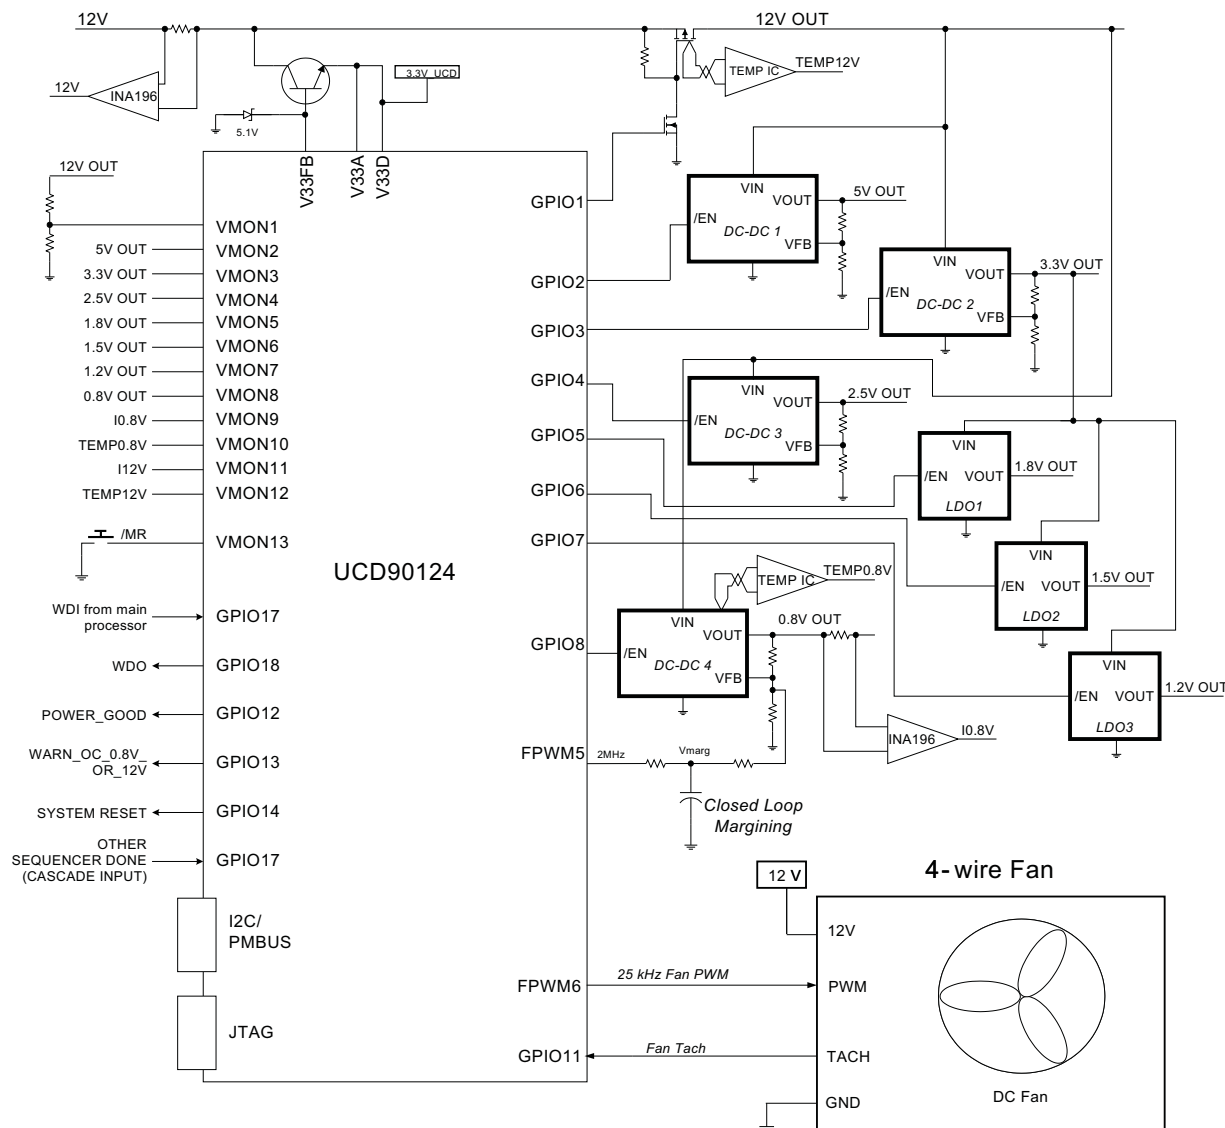


Figure 31. Typical Application Schematic

Layout guidelines

The thermal pad provides a thermal and mechanical interface between the device and the printed circuit board (PCB). While device power dissipation is not of primary concern, a more-robust thermal interface can help the internal temperature sensor provide a better representation of PCB temperature. Connect the exposed thermal pad of the PCB to the device V_{SS} pins and provide at least a 4 × 4 pattern of PCB vias to connect the thermal pad and V_{SS} pins to the circuit ground on other PCB layers.

For supply-voltage decoupling, provide power-supply pin bypass to the device as follows:

- 0.1- μ F, X7R ceramic in parallel with 0.01- μ F, X7R ceramic at pin 47 (BPCAP)
- 0.1- μ F, X7R ceramic in parallel with 4.7- μ F, X5R ceramic at pins 44 (V_{33DIO2}) and 45 (V_{33D})
- 0.1- μ F, X7R ceramic at pin 7 (V_{33DIO1})
- 0.1- μ F, X7R ceramic in parallel with 4.7- μ F, X5R ceramic at pin 46 (V_{33A})

Depending on use and application of the various GPIO signals used as digital outputs, some impedance control may be desired to quiet fast signal edges. For example, when using the FPWM pins for fan control or voltage margining, the pin is configured as a digital *clock* signal. Route these signals away from sensitive analog signals. It is also good design practice to provide a series impedance of 20 Ω to 33 Ω at the signal source to slow fast digital edges.

Estimating ADC Reporting Accuracy

The UCD90124 uses a 12-bit ADC and an internal 2.5-V reference (V_{REF}) to convert MON pin inputs into digitally reported voltages. The least significant bit (LSB) value is $V_{LSB} = V_{REF}/2^N$ where $N = 12$, resulting in a $V_{LSB} = 610$ μ V. The error in the reported voltage is a function of the ADC linearity errors and any variations in V_{REF} . The total unadjusted error (E_{TUE}) for the UCD90124 ADC is ± 5 LSB, and the variation of V_{REF} is $\pm 0.5\%$ between 0°C and 125°C and $\pm 1\%$ between -40°C and 125°C. V_{TUE} is calculated as $V_{LSB} \times E_{TUE}$. The total reported voltage error is the sum of the reference-voltage error and V_{TUE} . At lower monitored voltages, V_{TUE} dominates reported error, whereas at higher monitored voltages, the tolerance of V_{REF} dominates the reported error. Reported error can be calculated using Equation 5, where REFTOL is the tolerance of V_{REF} , V_{ACT} is the actual voltage being monitored at the MON pin, and V_{REF} is the nominal voltage of the ADC reference.

$$RPT_{ERR} = \left(\frac{1 + REFTOL}{V_{ACT}} \right) \times \left(\frac{V_{REF} \times E_{TUE}}{4096} + V_{ACT} \right) - 1 \quad (5)$$

From Equation 5, for temperatures between 0°C and 125°C, if $V_{ACT} = 0.5$ V, then $RPT_{ERR} = 1.11\%$. If $V_{ACT} = 2.2$ V, then $RPT_{ERR} = 0.64\%$. For the full operating temperature range of -40°C to 125°C, if $V_{ACT} = 0.5$ V, then $RPT_{ERR} = 1.62\%$. If $V_{ACT} = 2.2$ V, then $RPT_{ERR} = 1.14\%$.

REVISION HISTORY

| Changes from Original (November 2009) to Revision A | Page |
|---|------|
| • Changed Timing requirements table (t_r) From: See (Note Rise Time) To: See (Note Fall Time) | 5 |
| • Changed Timing requirements table (t_f) From: See (Note Fall Time) To: See (Note Rise Time) | 5 |
| • Changed text From: Fusion can create a PMBus or I ² C command script file that can be used by the I ² C master to configure the device (Figure 21). To: Fusion can create a PMBus or I ² C command script file that can be used by the I ² C master to configure the device. | 35 |
| • Changed Table 6 | 37 |

PACKAGING INFORMATION

| Orderable Device | Status ⁽¹⁾ | Package Type | Package Drawing | Pins | Package Qty | Eco Plan ⁽²⁾ | Lead/Ball Finish | MSL Peak Temp ⁽³⁾ |
|------------------|-----------------------|--------------|-----------------|------|-------------|-------------------------|------------------|------------------------------|
| UCD90124RGCR | ACTIVE | VQFN | RGC | 64 | 2000 | Green (RoHS & no Sb/Br) | CU NIPDAU | Level-3-260C-168 HR |
| UCD90124RGCT | ACTIVE | VQFN | RGC | 64 | 250 | Green (RoHS & no Sb/Br) | CU NIPDAU | Level-3-260C-168 HR |

⁽¹⁾ The marketing status values are defined as follows:

ACTIVE: Product device recommended for new designs.

LIFEBUY: TI has announced that the device will be discontinued, and a lifetime-buy period is in effect.

NRND: Not recommended for new designs. Device is in production to support existing customers, but TI does not recommend using this part in a new design.

PREVIEW: Device has been announced but is not in production. Samples may or may not be available.

OBSOLETE: TI has discontinued the production of the device.

⁽²⁾ Eco Plan - The planned eco-friendly classification: Pb-Free (RoHS), Pb-Free (RoHS Exempt), or Green (RoHS & no Sb/Br) - please check <http://www.ti.com/productcontent> for the latest availability information and additional product content details.

TBD: The Pb-Free/Green conversion plan has not been defined.

Pb-Free (RoHS): TI's terms "Lead-Free" or "Pb-Free" mean semiconductor products that are compatible with the current RoHS requirements for all 6 substances, including the requirement that lead not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, TI Pb-Free products are suitable for use in specified lead-free processes.

Pb-Free (RoHS Exempt): This component has a RoHS exemption for either 1) lead-based flip-chip solder bumps used between the die and package, or 2) lead-based die adhesive used between the die and leadframe. The component is otherwise considered Pb-Free (RoHS compatible) as defined above.

Green (RoHS & no Sb/Br): TI defines "Green" to mean Pb-Free (RoHS compatible), and free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material)

⁽³⁾ MSL, Peak Temp. -- The Moisture Sensitivity Level rating according to the JEDEC industry standard classifications, and peak solder temperature.

Important Information and Disclaimer: The information provided on this page represents TI's knowledge and belief as of the date that it is provided. TI bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. TI has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. TI and TI suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.

In no event shall TI's liability arising out of such information exceed the total purchase price of the TI part(s) at issue in this document sold by TI to Customer on an annual basis.

TAPE AND REEL INFORMATION


*All dimensions are nominal

| Device | Package Type | Package Drawing | Pins | SPQ | Reel Diameter (mm) | Reel Width W1 (mm) | A0 (mm) | B0 (mm) | K0 (mm) | P1 (mm) | W (mm) | Pin1 Quadrant |
|--------------|--------------|-----------------|------|------|--------------------|--------------------|---------|---------|---------|---------|--------|---------------|
| UCD90124RGCR | VQFN | RGC | 64 | 2000 | 330.0 | 16.4 | 9.3 | 9.3 | 1.5 | 12.0 | 16.0 | Q2 |
| UCD90124RGCT | VQFN | RGC | 64 | 250 | 180.0 | 16.4 | 9.3 | 9.3 | 1.5 | 12.0 | 16.0 | Q2 |


TAPE AND REEL BOX DIMENSIONS




*All dimensions are nominal

| Device | Package Type | Package Drawing | Pins | SPQ | Length (mm) | Width (mm) | Height (mm) |
|--------------|--------------|-----------------|------|------|-------------|------------|-------------|
| UCD90124RGCR | VQFN | RGC | 64 | 2000 | 346.0 | 346.0 | 33.0 |
| UCD90124RGCT | VQFN | RGC | 64 | 250 | 190.5 | 212.7 | 31.8 |

RGC(S-PVQFN-N64) CUSTOM DEVICE PLASTIC QUAD FLATPACK NO-LEAD

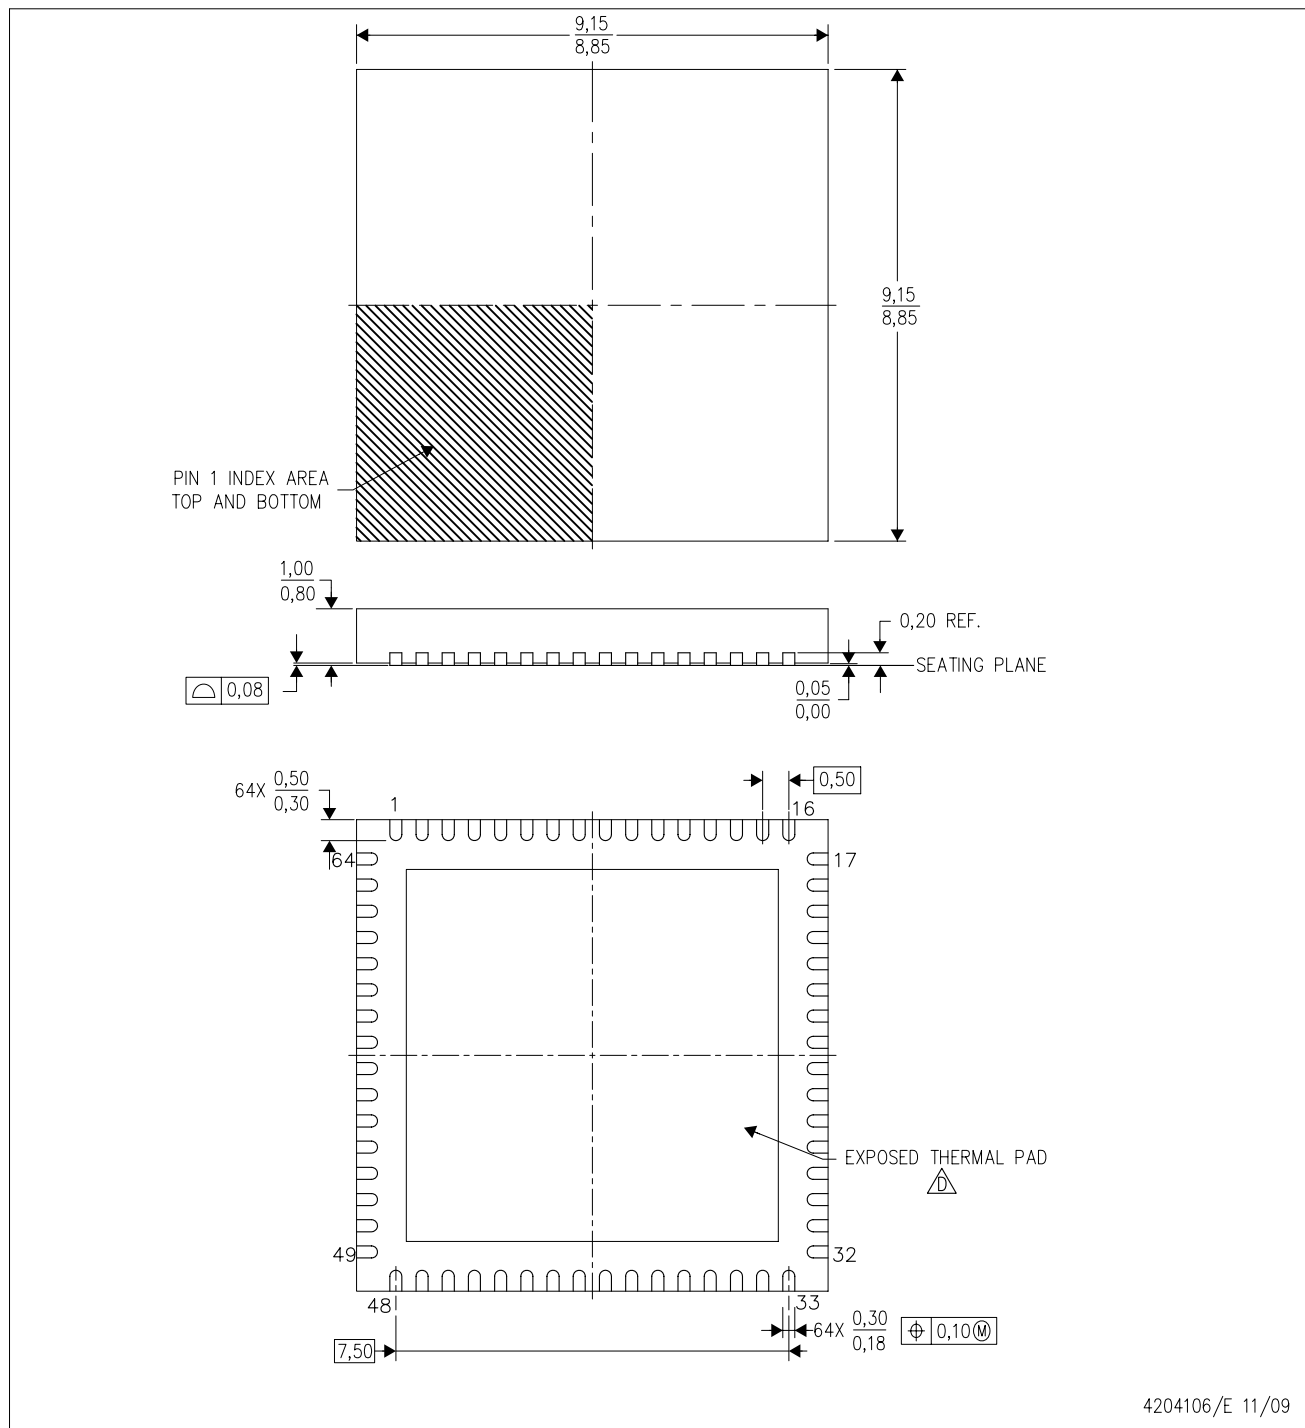

- NOTES:
- A. All linear dimensions are in millimeters. Dimensioning and tolerancing per ASME Y14.5-1994.
 - B. This drawing is subject to change without notice.
 - C. Quad Flatpack, No-leads (QFN) package configuration.
-  The package thermal pad must be soldered to the board for thermal and mechanical performance. See the Product Data Sheet for details regarding the exposed thermal pad dimensions.

THERMAL PAD MECHANICAL DATA

RGC (S-PVQFN-N64)


PLASTIC QUAD FLATPACK NO-LEAD

THERMAL INFORMATION

This package incorporates an exposed thermal pad that is designed to be attached directly to an external heatsink. The thermal pad must be soldered directly to the printed circuit board (PCB). After soldering, the PCB can be used as a heatsink. In addition, through the use of thermal vias, the thermal pad can be attached directly to the appropriate copper plane shown in the electrical schematic for the device, or alternatively, can be attached to a special heatsink structure designed into the PCB. This design optimizes the heat transfer from the integrated circuit (IC).

For information on the Quad Flatpack No-Lead (QFN) package and its advantages, refer to Application Report, QFN/SON PCB Attachment, Texas Instruments Literature No. SLUA271. This document is available at www.ti.com.

The exposed thermal pad dimensions for this package are shown in the following illustration.

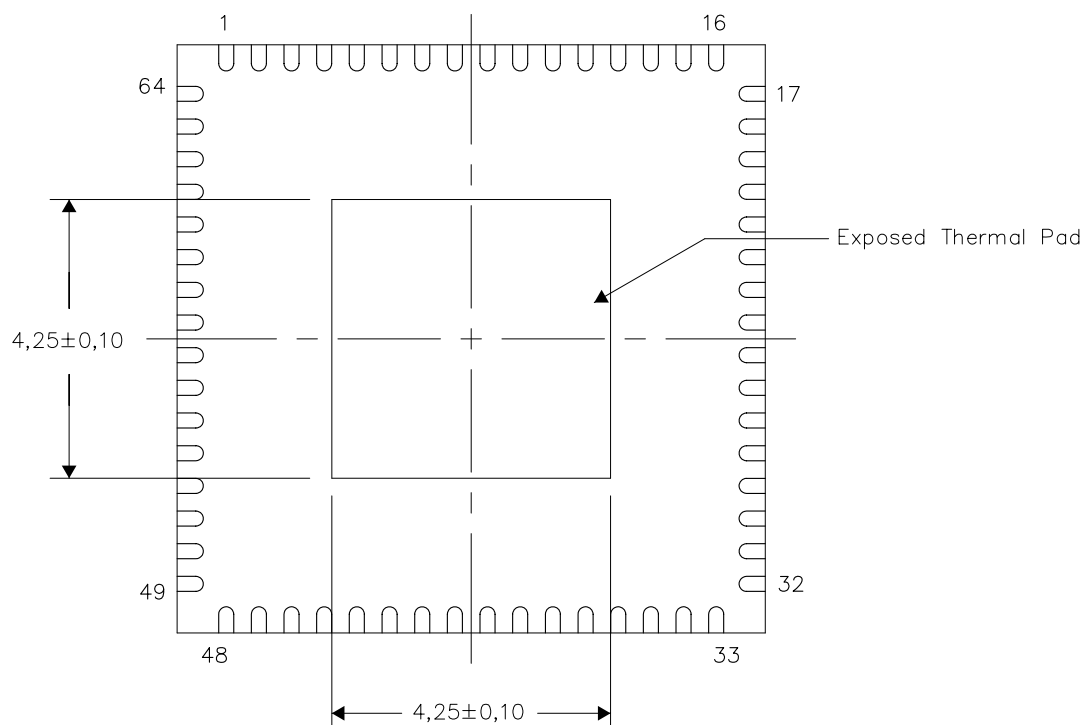


Bottom View

NOTE: All linear dimensions are in millimeters

Exposed Thermal Pad Dimensions

RGC (S-PVQFN-N64)

PLASTIC QUAD FLATPACK NO-LEAD

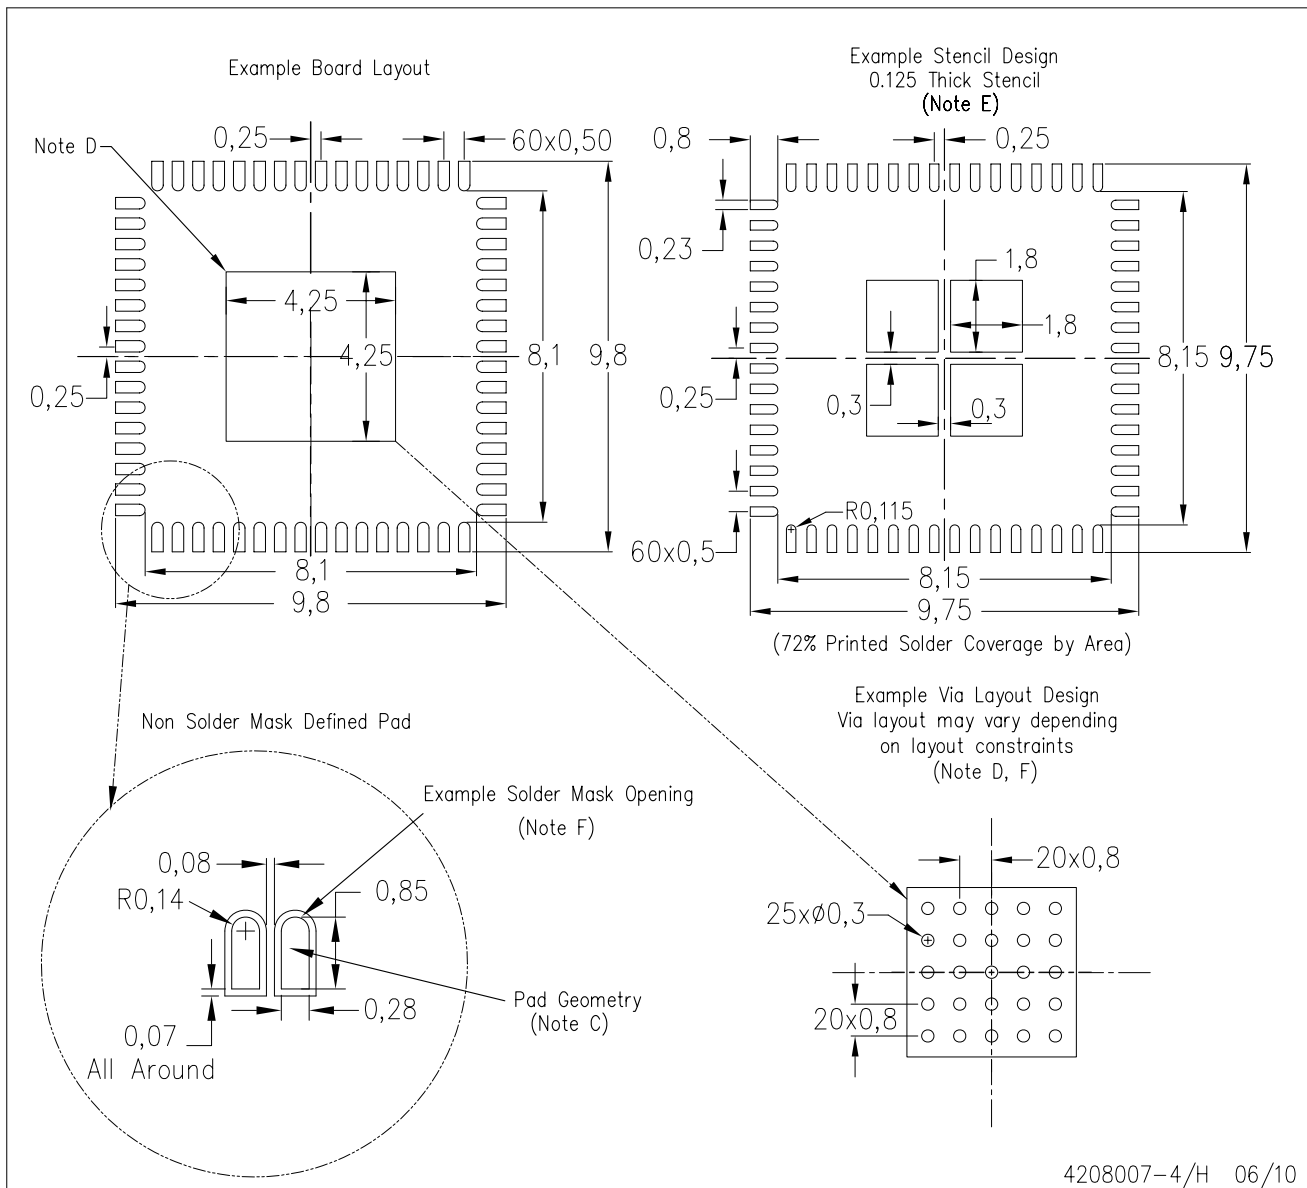

- NOTES:
- A. All linear dimensions are in millimeters.
 - B. This drawing is subject to change without notice.
 - C. Publication IPC-7351 is recommended for alternate designs.
 - D. This package is designed to be soldered to a thermal pad on the board. Refer to Application Note, Quad Flat-Pack Packages, Texas Instruments Literature No. SLUA271, and also the Product Data Sheets for specific thermal information, via requirements, and recommended board layout. These documents are available at www.ti.com <<http://www.ti.com>>.
 - E. Laser cutting apertures with trapezoidal walls and also rounding corners will offer better paste release. Customers should contact their board assembly site for stencil design recommendations. Refer to IPC 7525 for stencil design considerations.
 - F. Customers should contact their board fabrication site for recommended solder mask tolerances and via tenting recommendations for vias placed in thermal pad.

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

| Products | | Applications | |
|-----------------------------|--|----------------------------|--|
| Amplifiers | amplifier.ti.com | Audio | www.ti.com/audio |
| Data Converters | dataconverter.ti.com | Automotive | www.ti.com/automotive |
| DLP® Products | www.dlp.com | Communications and Telecom | www.ti.com/communications |
| DSP | dsp.ti.com | Computers and Peripherals | www.ti.com/computers |
| Clocks and Timers | www.ti.com/clocks | Consumer Electronics | www.ti.com/consumer-apps |
| Interface | interface.ti.com | Energy | www.ti.com/energy |
| Logic | logic.ti.com | Industrial | www.ti.com/industrial |
| Power Mgmt | power.ti.com | Medical | www.ti.com/medical |
| Microcontrollers | microcontroller.ti.com | Security | www.ti.com/security |
| RFID | www.ti-rfid.com | Space, Avionics & Defense | www.ti.com/space-avionics-defense |
| RF/IF and ZigBee® Solutions | www.ti.com/lprf | Video and Imaging | www.ti.com/video |
| | | Wireless | www.ti.com/wireless-apps |