

High Performance RFI Power Line Filters for Medical Equipment

HT Series



UL Recognized CSA Certified VDE Approved

HT Series

The HT series power line filters provide superior commonmode and premium differential-mode attenuation to RFI noise on the frequency range from 10kHz to 30MHz, for IEC 60601 and UL2601 patient-connected equipment, as well as all other electronic equipment that cannot tolerate leakage current.


They are a size- and cost-effective solution to the problem of meeting both medical leakage current limits and conducted emissions limits in equipment with high noise sources (such as switching power supplies). HT series filters can meet the following Conducted Emissions standards:

- European Normalized Standards based on EN55022, Level A (in many cases, Level B also).
- FCC Part 15, Computing Devices, Class B.
- FCC Part 18, ISM Equipment, Industrial and Consumer.

Note: When using the models with an IEC connector, remember that the leakage current of the companion line cord, GA400, is more significant than that of the filter - which may disqualify this line cord from use in patient care applications.

For more information on UL2601, see Appendix C.

Electrical Schematics

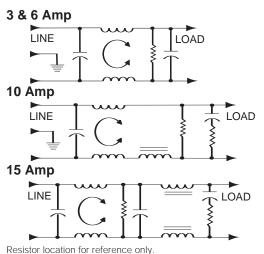



Specifications

Maximum	leakage	current, each	line-to-ground
---------	---------	---------------	----------------

.	
@ 120 VAC 60 Hz:	2μΑ
@ 250 VAC 50 Hz:	5μΑ
Hipot rating (one minute):	
line-to-ground	1500 VAC
line-to-line	1450 VDC
Operating frequency:	50/60 Hz
Rated voltage (max.):	250 VAC

Minimum insertion loss in dB:

Line-to-ground in 50 ohm circuit

Current	Frequency-MHz											
Rating	.01	.02	.05	.08	.15	.5	1	2	5	10	20	30
3A	22	32	36	-	49	46	40	30	22	12	12	12
6A	16	23	32	41	46	41	33	26	15	9	6	2
10A	9	15	24	30	36	42	34	22	11	12	8	8
15A	4	9	18	22	27	41	34	22	12	12	5	2

Line-to-line in 50 ohm circuit


Current				Fred	uen	су-	MHz	Z				
Rating	.01	.02	.05	.08	.15	.5	1	2	5	10	20	30
3A	3	1	30	-	61	70	65	65	48	40	32	32
6A	4	1	14	45	51	70	70	65	55	47	37	37
10A	7	8	17	32	52	70	70	70	65	55	40	35
15A	12	16	15	10	51	70	70	70	70	70	65	55




High Performance RFI Power Line Filters for Medical Equipment (Continued)

HT Series


Case Styles HT1 (3, 6 and 10 Amp)

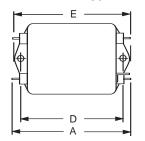




Terminals: .250 [6.35] (5) Holes: .07 [1.8] Dia.(4) Slot: .07 x .16 [1.8 x 4.1] Mounting holes: .188 [4.78] Dia. (2)

HT1 (15 Amp)

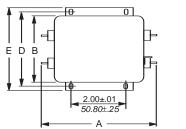





Typical dimensions:

Terminals: .250 [6.35] (5) Holes: .07 [1.8] Dia.(4) Slot: .07 x .16 [1.8 x 4.1] Mounting holes: .203 x .156 [5.16 x 3.96] Dia. (4)

HT3

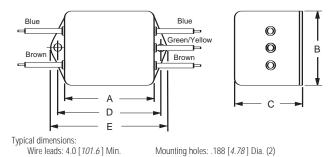


HT6

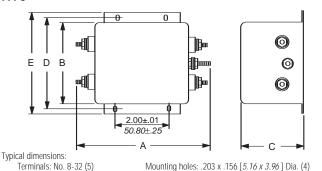


Mounting holes: .188 [4.78] Dia. (2)

HT7 & HT7M (with metric insert)

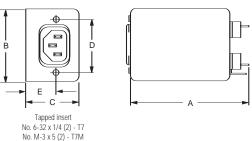

Recommended Panel Cutout



Panel Cutout (back mount)

Tolerance ±.005 [0.13]

Case Dimensions

	Α	В	С	D	E
Part No.	(max)	(max)	(max)	± .015 ± .38	(max)
3EHT1, 6EHT1	3.56	2.15	1.81	2.938	3.38
	90.4	54.6	46.0	74.63	85.9
3EHT3, 6EHT3	2.55	2.15	1.81	2.938	3.38
	64.8	54.6	46.0	74.63	85.9
3EHT7, 3EHT7M,	3.52	2.25	1.78	1.575	0.63
6EHT7, 6EHT7M	89.4	57.2	45.2	40.01	16.0
10EHT1	4.69	2.27	1.8	4.063	4.47
	119.1	57.7	45.7	103.2	113.5
10EHT3	3.69	2.27	1.8	4.063	4.47
	93.7	57.7	45.7	103.2	113.5
15EHT1	5.45	3.12	2.18	3.5	3.96
	138.4	79.2	55.4	88.9	100.6
15EHT6	5.95	3.12	2.18	3.5	3.96
	151.1	79.2	55.4	88.9	100.6

† ±.02 [±.5]

Part Numbers

6EHT1	10EHT1				
6EHT3	10EHT3				
6EHT7	15EHT1				
6EHT7M	15EHT6				
Line Cord No.	GA400				
7½ foot, 3-conductor line cord to mate with T7 models					

Torque: 18±2 in.lb