

RC144ACG 3.3V, Low Power, Integrated High Speed Data/Fax/Voice Modem Device Set with Cellular Direct Connect Support

INTRODUCTION

The Rockwell RC144ACG integrated data/fax/voice modem device set family supports high speed data and high speed fax modem operation in the US or world-wide over a dial-up telephone line and, for US versions, a cellular phone. (Table 1 lists the models).

Small size (two PQFP or two TQFP packages), flexible power supply (supply adaptive to 3.3V or 5V), and very low power consumption make this device set ideal for laptop, notebook, and palmtop applications.

As a data modem, the modem operates at line speeds to 14400 bps. Error correction (V.42/MNP 2-4) and data compression (V.42 bis/MNP5) maximize data transfer integrity and boost average data throughput up to 57.6 kbps. Non-error-correcting mode is also supported.

As a fax modem, the modem supports Group 3 send and receive rates up to 14400 bps and supports T.30 protocol.

In voice mode, enhanced Adaptive Differential Pulse Coded Modulation coding and decoding supports efficient digital storage of voice using 2-bit or 4-bit compression and decompression at 7200 bps. Coder silence deletion and decoder silence interpolation is available to significantly increase compression rates.

Voice models operating with the parallel host bus also support business audio and the Integrated Communications System (ICS) program. The modem supports data throughput in excess of 176 kbps utilizing the Rockwell High Speed Interface (RHSI), a data rate required by 16-bit audio record/playback at 11.025 kHz. RHSI allows slower PCs such as 16 MHz 386-based computers to sustain data rates of 115.2 kbps and higher. Record and playback of monophonic (mono) audio data in 8-bit unsigned linear pulse code modulation (PCM) or 16-bit signed linear PCM format at 11.025 kHz or 7200 Hz sampling rate is supported. These features can be used in applications such as digital answering machine, voice annotation, audio file play and record, and text-to speech.

Cellular direct connect operation is supported by licensed firmware unique to a specific cellular phone type.

"AT" commands provide data, fax class 1 and class 2, MNP 10, voice/audio, cellular, and W-class functions while using minimal external ROM, RAM, and optional NVRAM.

Use of AccelerATor kits for PC half cards and PCMCIA PC cards minimize application design time and costs. The kits also include design layout files on floppy disk, sample modem devices, crystals, and full documentation.

PC-based "ConfigurACE™" software allows MCU firmware to customized to application and country requirements.

FEATURES

- Data modem throughput up to 57.6 kbps (beyond 57.6 kbps when RHSI is active)
 - V.32 bis, V.32, V.22 bis, V.22A/B, V.23, and V.21; Bell 212A and 103
 - V.42 LAPM and MNP 2-4 error correction
 - V.42 bis and MNP 5 data compression
- MNP 10 data throughput enhancement
- Fax modem send and receive rates up to 14400 bps
 - V.17, V.29, V.27 ter, and V.21 channel 2
- Cellular direct connect
- Voice mode (option)
 - Enhanced ADPCM compression/decompression
 - Tone detection/generation and call discrimination
 - Concurrent DTMF detection
 - Timing marks
- · Business audio mode (with parallel bus interface)
- Record or playback mono data using 8-bit or 16-bit audio data encoding at 11.025 kHz or 7200 Hz
- Concurrent DTMF/tone detection detection
- · World-class operation (option)
- Call progress and blacklisting parameters
- Multiple country support
- Hayes AutoSync (option)
- Communication software compatible command sets
 - AT, fax class 1 and 2, and voice commands
- NVRAM directory and stored profiles
- Built-in DTE interfaces
 - DTE speed to 57.6 kbps
 - Parallel 16450 or 16550A UART interface
 - Serial CCITT V.24 (EIA/TIA-232-E)
- Rockwell High Speed Interface (RHSI)
- Automatic format/speed sensing to 57.6 kbps
- Flow control and speed buffering
- · Serial sync/async data; parallel async data
- · Auto dial and auto answer
- Tone, pulse, and adaptive dialing.
- Calling Number Delivery (Caller ID) detect
- Extended operating temperature models available
- Flexible packaging options
 - MCU: One 80-pin PQFP or one 100-pin TQFP
 - MDP: One 100-pin PQFP or one 128-pin TQFP
- +5V operation; typical power consumption:

Mode	+3.3V	+5V
Operating:	250 mW	345 mW
Sleep mode:	14.6 mW	17.9 mW
Sleep mode	8.5 mW	10.8 mW

Data Sheet (Preliminary) Order No. MD105 Rev. 1, October 11, 1994 (Supersedes earlier issues)

7811073 0024244 119 📼

Table 1. Modem Models and Functions

		Supported Functions					
Model	Data/Fax	W-Class	Voice	Country			
RC144ACG/U	V.32 bis/V.17	_	_				
RC144ACGWD/U	V.32 bis/No fax	s		US/Canada			
RC144ACGW/U	V.32 bis/V.17	s	-	Multiple			
RCV144ACG-BA	V.32 bis/V.17			Multiple			
RCV144ACGW(E)-BA	V.32 bis/V.17	s	<u> </u>	US/Canada			
RC96ACG/U	V.32/V.29	3	S	Multiple			
RC96ACGWD/U	V.32/No fax	-	-	US/Canada			
RC96ACGW/U		S	-	Multiple			
RCV96ACG-BA	V.32/V.29	<u> </u>	_	Multiple			
	V.32/V.29		S	US/Canada			
RCV96ACGW-BA	V.32∕V.29	S	S	Multiple			
Model options: BA D V W (E) U Supported functions Fax W-Class	Business audio. Data only (no fax). Voice functions. World class support. Optional industrial tempera Available only with 16550A (S = Supported; - = Not supported Fax class 1 and class 2 con	interface.):		·			

ConfigurACE is a trademark of Rockwell International.

MNP is a trademark of Microcom, Inc.

Hayes is a trademark of Hayes Microcomputer Products, Inc.

2

TECHNICAL SPECIFICATIONS

GENERAL DESCRIPTION

The modem device set provides the processing core of the modem. The OEM adds a crystal, discrete components, and a digital access arrangement (DAA) and/or cellular interface circuit to complete the modem system.

Modem Data Pump (MDP)

The MDP is a Rockwell RC96DPG or RC144DPG data/fax/voice modern data pump packaged in a 100-pin PQFP or a 128-pin TQFP. The crystal frequency is 35.2512 MHz.

As a data modem, the MDP can operate in 2-wire, full-duplex, synchronous/asynchronous modes at line rates up to 14400 bps (RC144DPG) or 9600 bps (RC96DPG).

As a fax modem, the MDP fully supports Group 3 facsimile send and receive speeds of 14400 (RC144DPG), 12000 (RC144DPG), 9600, 7200, 4800, or 2400 bps.

ADPCM voice processing in the MDP is supported in ACG models supporting voice commands.

Microcontroller (MCU)

The MCU is a Rockwell L39 or P39 microcomputer packaged in an 80-pin PQFP or a 100-pin TQFP.

The MCU is a Rockwell L39 or P39 microcomputer. The MCU performs the command processing and host interface functions. The crystal frequency is 9.8304 MHz.

The L39 MCUs are packaged in an 80-pin PQFP or 100-pin TQFP

The L39 MCU connects to the host via a V.24 (EIA/TIA-232-E) serial interface or a parallel microcomputer bus depending on installed MCU firmware. In parallel interface operation, the MCU can connect to a PCMCIA connector using a Rockwell PCMCIA Interface Control Adapter (PICA) device (see data sheet Order No. MD99) and a PCMCIA Card Information Structure (CIS) memory device.

The P39 MCU performs all the functions as the L39 MCU and, in addition, incorporates a built-in PCMCIA interface and CIS memory allowing the P39 MCU to directly connect to the PCMCIA connector without requiring these two external parts. The P39 MCU is packaged in an 128-pin PQFP. The P39 MCU interface is described in Application Note 1057, "P39 MCU (8-Bit Microcontroller with PCMCIA Interface) Application to Rockwell 14400 bps and 28800 bps Low Power Modems".

The MCU connects to the MDP via dedicated lines and the external bus. The MCU external bus also connects to OEM-supplied ROM and RAM and, high performance configuration, to the CEP. The ROM size is 128k bytes. The RAM size is 32k bytes for the low cost configuration or 8k bytes for the high performance configuration.

For all models, 256 bytes NVRAM can optionally be connected to the MCU over a dedicated serial interface.

MCU Firmware

MCU firmware performs processing of general modem control, command sets, error correction, data compression, MNP 10, fax class 1 and class 2, voice/audio, HSI, and DTE/host interface functions. Configurations of the MCU firmware are provided to support parallel host bus interface operation or serial DTE interface operation. The MCU firmware is provided in object code form for the OEM to program into external ROM. The MCU firmware may also be provided in source code form under a source code addendum license agreement.

SUPPORTED INTERFACES

The major hardware signal interfaces of the modem device set are illustrated in Figure 1.

Parallel Host Bus Interface

A 16450-compatible or 16450/16550A UART-compatible parallel interface is provided depending upon modern model. Eight data lines, three address lines, four DMA request/acknowledge lines, four control/status lines, and a reset line are supported.

DTE Serial Interface and Indicator Outputs

A DTE serial interface and indicator/control outputs are supported.

V.24/EIA/TIA-232-E DTE Serial Interface. A V.24/EIA/TIA-232-E logic-compatible DTE serial interface is supported. A clock stop signal is provided which can be used to turn off transmitter and receiver clocks to the DTE in asynchronous modes.

Indicator Outputs. Four indicator outputs are supported.

NVRAM Interface

A serial interface to an optional OEM-supplied non-volatile RAM (NVRAM) is provided. Data stored in NVRAM can take precedence over the factory default settings. A 256-byte NVRAM can store up to two user-selectable configurations and can store up to four 35-digit dial strings.

Speaker Interface

A speaker output, controlled by AT commands, is provided for an optional OEM-supplied speaker circuit.

External Bus Interface

The MCU external bus connects to the MDP and to OEMsupplied ROM, and RAM. This non-multiplexed bus supports eight bidirectional data lines and 17 address output lines. Read enable, write enable and chip select outputs (MDP select, ROM select, and RAM select) are also supported.

MD105

3

7811073 0024246 T91 📟

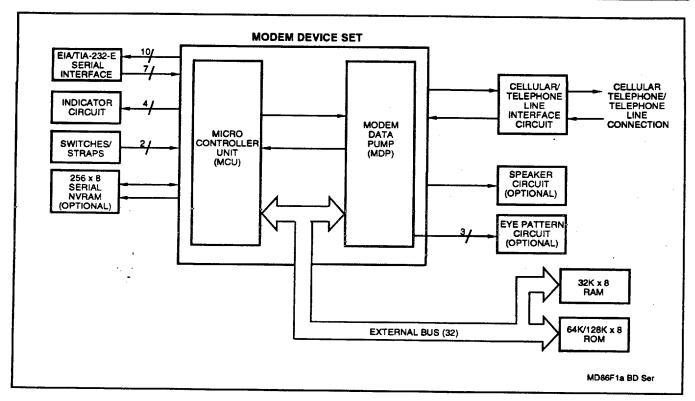


Figure 1a. Block Diagram - Serial Interface

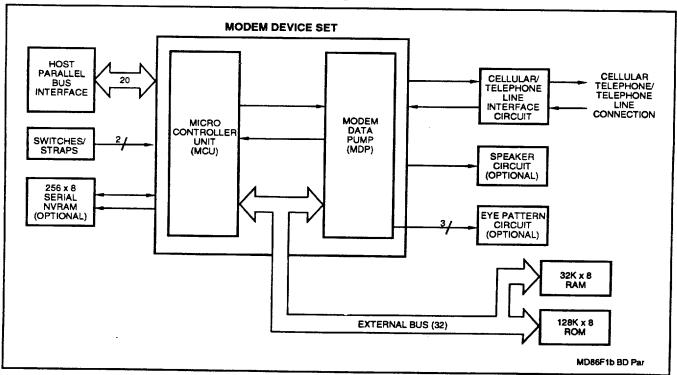


Figure 1b. Block Diagram - Parallel Interface

MD105

7811073 0024247 928

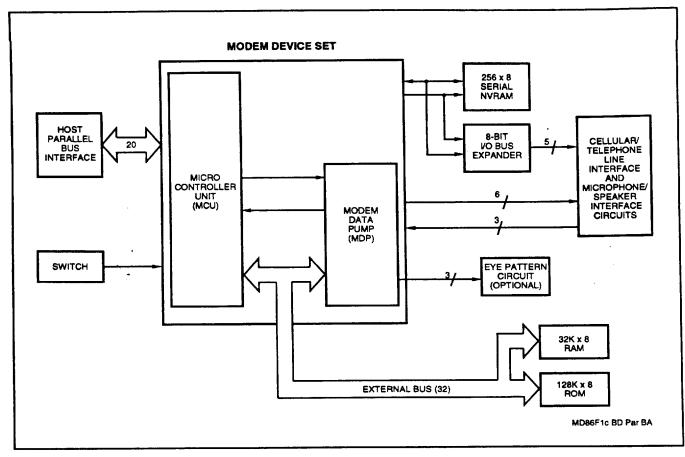


Figure 1c. Block Diagram - Parallel Interface with Business Audio

1

5

📰 7811073 0024248 864 📟

Telephone Line Interface

MCU. Wireline operation is selected when a DAA interface is indicated on the DAA/CELL input or when a cellular interface is indicated on the DAA/CELL input but no cellular firmware driver is loaded. Four relay control outputs to the line interface are supported. These outputs may be used to control relays such as off-hook, pulse, mute, A/A1, earth, and talk/data. The MCU accepts ring signal and line current sense from the line interface.

MDP. A receive analog input, two transmit analog outputs, two relay driver outputs, and a ring signal input are supported. The relay outputs may be used to drive Caller ID and voice relays.

Business Audio Interface

The MCU outputs two encoded analog switch control signals to select RIN and TXA1/TXA2 routing. In addition, three outputs are provided to select volume control, control volume up/down direction, and volume increment.

Cellular Phone Interface

MCU. Cellular operation is selected when a cellular interface is indicated on the DAA/CELL input and a cellular firmware driver is loaded. Signals supported are two encoded control outputs (CTRL0 and CTRL1), a bidirectional serial data line (CELDATA), a data clock input (CELCLK), a cellular busy output (CELBSY), and a cellular busy input (-CELBSY). Host DMA is not available in parallel interface operation when cellular is selected.

MDP. A receive analog input, two transmit analog outputs, two relay driver outputs, and a ring signal input are supported.

Eye Pattern Generator Interface

Eye pattern data, clock, and sync interface signals are provided to allow an external eye pattern generator circuit to be easily added in order to observe data modem performance relative to line impairments.

Microsoft Windows Interface. Microsoft Windows is supported in the host using the proprietary RHSI. The use of RHSI overcomes the limitation of predefined UART speeds. Support for RHSI is in the form of modern microcomputer firmware and Windows driver RHSICOMM.DRV. The Rockwell RHSICOMM.DRV driver is downward compatible with the standard Microsoft Windows communications driver COMM.DRV.

COMMANDS

The modem supports data modem, fax class 1 and 2, and MNP 10 commands, and S Registers (see Tables 2 and 3, respectively) in accordance with modem model options.

Data Modem Operation. Data modem functions operate in response to the basic AT commands when +FCLASS=0. Default parameters support US/Canada operation.

MNP 10 Operation. MNP 10 functions operate in response to MNP 10 commands.

AutoSync Operation. AutoSync operates in response to the &Q4 command.

Fax Modern Operation. Facsimile functions operate in response to fax class 1 commands when +FCLASS=1 or #CLS=1 or to fax class 2 commands when +FCLASS=2 or #CLS=2.

Voice Operation. Voice mode functions operate in response to voice/audio commands when #CLS=8 and #VBS=2 or #VBS=4 is selected.

Audio Operation. Audio mode functions operate in response to voice/audio commands when #CLS=8 and #VBS=8 or #VBS=16 is selected. Sampling rate is determined by #VSR=11025 or #VSR=7200.

Cellular Operation. Cellular functions operate when a cellular phone driver is loaded and a cellular phone interface is detected.

World Class (W-Class) Operation. Models supporting W-class functions operate in response to W-class AT commands.

DTE SERIAL INTERFACE OPERATION

Automatic Speed/Format Sensing

The modem can automatically determine the speed and format of the data sent from the DTE. The modem can sense speeds of 300, 600, 1200, 2400, 4800, 7200, 9600, 12000, 14400, 16800, 19200, 21600, 24000, 26400, 28800, 38400, and 57600 bps and the following data formats:

Parity	Data Length (No. of Bits)	No. of Stop Bits	Character Length (No. of Bits)
None	7	2	10
Odd	7	1	10
Even	7	1	10
None	8	1	10
Odd	8	1	11*
Even	8	1	11*

^{* 11-}bit characters are sensed, but the parity bits are stripped off during data transmission in Normal and Error Correction modes. Direct mode does not strip off the parity bits.

The modem can speed sense data with mark or space parity and configures itself as follows:

DTE Configuration	Modem Configuration
7 mark	7 none
7 space	8 none
8 mark	8 none
8 space	8 even

HOST PARALLEL BUS INTERFACE OPERATION

The modem can operate at rates up to 57600 bps by programming the Divisor Latch in the parallel interface registers.

6

ESTABLISHING DATA MODEM CONNECTIONS

Telephone Number Directory

The modem supports four telephone number entries in a directory that can be saved in a serial NVRAM. Each telephone number can be up to 35 characters in length. A telephone number can be saved using the &Zn=x command, and a saved telephone number can be dialed using the DS=n command.

Dialing

DTMF Dialing. DTMF dialing using DTMF tone pairs is supported in accordance with CCITT Q.23. The transmit tone level complies with Bell Publication 47001.

Pulse Dialing. Pulse dialing is supported in accordance with EIA/TIA-496-A.

Adaptive Dialing. If DTMF dialing is selected (T command) and the telephone network does not recognize DTMF tones, the modem switches to pulse dialing. If pulse dialing is selected (P command), pulse dialing is used.

Blind Dialing. The modem can blind dial in the absence of a dial tone if enabled by the X0, X1, or X3 command.

Modem Handshaking Protocol

If a tone is not detected within the time specified in the S7 register after the last digit is dialed, the modern aborts the call attempt.

Call Progress Tone Detection

Ringback, equipment busy, and progress tones can be detected in accordance with the applicable standard.

Answer Tone Detection

Answer tone can be detected over the frequency range of 2100 ± 40 Hz in CCITT modes and 2225 ± 40 Hz in Bell modes.

Ring Detection

A ring signal can be detected from a TTL-compatible 15.3 Hz to 68 Hz square wave input.

Billing Protection

When the modem goes off-hook to answer an incoming call, both transmission and reception of data are prevented for 2 seconds (data modem) or 4 seconds (fax adaptive answer) to allow transmission of the billing signal.

Connection Speeds

The possible data connection modes/speeds are in Table 4.

Two methods of establishing a connection are supported: use of the F command and use of N command, speed sense, and S37 register combination.

Automode

MD105

Automode detection can be enabled by the N1 or F0 commands to allow the modem to connect to a remote modem in accordance with EIA/TIA-PN2330.

Table 2. AT Commands

Command	Function
	Basic AT Commands
A/	Re-execute command
A	Answer a call
Bn	Set CCITT or Bell Mode
Cn	Carrier control
Dn	Dial (originate a call)
Ε	Command echo
Fn	Select line modulation
Hn	Disconnect (hang-up)
In	Identification
Ln	Speaker volume
Mn	Speaker control
Nn	Automode enable
On	Return to on-line data mode
Р	Set pulse dial default
Qn	Quiet results codes control
Sn=x	Write to S Register
Sn?	Read S Register Set tone dial default
T	Result code form
Vn W-	Error correction message control
Wn Xn	Extended result codes
Ŷn	Long space disconnect
Zn	Soft reset and restore profile
&Cn	RLSD (DCD) option
&Dn	DTR option
&F	Restore factory configuration (profile)
&Gn	Select guard tone
&Jn	Telephone jack control
&Kn	Flow control
&Ln	Leased line operation
&Mn	Asynchronous/synchronous mode selection
&Pn	Select pulse dial make/break ratio
&Qn	Asynchronous/synchronous mode selection
&Rn	RTS/CTS option
&Sn	DSR override
&Tn	Test and diagnostic
&V	Display current configuration and stored profiles
&Wn	Store current configuration
&Xn	Select synchronous clock source
&Yn	Designate a default reset profile
&Zn=x	Store phone number
%En	Enable/disable line quality monitor and auto- retrain or fallback/fall forward
%L	Report line signal level
%Q	Report line signal quality
%TTn	PTT testing utilities
\Gn	Modem-to-modem flow control (XON/XOFF)
\Kn	Break control
VN n	Operating mode
#CID	Caller ID detection and reporting
**	Download to flash memory
	Cellular Commands
^C2	Download Cellular Phone Driver
<u>^\</u>	Identify Cellular Phone Driver
^T6	Indicate Status Of Cellular Phone

💶 7811073 0024250 412 🖼

7

Table 2. AT Commands (Cont'd)

	ne z. Al Commands (Cont d)
Command	Function
1	ECC AT Commands
%C	Select data compression
VAn VB=	Maximum MNP block size
\Bn	Transmit BREAK to remote
	MNP 10 AT Commands
)Mn	Enable/disable cellular power level
• Lim	adjustment
* Hn -Kn	Set link negotiation speed
-On	MNP extended services
6Mn	Enable fallback to V.22 bis/V.22
:E	Select initial transmit level
<u> </u>	Compromise equalizer enable
FOLACO -	Fax Class 1 AT+F Commands
+FCLASS=n +FAE	Service class
+FAE +FTS=n	Data/fax auto answer
+F1S=11 +FRS=n	Stop transmission and wait
+FTM=n	Receive silence Transmit data
+FIM=n	Receive data
+FTH=n	
+FRH=n	Transmit data with HDLC framing
	Receive data with HDLC framing Fax Class 2 AT+F Commands
+FCLASS=n	
+FULASS=fi	Service class Class 2 Action Commands
+FCIG	
+FDT	Set the polled station identification
+FET=N	Data transmission
+FDR	Transmit page punctuation
+FK	Begin or continue Phase C receive data
+FLPL	Terminate session Document for polling
+FSPL	
11012	Enable polling Class 2 DCE Responses
+FCIG:	
+FCON	Report the polled station identification Facsimile connection response
+FDCS:	Report current session
+FDIS:	Report remote capabilities
+FDTC:	Report the polled station capabilities
+FCFR	Indicate confirmation to receive
+FTSI:	Report the transmit station ID
+FCSI:	Report the called station ID
+FPTS:	Page transfer status
+FET:	Post page message response
+FHNG:	Call termination with status
+FPOLL	Indicates polling request
	Class 2 Session Parameters
+FMFR?	Identify manufacturer
+FMDL?	Identify model
+FREV?	Identify revision
+FDCC	DCE capabilities parameters
+FDIS	Current sessions parameters
+FDCS	Current session results
+FLID	Local ID string
+FPTS	Page transfer status
+FCR	Capability to receive
+FAA	Adaptive answer
+FBUF?	Buffer size (read only)
+FPHCTO	Phase C time out
+FAXERR?	Fax error value
+FBOR	Phase C data bit order

Table 2. AT Commands (Cont'd)

Command	Function
	Voice AT# Commands
#BDR	Select baud rate
#CLS	Select data, fax, or voice
#MDL?	Identify model
#MFR?	Identify manufacturer
#REV?	Identify revision level
#VBQ?	Query buffer size
#VBS	Bits per sample
#VBT	Beep tone timer
#VCI?	Identify compression method
#VLS	Voice line select
#VRA	Ringback goes away timer (originate)
#VRN	Ringback never came timer (originate)
#VRX	Voice receive mode
#VSD	Enable silence deletion
#VSK	Buffer skid setting
#VSP	Silence detection period (voice receive)
#VSR	Sampling rate selection
#VSS	Silence detection tuner (voice receive)
#VTD	DTMF/tone reporting
#VTS	Generate tone signals
#VTX	Voice transmit mode
	W-Class AT Commands
*B	Display blacklisted numbers
•D	Display delayed numbers
*NCnn	Country select

Table 3. S Registers

	Table 3. 3 Negisters
Register	Function
S0	Rings to auto-answer
S1	Ring counter
S2	Escape character
S3	Carriage return character
S4	Line feed character
S5	Backspace character
S6	Maximum time to wait for dial tone
S7	Wait for carrier
S8	Pause time for dial delay modifier
S9 .	Carrier detect response time
S10	Carrier loss disconnect time
S11	DTMF Tone Duration
S12	Escape code guard time
S13	Reserved
S14	General bit mapped options
S15	Reserved
S16	Test mode bit mapped options (&T)
S17	Reserved
S18	Test timer
S19-S20	Reserved
S21	V24/general bit mapped options
S22	Speaker/results bit mapped options
S23	General bit mapped options
S24	Sleep inactivity timer
S25	Delay to DTR (CT108) off
S26	RTS-to-CTS (CT105-to-CT106) delay
S27	General bit mapped options
S28	General bit-mapped options
S29	Flash modifier time
S30	Inactivity timer
S31	General bit-mapped options
S32	XON character
S33	XOFF character
S34-S35	Reserved
S37	Line connection speed
S38	Delay before forced hangup
S39	Flow control
S40	General bit-mapped options
S41	General bit-mapped options
S42-S45	Reserved
S91	PSTN transmit attenuation level
S92	Fax transmit attenuation level
S95	Result code messages control
	ECC S Registers
S36	LAPM failure control
S46	Data compression control
S48	V.42 negotiation control
S82	Break handling control
1	Cellular Registers
6201	Cellular transmit level
S201	Odiniai parisi in 10401

Table 4. Connection Speed Options

Configuration	Rate (bps)
V.32 bis	14400 (RC144ACG), 12000 (RC144ACG), 9600, 7200, or 4800
V.32	9600 or 4800
V.22 bis	2400 or 1200
V.22	1200
V.23	1200Tx/75Rx or 75TX/1200Rx
V.21	0-300
Bell 212A	1200
Bell 103	0-300

9

7811073 0024252 295

DATA MODE

Data mode exists when a telephone line or cellular phone connection has been established between modems and all handshaking has been completed.

Speed Buffering (Normal Mode)

Speed buffering allows a DTE to send data to, and receive data from, a modem at a speed different than the line speed. The modem supports speed buffering at all line speeds.

Flow Control

DTE-to-Modem Flow Control. If the modem-to-line speed is less than the DTE-to-modem speed, the modem supports XOFF/XON or RTS/CTS flow control with the DTE to ensure data integrity.

Modem-to-Modem Flow Control. When enabled by the \G1 command, the modem supports XON/XOFF flow control with the remote modem to ensure data integrity. Modem-to-modem flow control is not used in error correction mode. In this case, flow control is accomplished within the error-correction protocol.

Escape Sequence Detection

The "+++" escape sequence with guard time can be used to return control to the command mode from the data mode. Escape sequence detection is disabled by an S2 Register value greater than 127. Escape sequence detection is disabled in synchronous mode.

BREAK Detection

The modem can detect a BREAK signal from either the DTE or the remote modem. The \Kn command determines the modem response to a received BREAK signal.

Telephone Line Monitoring

GSTN Cleardown (V.32 bis, V.32). Upon receiving GSTN Cleardown from the remote modem in a non-error correcting mode, the modem cleanly terminates the call.

Loss of Carrier. If carrier is lost for a time greater than specified by the S10 register, the modern disconnects.

Receive Space Disconnect. If selected by the Y1 command in non-error-correction mode, the modem disconnects after receiving 1.6 \pm 10% seconds of continuous SPACE.

Send SPACE on Disconnect

If selected by the Y1 command in non-error-correction mode, the modem sends $4\pm10\%$ seconds of continuous SPACE when a locally commanded hang-up is issued by the &Dn or H command.

Fall Forward/Fallback (V.32 bis/V.32)

During initial handshake, the moder will fallback to the optimal line connection within V.32 bis/V.32 mode depending upon signal quality if automode is enabled by the N1 command.

When connected in V.32 bis/V.32 mode, the modem will fall forward or fallback to the optimal line speed within V.32 bis/V.32 mode depending upon signal quality if fall forward/fallback is enabled by the %E2 command.

Retrain

The modem may lose synchronization with the received line signal under poor line conditions. If this occurs, retraining may be initiated to attempt recovery depending on the type of connection.

The modem initiates a retrain if line quality becomes unacceptable if enabled by the %E command. The modem continues to retrain until an acceptable connection is achieved, or until 30 seconds elapse resulting in line disconnect.

Programmable Inactivity Timer

The modem disconnects from the line if data is not sent or received for a specified length of time. In normal or error-correction mode, this inactivity timer is reset when data is received from either the DTE or from the line. This timer can be set to a value between 0 and 2550 seconds by using register S30. A value of 0 disables the inactivity timer.

Synchronous Data Mode (Serial Interface Only)

The modem can establish a synchronous connection in accordance with the &Mn or &Qn commands. Upon completing the physical handshake, the modem enters synchronous data mode. The inactivity timer is not used during synchronous data mode.

Direct Mode (Serial Interface Only)

The Direct mode allows data to be transmitted and received directly from the DTE and remote modem. The Direct mode is selected with the &Q0 or \N1 command. In Direct mode, no flow control characters are recognized or transmitted, the modem cannot execute error correction, and the inactivity timer is not used.

DTE Signal Monitoring (Serial Interface Only)

- ~DTR. When ~DTR is asserted, the modem responds in accordance with the &Dn and &Qn commands.
- ~RTS. ~RTS is used for flow control if enabled by the &K command in normal or error-correction mode or to affect the ~CTS output if enabled by the &R command in synchronous mode.
- ~RDL. When ~RDL is asserted, the modem requests a remote digital loop if connected in non-error-correction mode.
- **~AL.** When ~AL is asserted, the modem disconnects and enters analog loop.

10

MD105

7811073 0024253 121

ERROR CORRECTION AND DATA COMPRESSION

V.42 Error Correction

V.42 supports two methods of error correction: LAPM and, as a fallback, MNP 4. The modem provides a detection and negotiation technique for determining and establishing the best method of error correction between two modems.

MNP 2-4 Error Correction

MNP 2-4 is a data link protocol that uses error correction algorithms to ensure data integrity. Supporting stream mode, the modem sends data frames in varying lengths depending on the amount of time between characters coming from the DTE.

V.42 bis Data Compression

V.42 bis data compression mode, enabled by the %Cn command or S46 register, operates when a LAPM or MNP 10 connection is established.

The V.42 bis data compression employs a "string learning" algorithm in which a string of characters from the DTE is encoded as a fixed length codeword. Two 2k-byte dictionaries are used to store the strings. These dictionaries are dynamically updated during normal operation.

MNP 5 Data Compression

MNP 5 data compression mode, enabled by the %Cn command, operates during an MNP connection.

In MNP 5, the modem increases its throughput by compressing data into tokens before transmitting it to the remote modem, and by decompressing encoded received data before sending it to the DTE.

MNP 10 DATA THROUGHPUT ENHANCEMENT

MNP 10 protocol, cellular functionality, and MNP Extended Services enhance performance under adverse channel conditions such as those found in rural, long distance, or cellular environments. An MNP 10 connection is established when an MNP 2-4 connection is negotiated with a remote modem supporting MNP 10. MNP 10 functions include:

Robust Auto-Reliability. A higher connection success rate is achieved by attempting to overcome channel interference during the modem negotiation phase while maintaining backward compatibility with non-MNP 10 modems.

Negotiated Speed Upshift. Initial connection and MNP handshake is performed at the most dependable speed, then the connection upshifts to the highest supported modem/channel speed. This function is particularly useful for channel conditions with high connection failure rates.

Aggressive Adaptive Packet Assembly. Frame size is dynamically changed to quickly adapt to varying levels of interference.

Dynamic Speed Shifting. Connection speed is shifted upward or downward to optimize data throughput for the channel conditions by continuously monitoring the line quality and link performance.

MD105

Dynamic Transmit Level Adjustment. When enabled by the)M2 command, transmit level is dynamically adjusted to adapt to the varying cellular network environment, and to prevent "clipping" which causes data corruption due to the Preemphasis and Compander effect.

MNP Extended Services. The modem can quickly switch to MNP 10 operation when the remote modem supports MNP 10 and both modems are configured to operate in V.42.

V.42 bis/MNP 5 Support. V.42 bis/MNP 10 can operate with V.42 bis or MNP 5 data compression.

AUTOSYNC

Hayes AutoSync mode, when used with communications software incorporating the Hayes Synchronous Interface (HSI), provides synchronous communication capabilities from an asynchronous data terminal. In AutoSync, the modem places the call asynchronously then automatically switches to synchronous operation once the telephone connection has been established. AutoSync allows communication from an asynchronous DTE (typically a personal computer) to synchronous DTE (typically a mainframe computer or minicomputer).

FAX CLASS 1 AND CLASS 2 OPERATION

The modem operates as a facsimile (fax) DCE whenever the +FCLASS=1 or +FCLASS=2 command is active. In the fax mode, the on-line behavior of the modem is different from the data (non-fax) mode. After dialing, modem operation is controlled by fax commands. Some AT commands are still valid but may operate differently than in data modem mode.

Calling tone is generated in accordance with T.30.

VOICE/AUDIO MODE

Voice and audio functions are supported by the Voice Mode. Voice Mode includes three submodes: Online Voice Command Mode, Voice Receive Mode, and Voice Transmit Mode (Table 2).

Online Voice Command Mode. This mode results from the connection to the telephone line or a voice/audio I/O device (e.g., microphone, speaker, or handset) through the use of the #CLS=8 and #VLS commands. After mode entry, AT commands can be entered without aborting the connection.

Voice Receive Mode. This mode is entered when the #VRX command is active in order to record voice or audio data input at the RXA pin, typically from a microphone/handset or the telephone line.

Received analog voice samples are converted to digital form and compressed for reading by the host. AT commands control the codec bits-per-sample rate and, optionally, select silence deletion including silence detection period adjustment.

Received analog mono audio samples are converted to digital form and formatted into 8-bit unsigned linear PCM or 16-bit signed linear PCM format for reading by the host. AT commands control the bit length and sampling rate. Concurrent DTMF/tone detection is available at the 7200 Hz sample rate.

11

7811073 0024254 068

Voice Transmit Mode. This mode is entered when the #VTX command is active in order to playback voice or audio data to the TXA1/TXA2 output pins, typically to a speaker/handset or to the telephone line.

Digitized voice data is decompressed and converted to analog form at the original compression quantization sample-per-bits rate then output to the TXA1/TXA2 pins. Optional silence interpolation is enabled if silence deletion was selected for voice compression.

Digitized audio data is converted to analog form then output to the TXA1/TXA2 pins.

CALLER ID

Caller ID can be enabled/disabled using the #CID command. When enabled, caller ID information (date, time, caller code, and name) can be passed to the DTE in formatted or unformatted form. Inquiry support allows the current caller ID mode and mode capabilities of the modem to be retrieved from the modem.

CELLULAR DIRECT CONNECT

In US models, the modem provides defined hardware and firmware interfaces for connection to a cellular telephone. The modem controls downloading and execution of a cellular phone driver firmware into MCU RAM to support direct connection to a cellular phone. Different drivers are required to support different cellular phones or phone models as required by the phone manufacturer.

Cellular Interface Signals

The following MCU ports are assigned to cellular phone interface signals:

	Cellular	Use	Non-Cellular Use		
MCU Port	Signal	vo	DTE Serial Interface	Host Parallel Interface	
PE0	CTRL0	0	~OH	~OH	
PE1	CTRL1	0	~PULSE	~PULSE	
PE2	CELBSY	0	~MUTE, ~A/A1	~MUTE, ~A/A1	
PE5	CELDATA	1/0	~CLKSTOP, PTTEN*	PTTEN*	
PE7	DAA/CELL	T I	IDID*	IDID*	
PA3	~CELBSY	1	~TXCLK	~TXACK	
PA4	CELCLK	ı	-RXCLK	-RXACK	
* Used du	ıring reset initia	lization (only in W-class	models.	

Support for these signals is supplied by the cellular driver. When the cellular driver is loaded and a cellular phone interface is indicated on the DAA/CELL input line, the cellular signals are used instead of the wireline signals assigned to the same lines. When the cellular driver is not loaded or when a cellular phone interface is not indicated on the DAA/CELL line when a cellular driver is loaded, the wireline signals are supported.

The cellular and wireline signals are supported in an AccelerATor Kit design and are routed to a standard 15-pin connector which connects to a cable from the cellular phone.

Cellular AT Commands

The modem supports three cellular AT commands that can be used to load the cellular driver and to provide cellular phone identification and status.

- ^C2 Download Cellular Phone Driver. The ^C2 command initiates download of the cellular phone driver into MCU RAM.
- ^I Identify Cellular Phone Driver. The ^I command. reports the identification of the loaded cellular phone driver.
- **^T6 Indicates Status Of Cellular Phone.** The ^T6 command reports the status of the cellular phone connection to the modem. The following bit mapped status is reported:

Bit 0=1: Cellular phone is receiving an incoming

Bit 1=1: Cellular phone is in use

Bit 2=1: Cellular phone is locked (cannot be used)

Bit 3=1: There is no service for cellular phone (does not indicate signal strength)

Bit 4=1: Cellular phone is powered on

Bit 5=1: Cellular driver is initialized

Bit 6 Reserved

Bit 7=1 Cellular cable detected (DAA/CELL = low)

The information obtained by issuing the ^T6 can be used to determine if the loading of the cellular phone driver is necessary by the host software. Download of the cellular phone driver is not required if a cellular interface cable is not connected to the modem (DAA/CELL = high). A download is necessary when a cellular cable is detected (DAA/CELL = low), which implies a cellular phone is also connected, before operation of the phone. Once a driver is downloaded, the modem can operate in wireline mode or cellular mode based on the connection of a cellular cable.

Operation

Once the cellular driver is loaded and the modem is connected to the cellular phone and the phone is powered on, dial/answer functions will be routed through the phone instead of the wireline DAA. No special commands are needed to place or answer cellular calls and the same AT commands and software packages that are used for wireline communication sessions can be used. If a V.42 bis connection is established in wireline mode, the cellular phone driver is removed from MCU RAM so that the V.42 bis dictionaries can be increased to their full size.

Result Messages

While the modem is being used with a cellular phone, result messages are changed from wireline operation status to reflect cellular operation status as follows:

NO DIALTONE - Indicates that cellular service is not currently available or the cellular phone is powered off.

RING - Indicates that the cellular phone is receiving an incoming call.

12

MD105

🖿 7811073 0024255 TT4 🖿

WORLD CLASS COUNTRY SUPPORT

The W-class models include functions which support modem operation in multiple countries. The following capabilities are provided in addition the data modem functions previously described. Country dependent parameters are all programmable by ConfigurACE.

Dialing

Dial Tone Detection. Dial tone detection levels and frequency ranges are programmable by ConfigurACE.

DTMF Dialing. Transmit output level, DTMF signal duration, and DTMF interdigit interval parameters are programmable by ConfigurACE.

Pulse Dialing. Parameters such as make/break times, set/clear times, and dial codes are programmable by ConfigurACE.

Ring Detection. The frequency range is programmable by ConfigurACE.

Blind Dialing. Blind dialing may be disabled by ConfigurACE.

Carrier Transmit Level

The carrier transmit level can be programmed through S91 for data and S92 for fax. The maximum, minimum, and default values can be defined by ConfigurACE to match specific country and DAA requirements.

Calling Tone

Calling tone is generated in accordance with V.25. Calling tone may be toggled (enabled/disabled) by inclusion of a "^" character in a dial string. It may also be disabled by programming a country specific parameter using ConfigurACE.

Call Progress Tone Detection

Frequency and cadence of tones for busy, ringback, congested, dial tone 1, and dial tone 2 are programmable by ConfigurACE.

Answer Tone Detection

The answer tone detection period is programmable by ConfigurACE.

Blacklist Parameters

The modem can operate in accordance with requirements of individual countries to prevent misuse of the network by limiting repeated calls to the same number when previous call attempts have failed. Call failure can be detected for reasons such as no dial tone, number busy, no answer, no ringback detected, voice (rather than modem) detected, and key abort (dial attempt aborted by user). Actions resulting from such failures can include specification of minimum inter-call delay, extended delay between calls, and maximum numbers of retries before the number is permanently forbidden ("blacklisted"). Up to 40 such numbers may be tabulated. The blacklist parameters are established by ConfigurACE.

Relay Control

On-hook/off-hook, make/break, and set/clear relay control parameters are programmable by ConfigurACE.

DIAGNOSTICS

Commanded Tests

Diagnostics are performed in response to &T commands, serial interface control signals, or switch inputs per V.54.

Analog Loopback. Data from the local DTE is sent to the modem, which loops the data back to the local DTE.

Analog Loop Self Test. An internally generated test pattern of alternating 1s and 0s (reversals) is sent to the modem. An error detector within the modem checks for errors in the string of reversals.

Remote Digital Loopback (RDL). Data from the local DTE is sent to the remote modem which loops the data back to the local DTE.

Remote Digital Loopback with Self Test. An internally generated pattern is sent from the local modem to the remote modem, which loops the data back to the local modem.

Local Digital Loopback. When local digital loop is requested by the local DTE, two data paths are set up in the local modern. Data from the local DTE is looped back to the local DTE (path 1) and data received from the remote modern is looped back to the remote modern (path 2).

Power On Reset Tests

Upon power on or receipt of the Z command, the modem performs tests of the MDP, RAM, ROM, and NVRAM.

LOW POWER SLEEP AND STOP MODES

Sleep Mode Entry. The modem enters the low power sleep mode when no line connection exists and no host activity occurs for the period of time specified in the S24 register. All MCU circuits are turned off except the internal MCU clock circuitry in order to consume reduced power while being able to immediately wake up and resume normal operation.

Stop Mode Entry. The modem enters the low power stop mode when the ~STPMODE input is asserted. All MCU circuits are turned off including the internal MCU clock circuitry in order to consume lower power than sleep mode. The modem will enter stop mode immediately, terminating a line connection, terminating any test in process, and allowing any data in the Receive Buffer Register to clear.

~STPMODE must be returned high before the modem can wake-up.

Wake-up. Wakeup occurs when a ring is detected on the telephone line, the host writes to the modem (parallel interface version), or the DTE sends a character to the modem (serial interface version). Since the modem requires more time to attain normal operation when waking up from stop mode than sleep mode, the host must send any character to the modem before issuing the first AT command.

MD105

13

🗷 7811073 0024256 930 **📼**

CONFIGURACE UTILITY PROGRAM

The PC-based ConfigurACE utility program allows the OEM to customize the MCU firmware to suit specific application and country requirements. ConfigurACE allows programming of functions such as:

- · Loading of multiple sets of country parameters
- . Loading of NVRAM factory profiles
- Call progress and blacklisting parameters
- Entry of S register maximum/minimum values
- · Limitation of transmit levels
- · Modification of result codes
- Modification of factory default values
- · Customization of the ATI4 response
- Customization of fax OEM messages

This program modifies the hex object code which can be programmed directly into the system EPROM. Lists of the generated parameters can be displayed or printed.

Rockwell-provided country parameter files allow a complete set of country-specific call progress and blacklisting parameters to be selected.

ADDITIONAL INFORMATION

Additional information is described in the RC144ACG Designer's Guide (Order No. 1008) and in the AT Command Reference Manual (Order No. 853).

HARDWARE INTERFACES

The modem hardware interface signals for serial interface configuration is shown in Figure 2.

The modem hardware interface signals for parallel interface configuration is shown in Figure 3. Figure 3a shows the general parallel interface for cellular and W-class applications. Figure 3b shows the general interface for business audio application. .

The MCU pin assignments for the 80-pin PQFP are shown in Figure 4 and are listed in Table 5.

The MCU pin assignments for the 100-pin TQFP are shown in Figure 5 and are listed in Table 6.

The MDP pin assignments for the 100-pin PQFP are shown in Figure 6 and are listed in Table 7.

The MDP pin assignments for the 128-pin TQFP are shown in Figure 7 and are listed in Table 8.

The MCU hardware interface signals are defined in Table 9.

The MDP hardware interface signals are defined in Table 10.

The digital electrical characteristics for the hardware interface signals are listed in Table 11.

The analog electrical characteristics for the hardware interface signals are listed in Table 12.

The current and power requirements are listed in Table 13.

The absolute maximum ratings are listed in Table 14.

Table 15 shows the parallel interface registers and the corresponding bit assignments.

MD105

14

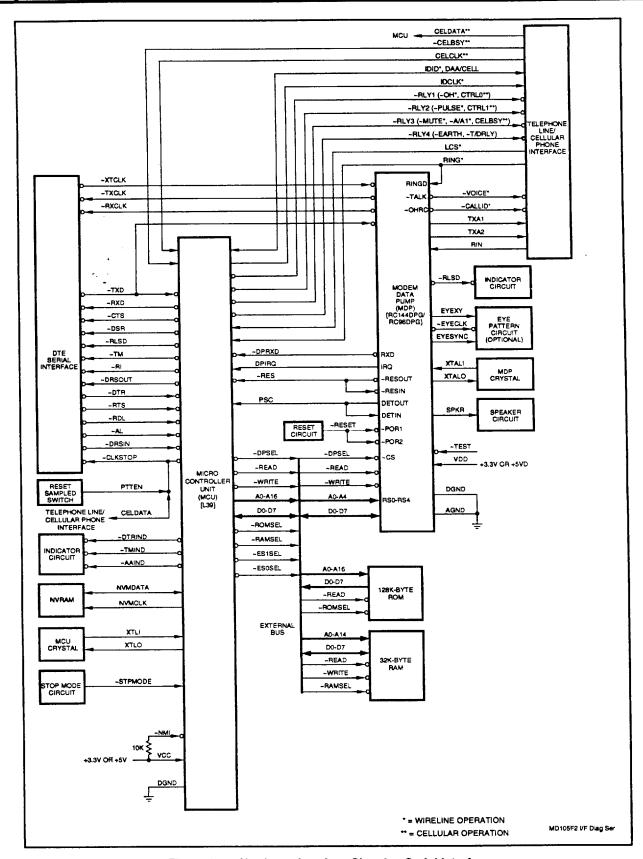


Figure 2. Hardware Interface Signals - Serial Interface

15

7811073 0024258 703 🚥

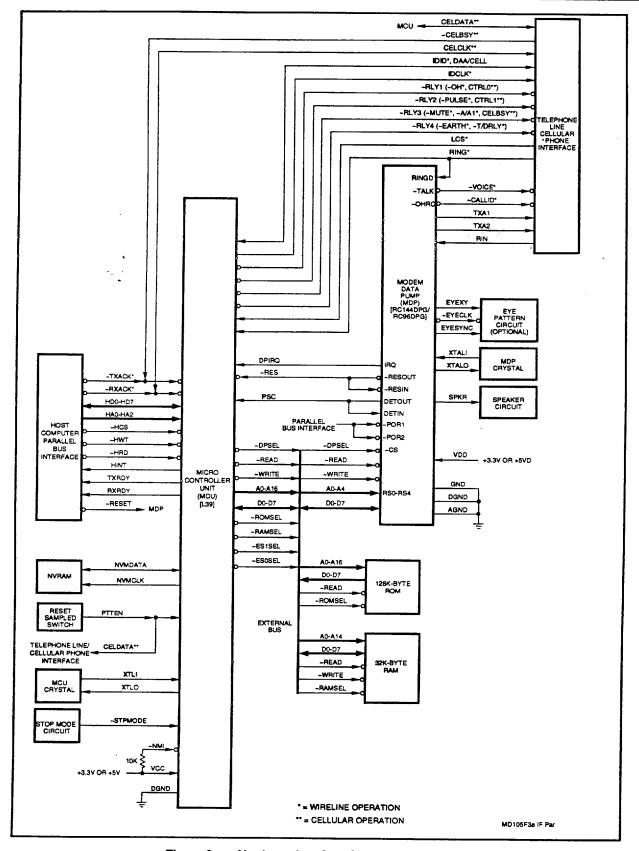


Figure 3a. Hardware Interface Signals - Parallel Interface

MD105

■ 7811073 0024259 64T ■

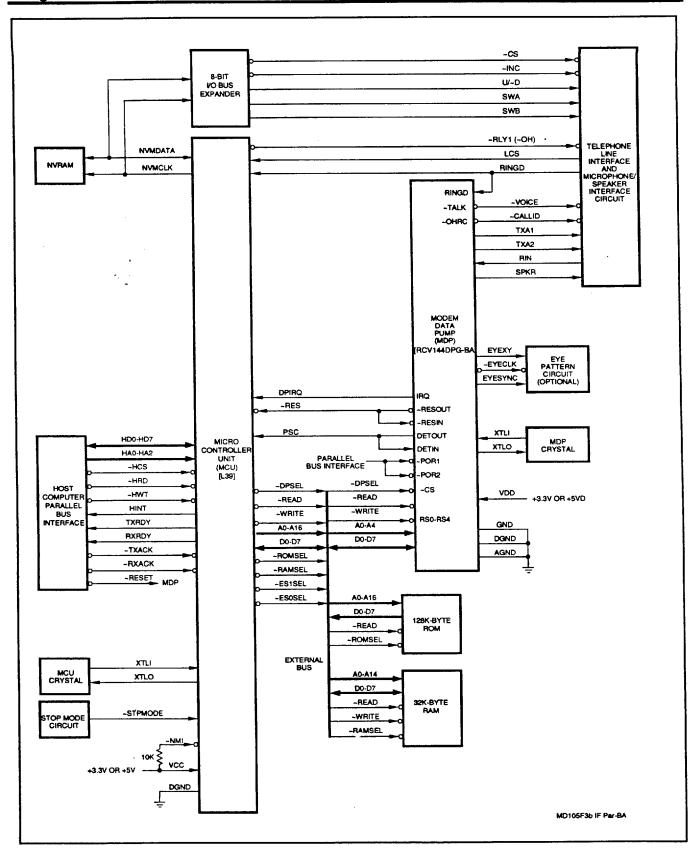


Figure 3b. Hardware Interface Signals - Parallel Interface with Business Audio

17

🖚 7811073 0024260 361 **🖿**

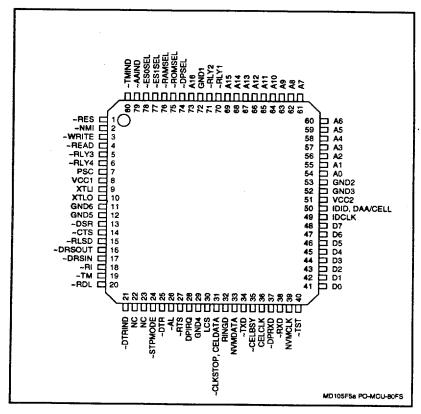


Figure 4a. MCU Pin Signals- 80-Pin PQFP - Serial Interface

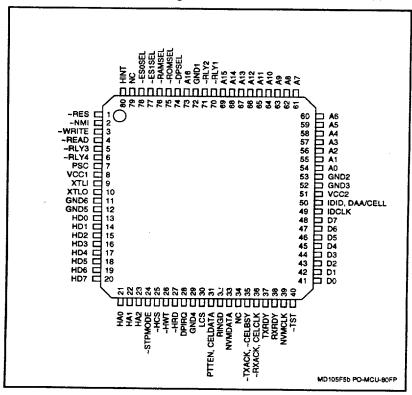


Figure 4b. MCU Pin Signals- 80-Pin PQFP - Parallel Interface

MD105

■ 7811073 0024261 2T8 ■

Table 5a. MCU Pin Signals - 80-Pin PQFP - Serial Interface

Pin	Signal Label	I/O Type	Interface	Pin	Signal Label	I/O Type	
1	-RES	IC	MDP: ~RESOUT	41	D0	IA/OA	EB: D0
2	I~NMI	MI	Note 4	42	D1	IA/OA	EB: D1
3	-WRITE	OA	EB: -WRITE	43	D2	IA/OA	EB: D2
4	-READ	OA	EB: ~READ	44	D3	IA/OA	EB: D3
5	(PE2) ~RLY3	OA	WL: DAA: A/A1, ~MUTE, Cellular: CELBSY	45	D4	IA/OA	EB: D4
6	(PE3) ~RLY4	OA	WL: DAA: ~T/DRLY, ~EARTH	46	D5	IA/OA	EB: D5
7	PSC	IA.	MDP: DETOUT	47	D6	IA/OA	EB: D6
8	VCC1	PWR	VCC	48	D7	IA/OA	EB: D7
9	XTLI	IE	XTLI	49	(PE6) IDCLK	OA	WL: DAA: IDCLK
10	XTLO	OE	XTLO	50	(PE7) IDID Cellular: DAA/CELL	IA	WL: DAA: IDID Cellular: DAA/CELL
11	GND6	GND	GND	51	VCC2	PWR	VCC
12	GND5	GND	GND	52	GND3	GND	GND
13	(PC0) -DSR	OA	DTE: ~DSR	53	GND2	GND	GND
14	(PC1) -CTS	OA	DTE: -CTS	54	A0	OA	EB: A0
15	(PC2) ~RLSD	OA OA	DTE: ~RLSD	55	A1	OA	EB: A1
16	(PC3) ~DRSOUT	OA OA	DTE: -DRSOUT	56	A2	OA	EB: A2
17	(PC4) -DRSIN	OA	DTE: -DRSIN	57	A3	OA	EB: A3
18	(PC5) ~RI	OA OA	DTE: -RI	58	A4	OA	EB: A4
19	(PC6) -TM	OA	DTE: ~TM	59	A5	OA	EB: A5
20	(PC7) ~BDL	IA.	DTE: ~RDL	60	A6	OA	EB: A6
21	(PD0) ~DTRIND	OA OA	Indicator Circuit	61	A7	OA	EB: A7
22	(PD1) NC	+	NC	62	A8	OA	EB: A8
23	(PD2) NC	+	NC	63	A9	OA	EB: A9
24	(PD3) ~STPMODE	IA	Stop Mode Circuit	64	A10	OA	EB: A10
25	(PD4) ~DTR	T IA	DTE: ~DTR	65	A11	OA	EB: A11
26	(PD5) ~AL	IA IA	DTE: ~AL	66	A12	OA	EB: A12
27	(PD6) -RTS	 	DTE: -RTS	67	A13	OA	EB: A13
28	(PD7) DPIRQ	IA	MDP: IRQ	68	A14	OA	EB: A14
29	GND4	GND	GND	69	A15	OA	EB: A15
30	(PE4) WL: LCS	IA	WL: DAA: LCS	70	(PE0) ~RLY1	OA	WL: DAA: ~OH Cellular: CTRL0
31	(PE5) PTTEN WL: -CLKSTOP Cellular: CELDATA	IA OA IA/OA	PTTEN WL: -CLKSTOP Cellular: CELDATA	71	(PE1) ~RLY2	OA	WL: DAA: ~PULSE Cellular: CTRL1
32	(PAO) RINGD	IA.	DAA: RINGD	72	GND1	GND	GND
33	(PA1) NVMDATA	IA/OA	NVRAM: SDA (Note 4)	73	(PB0) A16	OA	EB: A16
34	(PA2) ~TXD	IA IA	DTE: -TXD	74	(PB1) ~DPSEL	OA	EB: MDP: ~CS
35	(PA3) Cellular: -CELBSY		Cellular: ~CELBSY	75	(PB2) ~ROMSEL	OA	EB: ROM: ~CE
36	(PA4) Cellular: CELCLK	iA	Cellular: CELCLK	76	(PB3) ~RAMSEL	OA	EB: RAM: -CS
37	(PA5) ~DPRXD	MI	MDP: RXD	77	(PB4) ~ES1SEL	OA	Not used
38	(PA6) ~RXD	OA OA	DTE: ~RXD	78	(PB5) ~ESOSEL	OA	Not Used
	(PA7) NVMCLK	OA	NVRAM: SCL	79	(PB6) -AAIND	OA	Indicator Circuit
39					(PB7) ~TMIND	OA	Indicator Circuit

1. I/O types:

MI = Modem interconnect.

IA, IB, IC, IE = Digital input.

OA, OB, OE = Digital output.

- NC = No external connection.
- NU = Not used; connect as noted.
- 4. Connect to VCC through 10 K ohms.
- 5. Leave open to allow internal MCU ROM use; connect to GND through 10K ohms to force external ROM use only.
- 6. Connect to GND through 10K ohms.
- Connect to GND through 100K ohms.

MD105

7811073 0024262 134

19

MCU Pin Signals- 80-Pin PQFP - Parallel Interface Table 5b.

Pin	Signal Label	Туре	Interface	Pin	Signal Label	Туре	Interfece
1	~RES	IC	MDP: ~RESOUT	41	D0	IA/OA	Interface EB: D0
2	~NMI	Mi	Note 4	42	D1	IA/OA	
3	-WRITE	OA	EB: -WRITE	43	D2	IA/OA	EB: D1
4	-READ	OA	EB: ~READ	44	D3		EB: D2
5	(PE2) ~RLY3	OA	WL: DAA: A/A1, ~MUTE	45	D4	IA/OA	EB: D3 EB: D4
6	(PE3) ~RLY4		Cellular: CELBSY				
		OA	WL: DAA: ~T/DRLY, ~EARTH	46	D5	IA/OA	EB: D5
7	PSC	IA	MDP: DETOUT	47	D6	IA/OA	EB: D6
88	VCC1	PWR	VCC	48	D7	IA/OA	EB: D7
9	XTLI	ΙE	XTLI	49	(PE6) IDCLK	OA	WL: DAA: IDCLK
10	XTLO	OE	XTLO	50	(PE7) IDID Cellular; DAA/CELL	IA	WL: DAA: IDID
11	GND6	GND	GND	51	VCC2	-	Cellular: DAA/CELL
12	GND5	GND	GND	52	GND3	PWR	VCC
13	(PC0) HD0	IA/OA	HB. HD0	53	GND2	GND	GND
14	(PC1) HD1	IA/OA	HB: HD1	54	A0	GND	GND
15	(PC2) HD2	IA/OA	HB: HD2	55		OA .	EB: A0
16	(PC3) HD3	IA/OA	HB: HD3	56	A1 A2	OA	EB: A1
17	(PC4) HD4	IA/OA	HB: HD4	57		OA	EB: A2
18	(PC5) HD5	IA/OA	HB: HD5		A3	OA	EB: A3
19	(PC6) HD6	IA/OA	HB: HD6	58	A4	_ OA	EB: A4
20	(PC7) HD7	IA/OA	HB: HD7	59	A5	OA	EB: A5
21	(PD0) HA0	IA	HB: HAO	60	A6	OA	EB: A6
22	(PD1) HA1	IA IA	HB: HA1	61	A7	OA	EB: A7
23	(PD2) HA2	iA	HB: HA2	62	A8	OA	EB: A8
24	(PD3) ~STPMODE	ià.	Stop Mode Circuit	63	A9	OA	EB: A9
25	(PD4) ~HCS	iA I	HB: ~CS	64	A10	OA	EB: A10
26	(PD5) ~HWT	IA		65	A11	OA	EB: A11
27	(PD6) -HRD	IA I	HB: ~WT HB: ~RD	66	A12	OA	EB: A12
28	(PD7) DPIRQ	IA IA		67	A13	OA	EB: A13
29	GND4	GND	MDP: IRQ	68	A14	OA	EB: A14
30	(PE4) WL: LCS	IA IA	GND	69	A15	OA	EB: A15
31	(PE5) PTTEN		WL: DAA: LCS	70	(PE0) ~RLY1	OA	WL: DAA: ~OH Celfular: CTRL0
31	Cellular: CELDATA	IA IA/OA	PTTEN	71	(PE1) ~RLY2	OA	WL: DAA: ~PULSE
32	(PAO) RINGD		Cellular: CELDATA				Cellular: CTRL1
33	(PA1) NVMDATA	IA IA	DAA: RINGD	72	GND1	GND	GND
34	(PA2) NC	IA/OA	NVRAM: SDA (Note 4)	73	(PB0) A16	OA	EB: A16
35	(PA3) WL: ~TXACK	+	NC	74	(PB1) ~DPSEL	OA	EB: MDP: ~CS
	Cellular: ~CELBSY	IA	WL: HB: ~TXACK Cellular: ~CELBSY	75	(PB2) ~ROMSEL	OA	EB: ROM:: ~CE
36	(PA4) WL: ~RXACK Cellular: CELCLK	IA	WL: HB: ~RXACK Cellular: CELCLK	76	(PB3) ~RAMSEL	OA	EB: RAM: ~CS
37	(PA5) TXRDY	OA	HB: TXRDY	77	(PB4) -ES1SEL	OA	Not used
38	(PA6) RXRDY	OA	HB: RXRDY	78	(PB5) -ESOSEL	OA	
39 40	(PA7) NVMCLK	OA	NVRAM: SCL	79	(PB6) HDIS	OA OA	Not used NC
	~TST	MI	NC (Note 5)		(PB7) HINT	i UA I	NO

1. I/O types:

MI = Modern interconnect.

IA, IB, IE = Digital input

- OA, OB, OE = Digital output. NC = No external connection.
- NU = Not used; connect as noted.
- Connect to VCC through 10 K ohms.
- Leave open to allow internal MCU ROM use; connect to GND through 10K ohms to force external ROM use only.
- Connect to HB: RESET through inverter.

20

MD105

■ 7811073 0024263 070 ■

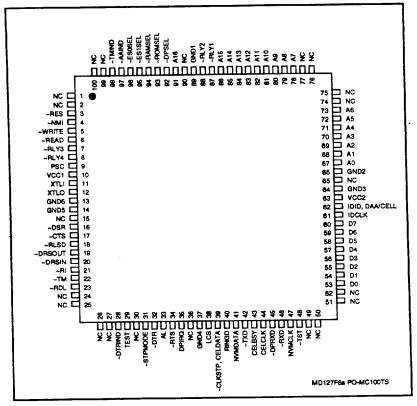


Figure 5a. MCU Pin Signals- 100-Pin TQFP - Serial Interface

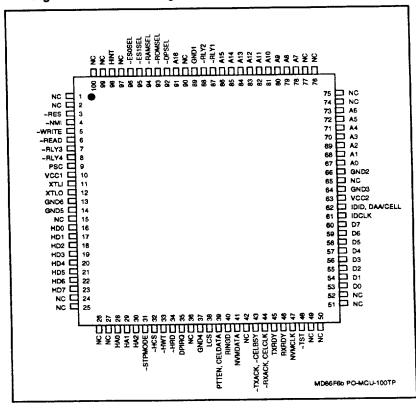


Figure 5b. MCU Pin Signals- 100-Pin TQFP - Parallel Interface

21

🖿 7811073 0024264 TO? 🖿

Table 6a. MCU Pin Signals- 100-Pin TQFP - Serial Interface

Pin	Signal Label	I/O Type	Interface ³	Pin	Signal Label	VO Type	Interface
	NC		NC	51	NC	1	NC
2	NC		NC	52	NC		NC
3	~RES	IC	MDP: ~RESOUT	53	DO	IA/OA	EB: D0
4	~NM!	Mi	Note 4	54	D1	IA/OA	EB: D1
5	~WRITE	OA	EB: ~WRITE	5 5	D2	IA/OA	EB: D2
6	-READ	OA	EB: ~READ	56	D3	IA/OA	EB: D3
7	(PE2) ~RLY3	OA	WL: DAA: A/A1, ~MUTE, Cellular: CELBSY	57	D4	IAOA	EB: D4
8	(PE3) ~RLY4	OA	WL: DAA: ~T/DRLY, ~EARTH	58	D5	IA/OA	EB: D5
9	PSC	IA	MDP: DETOUT	59	D6	IA/OA	EB: D6
10	VCC1	PWR	VCC	60	D7	IA/OA	EB: D7
11	XTLI	ΙĒ	XTLI	61	(PE6) IDCLK	OA	WL: DAA: IDCLK
12	XTLO	OE	XTLO	62	(PE7) IDID Cellular: DAA/CELL	IA	WL: DAA: IDID Cellular: DAA/CELL
13	GND6	GND	GND	63	VCC2	PWR	VCC VCC
14	GND5	GND	GND	64	GND3	GND	GND
15	NC		NC	65	NC	3,45	NC .
16	(PC0) ~DSR	OA	DTE: ~DSR	66	GND2	GND	GND
17	(PC1) ~CTS	OA	DTE: ~CTS	67	A0	OA	EB: A0
18	(PC2) ~RLSD	OA	DTE: ~RLSD	68	A1	OA OA	EB: A1
19	(PC3) ~DRSOUT	OA	DTE: ~DRSOUT	69	A2	OA	EB: A2
20	(PC4) ~DRSIN	OA	DTE: -DRSIN	70	A3	OA OA	EB: A3
21	(PC5) -RI	OA	DTE: ~RI	71	A4	OA OA	EB: A4
22	(PC6) ~TM	OA	DTE: -TM	72	A5	OA OA	EB: A5
23	(PC7) ~RDL	IA	DTE: ~RDL	73	A6	OA OA	EB: A6
24	NC		NC	74	NC -	- UA	NC
25	NC		NC	75	NC		NC NC
26	NC		NC	76	NC	+	NC NC
27	NC		NC	77	NC		NC NC
28	(PD0) ~DTRIND	OA	Indicator Circuit	78	A7	OA	EB: A7
29	(PD1) NC		NC	79	A8	OA OA	
30	(PD2) NC		NC	80	A9	OA I	EB: A8
31	(PD3) ~STPMODE	iA	Stop Mode Circuit	81	A10	OA OA	EB: A9
32	(PD4) ~DTR	IA	DTE: ~DTR	82	A11	OA OA	EB: A10
33	(PD5) -AL	IA	DTE: ~AL	83	A12	OA OA	EB: A11
34	(PD6) -RTS	IA	DTE: ~RTS	84	A13	OA I	EB: A12
35	(PD7) DPIRQ	IA	MDP: IRQ	85	A14	OA I	EB: A13
	NC		NC	86	A15	OA OA	EB: A14
37	GND4	GND	GND	87	(PE0) ~RLY1	OA OA	EB: A15
38	(PE4) WL: LCS	IA	WL: DAA: LCS	88	(PE1) -RLY2	OA OA	WL: DAA: ~OH Cellular: CTRL0
39	(PE5) PTTEN	I _A	PITEN	89	GND1		WL: DAA: ~PULSE Cellular: CTRL1
	WL: ~CLKSTOP		WL: -CLKSTOP	69	GINUT	GND	GND
	Cellular: CELDATA	IA/OA	Cellular: CELDATA			1 1	
40	(PA0) RINGD	IA	DAA: RINGD	90	NC	++	
	(PA1) NVMDATA		NVRAM: SDA (Note 4)	91	(PB0) A16		NC
	(PA2) ~TXD	I IA I	DTE: -TXD	92	(PB1) -DPSEL		EB: A16
	(PA3) Cellular: ~CELBSY	IA	Cellular: -CELBSY	93	(PB2) ~ROMSEL		EB: MDP: ~CS
44	(PA4) Cellular: CELCLK	IA	Cellular: CELCLK	94	(PB3) ~RAMSEL		EB: ROM: ~CE
	(PA5) ~DPRXD		MDP: RXD	95	(PB4) ~ES1SEL		EB: RAM: ~CS
	(PA6) -RXD		DTE: ~RXD	96	(PB5) ~ESOSEL		Not used
47	(PA7) NVMCLK		VVRAM: SCL	97			Not used
	~TST		NC (Note 5)	98	(PB6) -AAIND		ndicator Circuit
	NC		VC (140(9.5)	98	(PB7) ~TMIND		ndicator Circuit
50	NC		vc -	100	NC NC		VC
							VC

1. I/O types:

MI = Modern interconnect.

IA, IB, IC, IE = Digital input.

OA, OB, OE = Digital output.

- NC = No external connection.
- NU = Not used; connect as noted.
- Connect to VCC through 10 K ohms.
- Leave open to allow internal MCU ROM use; connect to GND through 10K ohms to force external ROM use only.
- Connect to GND through 10K ohms.
- Connect to GND through 100K ohms.

22

MD105

7811073 0024265 943 🖿

Table 6b. MCU Pin Signals- 100-Pin TQFP - Parallel Interface

		VO Type	Interface ³	Pin	Signal Label	ИО Туре	Interface
Pin	Signal Label	I I/O Type		51	NC .		NC
1	NC		NC NC	52	NC NC		NC
2	NC		NC	52 53	DO	IA/OA	EB: D0
3	-RES	İĊ	MDP: -RESOUT	53 54	D1	IA/OA	EB: D1
4	~NMI	M!	Note 4		D2	IAOA	EB: D2
5	~WRITE	OA	EB: -WRITE	55		IA/OA	EB: D3
6	~READ	OA	EB: ~READ	56	D3	IA/OA	EB: D3
7	(PE2) ~RLY3	OA	WL: DAA: A/A1, ~MUTE, Cellular: CELBSY	57	D4		
8	(PE3) -RLY4	OA	WL: DAA: ~T/DRLY, ~EARTH	58	D5	IA/OA	EB: D5
9	PSC	IA	MDP: DETOUT	59	D6	IA/OA	EB: D6
10	VCC1	PWR	VCC	60	D7	IA/OA	EB: D7
11	XTLI	IE	XTLI	61	(PE6) IDCLK	OA	WL: DAA: IDCLK
12	XTLO	ŌE	XTLO	62	(PE7) IDID Cellular: DAA/CELL	IA	WL: DAA: IDID Cellular: DAA/CELL
13	GND6	GND	GND	63	VCC2	PWR	VCC
		GND	GND	64	GND3	GND	GND
14	GND5	- 0.45	NC	65	NC		NC ·
15	NC ·	IA/OA	HB: HD0	66	GND2	GND	GND
16	(PC0) HD0		HB: HD1	67	AO	OA	EB: A0
17	(PC1) HD1 -	IA/OA	HB: HD1	68	A1	OA OA	EB: A1
18	(PC2) HD2	IA/OA		69	A2	OA OA	EB: A2
19	(PC3) HD3	IA/OA	HB: HD3	70	A3	- OA	EB: A3
20	(PC4) HD4	IA/OA	HB: HD4	70	A3	OA OA	EB. A4
21	(PC5) HD5	IA/OA	HB: HD5	71	A4 A5	OA OA	EB: A5
22	(PC6) HD6	IA/OA	HB: HD6			OA OA	EB: A6
23	(PC7) HD7	IA/OA	HB: HD7	73	A6		NC
24	NC		NC	74	NC		NC NC
25	NC		NC	75	NC		
26	NC	-	NC	76	NC		NC NC
27	NC NC		NC	77	NC		NC FD. A7
28	(PD0) HA0	IA	HB: HA0	78	A7	OA OA	EB: A7
29	(PD1) HA1	IA IA	HB: HA1	79	A8	OA	EB: A8
30	(PD2) HA2	iA IA	HB: HA2	80	A9	OA	EB: A9
31	(PD3) ~STPMODE	ià.	Stop Mode Circuit	81	A10	OA	EB: A10
31	(PD4) ~HCS	IA IA	HB: ~CS	82	A11	OA	EB: A11
32	(PD5) ~HWT	- iA	HB: ~WT	83	A12	OA	EB: A12
	(PD5) ~HW1 (PD6) ~HRD	IA IA	HB: -RD	84	A13	OA	EB: A13
34		IA IA	MDP: IRQ	85	A14	OA	EB: A14
35	(PD7) DPIRQ	<u> </u>	NC NC	86	A15	OA OA	EB: A15
36 37	NC GND4	GND	GND	87	(PE0) ~RLY1	OA OA	WL: DAA: ~OH Cellular: CTRL0
38	(PE4) WL: LCS	IA	WL: DAA: LCS	88	(PE1) ~RLY2	OA	WL: DAA: ~PULSE Cellular: CTRL1
L			PTTEN	89	GND1	GND	
39	(PE5) PTTEN	IA OA	WL: ~CLKSTOP	~~	GIAD !	1	1 • • • • • • • • • • • • • • • • • • •
ł	WL: -CLKSTOP Cellular: CELDATA	IA/OA		1		l	1
40		IA/CA	DAA: RINGD	90	NC		NC
40	(PA0) RINGD	IA/OA		91	(PB0) A16	OA	
41	(PA1) NVMDATA	INUA	NC NVHAM: SDA (NOTE 4)	92	(PB1) -DPSEL	OA OA	
42	(PA2) NC	- IA	WL: HB: ~TXACK	92	(PB2) ~ROMSEL	OA OA	
43	(PA3) WL: ~TXACK Cellular: ~CELBSY		Cellular: ~CELBSY		<u> </u>	OA OA	
44	(PA4) WL: -RXACK Cellular: CELCLK	IA	WL: HB: -RXACK Cellular: CELCLK	94	(PB3) -RAMSEL		
45	(PA5) TXRDY	OA	HB: TXRDY	95	(PB4) ~ES1SEL	OA OA	
46	(PA6) RXRDY	OA	HB: RXRDY	96	(PB5) ~ES0SEL	OA	
47	(PA7) NVMCLK	OA OA	NVRAM: SCL	97	(PB6) HDIS	OA	
47		Mi	NC (Note 5)	98	(PB7) HINT	OA	
48			NC (NOTE 3)	99	NC		NC
50			NC NC	100			NC
5U	NC	1	NO	ننط			

1. VO types:

Mi = Modern interconnect.

IA, IB, IE = Digital input.

OA, OB, OE = Digital output.

- NC = No external connection allowed.
- NU = Not used; connect as noted.
- Connect to VCC through 10 K ohms.
- 5. Leave open to allow internal MCU ROM use; connect to GND through 10K ohms to force external ROM use only.
- Connect to HB: RESET through inverter.

MD105

23

■ 7811073 0024266 88T **■**

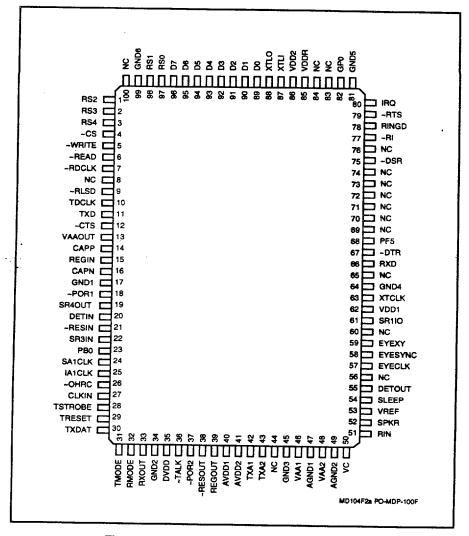


Figure 6. MDP Pin Signals - 100-Pin PQFP

Table 7. MDP Pin Signals - 100-Pin PQFP

Pin	Signal Label	I/O Type	Interface ³	Pin	Signal Label	I/O Type	Interface
1	RS2	iA	MCU: A2	51	RIN	I(DA)	DAA: RIN
2	RS3	IA IA	MCU: A3	52	SPKR	O(DF)	Speaker Circuit
3	RS4	i i i i i i	MCU: A4	53	VREF	Mi	VC through capacitors
	~CS	IA IA	MCU: ~DPSEL	54	SLEEP	MI	PF5 (68)
4		IA IA	MCU: -WRITE	55	DETOUT	MI	DETIN (20); Controller
5	-WRITE		MCU: ~READ	56	NC		NC
6	~READ	IA OA	PIF: NC	57	EYECLK	OA	NC
7	-RDCLK	OA	SIF: DTE I/F: ~RXCLK	57	ETECEN		,,,,
			NC	58	EYESYNC	OA	NC
8	NC	OA	NC NC	59	EYEXY	OA	NC
9	-RLSD		PIF: NC	60	NC	- "'	NC
10	TDCLK	OA	SIF: DTE VF: ~TXCLK		1 140	1	
		iA.	SIF: DTE & MCU TXD	61	SR1IO	MI	TMODE (31)
11	TXD	I IA	(Note 4)	01	SATIO	""	
		OÁ	NC	62	VDD1	PWR	VCC
12	-CTS		VAA1 and VAA2	63	XTCLK	IA	PIF: NC
13	VAAOUT	MI	VAA1 and VAA2	63	AIGER	"	SIF: DTE VF: ~XTCLK
		Mi	To CAPN through 0.1 μF	64	GND4	GND	GND
14	CAPP	1	REGOUT (39)	65	NC	- 3.12	NC
15	REGIN	MI		66	RXD	OA .	MCU: -DPRXD
16	CAPN	MI	To CAPP through 0.1 μF	67	-DTR	IA.	VCC (Note 4)
17	GND1	GND	GND		PF5	M	Connect to SLEEP (54)
18	-POR1	IA	Reset Circuit/Host	68	PFS	i nov≀	Confident to SEEE! (O4)
			Interface	69	NC		NC
19	SR4OUT	M!	TXDAT (30)	70	NC NC		NC
20	DETIN	M	DETOUT (55)	71	NC NC		NC NC
21	-RESIN	MI	~RESOUT (38)		NC NC		NC
22	SR3IN	Mt	RXOUT (33)	72	NC NC		NC
23	PB0	MI	CLKIN (27)	73	NC NC		NC
24	SA1CLK	MI	TRESET (29)	74		OA	NC NC
25	IA1CLK	MI	TSTROBE (28)	75	-DSR	OA	NC NC
26	~OHRC	OD	WL: DAA: Caller ID Relay	76	NC		NC NC
27	CLKIN	MI	PB0 (23)	77	-RI	OA	DAA: RINGD
28	TSTROBE	MI	IA1CLK (25)	78	RINGD	IA	
29	TRESET	MI	SA1CLK (24)	79	-RTS	IA.	VCC (Note 4)
30	TXDAT	Mi	SR4OUT (19)	80	IRQ	OA	MCU: DPIRQ
31	TMODE	MI	RMODE (32)	81	GND5	GND	GND
32	RMODE	MI	TMODE (31)	82	GP0	MI	EYESYNC
33	RXOUT	Mi	SR3IN (22)	83	NC		NC
34	GND2	GND	GND	84	NC		NC
35	DVDD	PWR	VCC	85	VDDR	MI	0.1 μF to GND
36	~TALK	OD	WL: DAA: Voice Relay	86	VDD2	PWR	vcc
37	~POR2	IA	Reset Circuit/Host	87	XTLI	[1	Crystal/Clock Circuit
-			Interface	.i			
38	~RESOUT	IA	~RESIN (21); Controller	88	XTLO	0	Crystal/Clock Circuit
39	REGOUT	MI	REGIN (15)	89	D0	IA/OA	MCU: DO
40	AVDD1	PWR	VCC	90	D1	IA/OA	MCU: D1
41	AVDD2	PWR	VCC with RC filter	91	D2 .	IA/OA	MCU: D2
42	TXA1	O(DD)	DAA: TXA1	92	D3	IA/OA	MCU: D3
43	TXA2	O(DD)	DAA: TXA2	93	D4	IA/OA	MCU: D4
44	NC NC		NC	94	D5	IA/OA	MCU: D5
45	GND3	GND	GND	95	D6	IA/OA	MCU: D6
46	VAA1	PWR	VAAOUT	96	D7	IA/OA	MCU: D7
46	AGND1	GND	AGND	97	RS0	IA	MCU: A0
	VAA2	PWR	VAAOUT	98	RS1	IA	MCU: A1
48		GND	AGND	99	GND6	GND	GND
49	AGND2	MI	AGND through capacitors		NC NC	1	NC
50	vc	MI	AGNU through capacitors	1.00	1 110		

. VO types:

MI = Modern interconnect.

IA, IB = Digital input.

OA, OB = Digital output.

I(DA)] = Analog input.

O(DD), O(DF) = Analog output.

. NC = No external connection allowed.

. Interface Legend:

PIF = Host Parallel Interface Configuration

SIF = DTE Serial Interface Configuration

WL = Wireline.

DTE = Data Terminal Equipment.

- 4. Connect to VCC through 20K ohms.
- 5. To GND through 82k ohms at DAA interface.

MD105

25

📰 7811073 0024268 652 📟

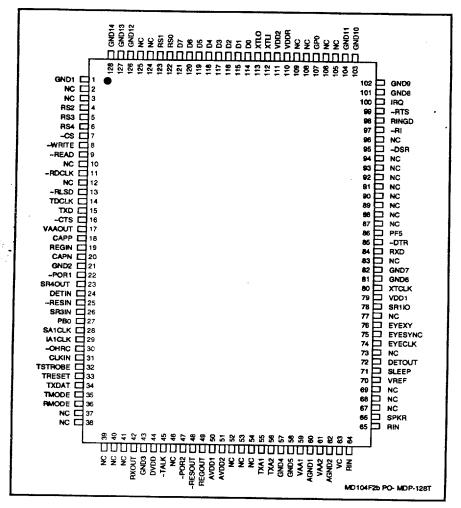


Figure 7. MDP Pin Signals - 128-Pin TQFP

Table 8. MDP Pin Signals - 128-Pin TQFP

Pin	Signal Label	I/O Type	Interface ³	Pin	Signal Label	I/O Type	Interface
1	GND1	GND	GND	65	RIN2	I(DA)	DAA: RIN
2	NC		NC	66	SPKR	O(DF)	Speaker Circuit
3	NC		NC	67	NC		NC
4	RS2	iA I	MCU: A2	68	NC		NC
5	RS3	iÀ l	MCU: A3	69	NC		NC
6	RS4	IA IA	MCU: A4	70	VREF	MI	VC through capacitors
7	-CS	iA i	MCU: ~DPSEL	71	SLEEP	MI	PF5 (86)
8	~WRITE	IA IA	MCU: ~WRITE	72	DETOUT	MI	DETIN (24); Controller
9	-READ	IA I	MCU: ~READ	73	NC		NC
10	NC NC		NC	74	EYECLK	ÖA	NC
11	-RDCLK	OA	PIF: NC	75	EYESYNC	OA	NC
			SIF: DTE I/F: -RXCLK	76	EYEXY	- OA	NC
12	NC		NC NC	77	NC		NC
13	~RLSD	OA OA	PIF: NC	78	SRIIO	MI	TMODE (35)
14	TDCLK	UA	SIF: DTE I/F: ~TXCLK				
15	TXD .	IA	SIF: DTE & MCU TXD (Note 4)	79	VDD1	PWR	VCC
16	-CTS	OA	NC	80	XTCLK	IA	DTE Serial Interface
17	VAAOUT	MI	VAA1 and VAA2	81	GND6	GND	GND
18	CAPP	MI	To CAPN through 0.1 μF	82	GND7	GND	GND
19	REGIN	MI	REGOUT (49)	83	NC		NC
20	CAPN	MI	To CAPP through 0.1 μF	84	RXD	OA	MCU: ~DPRXD
21	GND2	GND	GND	85	-DTR	IA	VCC (Note 4)
22	-POR1	IA	Reset Circuit/Host Interface	86	PF5	MI	SLEEP (71)
	OD4OUT	MI	TXDAT (34)	87	NC		NC
23	SR4OUT	MI	DETOUT (72)	88	NC		NC
24	DETIN	MI	-RESOUT (48)	89	NC		NC
25	~RESIN	Mi	RXOUT (42)	90	NC		NC
26	SR3IN	MI	CLKIN (31)	91	NC		NC
27	PB0	M	TRESET (33)	92	NC		NC
28	SA1CLK	Mi	TSTROBE (32)	93	NC		NC
29 30	IA1CLK	OD OD	WL: DAA: Caller ID Relay	94	NC		NC
31	CLKIN	MI	PB0 (27)	95	-DSR	OA	NC
32	TSTROBE	MI	IA1CLK (29)	96	NC		NC
33	TRESET	MI	SA1CLK (28)	97	-RI	OA	NC
34	TXDAT	MI	SR4OUT (23)	98	RINGD	IA	DAA: RINGD
35	TMODE	MI	RMODE (36)	99	~RTS	IA.	VCC (Note 4)
36	RMODE	MI	TMODE (35)	100	IRQ	OA	MCU: DPIRQ
37	NC NC		NC	101	GND8	GND	GND
38	NC NC		NC	102	GND9	GND	GND
39	NC NC		NC	103	GND10	GND	GND
40	NC NC		NC	104	GND11	GND	GND
41	NC NC		NC	105	NC		NC
42	RXOUT	MI	SR3IN (26)	106	NC .		NC NC
43	GND3	GND	GND	107	GP0	MI	EYESYNC
44	DVDD	PWR	VCC	108	NC		NC
45	-TALK	OD	WL: DAA: Voice Relay	109	NC		NC SA SAID
46	NC		NC	110	VDDR	MI	0.1 μF to GND
47	~POR2	IA	Reset Circuit/Host Interface	111	VDD2	PWR	vcċ
48	-RESOUT	IA	-RESIN (25); Controller	112	XTLI	1 0	Crystal/Clock Circuit Crystal/Clock Circuit
49	REGOUT	MI	REGIN (19)	113	XTLO		
50	AVDD1	PWR	VCC	114	D0	IA/OA	
51	AVDD2	PWR	VCC with RC filter	115	D1		
52	NC		NC	116	D2	IA/OA	
53	NC		NC	117	D3	IA/OA	
54	NC		NC	118	D4	IA/OA	
55	TXA1	O(DD)	DAA: TXA1	119	D5	IA/OA	
56	TXA2	O(DD)		120	D6	IA/OA	
57	GND4	GND	GND	121	D7 ·	IA/OA	
58	GND5	GND	GND	122	RS0	IA.	MCU: A0
59	VAA1	PWR	VAAOUT	123	R\$1	IA.	MCU: A1
60	AGND1	GND	AGND	124	NC		NC

27

- 7811073 0024270 200 **-**

Table 8. MDP Pin Signals - 128-Pin TQFP (Cont'd)

Pin	Signal Label	I/O Type	Interface ³	Pin	Signal Label	VO Type	Interface
61	VAA2	PWR	VAAOUT	125	NC	130 .,pc	NC
62	AGND2	GND	GND	126	GND12	GND	GND
63	VC	MI	AGND through capacitors		GND13	GND	GND
64	RIN1	I(DA)	DAA: RIN	128	GND14	GND	GND

1. I/O types:

MI = Modern interconnect.

IA, IB = Digital input.

OA, OB = Digital output.

I(DA)] = Analog input.

O(DD), O(DF) = Analog output.

- NC = No external connection allowed.
- Interface Legend:

MDP1 or MDP2 = Modem Data Pump 1 or Modem Data Pump 2 device.

PIF = Host Parallel Interface Configuration

SIF = DTE Serial Interface Configuration

WL = Wireline.

DTE = Data Terminal Equipment.

Connect to VCC through 20K ohms.

28

Table 9. MCU Signal Definitions

Label	VO Type		Sign	al Name/Description				
		ВА	SIC CONFIGUR	ATION				
			SYSTEM OVERHE	AD				
KTLI, XTLO	IE, OE		MCU Crystal/Clock in and Crystal Out. Connects to an external crystal circuit consisting of a 9.8304 MHz crystal and a capacitance network.					
RES	IC	NVRAM or returns the ~RES input is to	ACU Reset. The active low ~RES input resets the MCU logic, and restores the saved configuration from IVRAM or returns the modem to the factory default values if NVRAM is not present. For serial Interface, the ~RES input is typically connected to a reset switch circuit and MDP ~POR. For parallel Interface, the RES input is typically connected to the host bus RESET line through an inverter and to MDP ~POR.					
DPIRQ	IA	MDP Interrupt Red	quest. Connects to the N	IDP IRQ output.				
-DPRXD	МІ	MDP Received Da	ta. Connects to the MDF	PRXD output (serial interf	ace).			
VCC1-VCC2	PWR	+ 5V Digital Supp	y. +5V ± 5%.					
GND1-GND6	GND	Digital Ground. C	onnect to ground.					
			DAA/CELLULAR SE	LECT				
DAA/CELL	IA	When DAA/CELL i	nput is low, the cellular in responding ports insteat Cellular Signal	nterface is selected with the dof the wireline signals. Wireline Signal for DTE Serial Interface	wireline DAA interface is selected. he following cellular signals Wireline Signal for Host Parallel Interface			
		MCU Port	(DAA/CELL = Low)	(DAA/CELL = High)	(DAA/CELL = High)			
		PE0 PE1	CTRL0 CTRL1	~OH ~PULSE	~OH ~PULSE			
		PE2	CELBSY	~MUTE, ~A/A1	-MUTE, -A/A1			
		PE5	CELDATA	~CLKSTOP, PTTE				
		PE7	DAA/CELL	IDID*	IDID*			
		PA3 PA4	~CELBSY CELCLK	~TXCLK ~RXCLK	~TXACK ~RXACK			
		1	et initialization only.					
	<u></u>	<u> </u>	DIRECT INPUT	S				
PTTEN	IA	test commands. P	(W-Class Only). The P'TTEN is checked only for e (e.g., Germany).	ITEN input enables (high or countries which do not p) or disables (low) the use of the P1 permit the use of the %TT comman			
			NVRAM INTERF	ACE				
NVMCLK	OA	NVRAM Clock. N	VMCLK output high ena	bles the NVRAM.				
NVMDATA	IA/OA	NVRAM Data. Th	e NVMDATA pin supplie	s a serial data interface to	the NVRAM.			
			TERNAL MEMORY BUS					
A0-A15	OA	Address Lines 0	-15. A0-A15 are the exte	rnal memory bus address	s lines.			
A16	OA		. A16 is a bank select lin					
D0-D7	IA/OA		0-D7 are the external me					
~READ	OA				lected device to the D0-D7 lines.			
~WRITE	OA	Write Enable. ~V	VRITE output low enable	es data transfer from the D	00-D7 lines to the selected device.			
~DPSEL	OA	Modem Data Pu	mp Select. ~DPSEL out	put low selects the MDP.				
~RAMSEL	OA	RAM SelectR	RAM Select. ~RAMSEL output low selects the external RAM.					
~ROMSEL	OA			ts an external ROM or fla				
~ES1SEL	OA	low from A0 NAN	1SEL output low and A0 Ded with ~WRITE selective external latch. (Serial	ts external input buffer 2.	t buffer 1. ~ES1SEL output low and ~ES1SEL output low clocked by			
				an external device (not u				

MD105

29

■ 7811073 0024272 083 **■**

Table 9. MCU Signal Definitions (Cont'd)

Label	I/O Type	Signal Name/Description				
		PARALLEL HOST INTERFACE (PARALLEL INTERFACE VERSION)				
The parallel into	rface emulates	a 16450 or 16550A/16450 UART-compatible interface. The parallel interface is compatible with				
communication	software desig	ned to operate with a 16450/16550A interface.				
HA0-HA2	IA	Host Bus Address Lines 0-2. During a host read or write operation with ~HCS low, HA0-HA2 select an internal MCU 16450/16550A-compatible register.				
HD0-HD7	IA/OA	Host Bus Data Lines 0-7. HD0-HD7 are comprised of eight three-state input/output lines providing bidirectional communication between the host and the MCU. Data, control words, and status informatio are transferred over HD0-HD7.				
~HCS	IA	Host Bus Chip Select. ~HCS input low selects the host bus.				
~HRD	·IA	Host Bus Read. ~HRD is an active low, read control input. When ~HCS is low, ~HRD low allows the host to read status information or data from a selected MCU register.				
~HWT	ĮĄ.	Host Bus Write. ~HWT is an active low, write control input. When ~HCS is low, ~HWT low allows the host to write data or control words into a selected MCU register.				
HINT	OA	Host Bus Interrupt. HINT output is set high when the receiver error flag, received data available, transmitter holding register empty, or modern status interrupt is asserted. HINT is reset low upon the appropriate interrupt service or master reset operation.				
~TXACK	IA	Host Transmit Acknowledge. ~TXACK is an active low transmit acknowledge input, acknowledging that the DMA controller received the Transmit Ready (TXRDY) data transfer request output.				
~RXACK	IA	Host Receive Acknowledge. ~RXACK is an active low receive acknowledge input, acknowledging that the DMA controller received the Receiver Ready (RXRDY) data transfer request output.				
TXRDY	ОА	Transmitter Ready. TXRDY is an active high transmit ready output in the FIFO mode (FCR0 = 1). When asserted, TXRDY indicates that the TX FIFO is not full (i.e., the TX FIFO can accept data to be transmitted).				
RXRDY	OA	Receiver Ready. RXRDY is an active high receiver ready output in the FIFO mode (FCR0 = 1). When asserted, RXRDY indicates that the RX FIFO is not empty (i.e., the RX FIFO has received data ready for transfer).				
8	-BIT VO EXPAN	IDER TO MICROPHONE/SPEAKER INTERFACE (PARALLEL INTERFACE VERSION)				
SWA, SWB	OA	Analog Switch Control. Encoded outputs select the RIN and TXA1/TXA2 routing as follows:				
		SWA SWB Description				
		Data mode (connect RIN to the line and the speaker; connect TXA1/TXA2 to the line and the speaker).				
		0 1 Voice mode - playback or record from the line or the telephone set				
		(connect RIN to the line; connect TXA1/TXA2 to the line). 1 0 Voice mode - record from the microphone (connect RIN to microphone				
	1 1	input circuit; connect TXA1/TXA2 to line). 1 1 Not used.				
ם-/ג	OA	Volume Up/Down Select. Controls increase (high) or decrease (low) of volume when ~INC is pulsed and ~CS = low.				
-INC	OA	Volume Increment. When ~INC is pulsed while ~CS is low, the volume is increased ($U/~D = high$) or decreased ($U/~D = high$).				
cs	OA	Volume Control Chip Select. Enables (low) or disables (high) adjustment of volume using U/~D and ~INC.				
	LE	D INDICATOR CIRCUIT INTERFACE (SERIAL INTERFACE VERSION)				
AAIND	ÒA	Auto Answer Indicator. ~AAIND output ON (low) corresponds to the indicator on. ~AAIND output is active when the modern is configured to answer the ring automatically (ATSO command ≠ 0).				
TMIND	OA	Test Mode Indicator. ~TMIND output ON (low) corresponds to the indicator on. ~TMIND output pulses (LED flashes) when the modem is in test mode and if an error is detected.				
DTRIND	OA I	DTR Indicator. ~DTRIND output ON (low) corresponds to the indicator on. The ~DTRIND state reflects the ~DTR output state except when the &D0 command is active, in which case ~DTRIND is low.				

30

MD105

💻 7811073 0024273 T1T 📟

Table 9. MCU Signal Definitions (Cont'd)

Label	VO Type	Signal Name/Description
··············		(EIA-232-D) DTE SERIAL INTERFACE (SERIAL INTERFACE VERSION)
he serial interfactory		spond functionally to V.24/EIA/TIA-232-E signals. The signal levels are TTL compatible and are inverted
TXD	IA	Transmitted Data (EIA BA/CCITT CT103). The DTE uses the ~TXD line to send data to the modem for transmission over the telephone line or to transmit commands to the modem.
-RXD	OA	Received Data (EIA BB/CCITT CT 104). The modem uses the ~RXD line to send data received from the telephone line to the DTE and to send modem responses to the DTE. During command mode, ~RXD data represents the modem responses to the DTE.
-CTS	OA	Clear To Send (EIA CB/CCITT CT106). ~CTS output ON (low) indicates that the DTE is ready to accept data from the DTE. In asynchronous operation, in error correction or normal mode, ~CTS is always ON (low) unless RTS/CTS flow control is selected by the &Kn command.
		In synchronous operation, the modem also holds ~CTS ON during asynchronous command state. The modem turns ~CTS OFF immediately upon going off-hook and holds ~CTS OFF until both ~DSR and ~RLSD are ON and the modem is ready to transmit and receive synchronous data. The modem can also be commanded by the &Rn command to turn ~CTS ON in response to an ~RTS OFF-to-ON transition.
-DSR	OA	Data Set Ready (EIA CC/CCITT CT107). ~DSR indicates modern status to the DTE. ~DSR OFF (high) indicates that the DTE is to disregard all signals appearing on the interchange circuits except Ring Indicator (~RI). ~DSR output is controlled by the AT&Sn command.
-RLSD	OA	Received Line Signal Detector (EIA CF/CCITT CT109). When AT&C0 command is not in effect, -RLSD output is ON when a carrier is detected on the telephone line or OFF when carrier is not detected.
~TM	OA	Test Mode Indicate (EIA TM/CCITT CT142). The ~TM output indicates the modern is in test mode (low or in any other mode (high).
~RI	OA	Ring Indicator (EIA CE/CCITT CT125)RI output ON (low) indicates the presence of an ON segment of a ring signal on the telephone line.
~DRSOUT	OA	Data Signaling Rate Indicator (EIA CVCCITT CT112). ~DRSOUT is ON (low) when the modern desires or is engaged in the high speed (2400 bps or higher) mode. ~DRSOUT is OFF (high) otherwise.
~DTR	IA	Data Terminal Ready (EIA CD/CCITT CT108). The ~DTR input is turned ON (low) by the DTE when the DTE is ready to transmit or receive data. ~DTR ON prepares the modem to be connected to the telephone line, and maintains the connection established by the DTE (manual answering) or internally (automatic answering). ~DTR OFF places the modem in the disconnect state under control of the &Dn and &Qn commands.
~RTS	1A	Request To Send (EIA CA/CCITT CT105). ~RTS input ON (low) indicates that the DTE is ready to accept data from the modern. In the command state, the modern-ignores ~RTS. In asynchronous operation, the modern ignores ~RTS unless RTS/CTS flow control is selected by the &Kn command.
		In synchronous on-line operation, the modem can be commanded by the &Rn command to ignore ~RT or to respond to ~RTS by turning on ~CTS after the delay specified by Register S26.
~RDL	IA	Remote Digital Loop Select (EIA RL/CCITT CT140). ~RDL input low activates remote digital loop request. The loop is executed at the speed for which the modern is currently configured.
~AL	IA	Analog Loop (EIA LL/CCITT CT141). ~AL input low causes the modem to operate in the analog loop test mode.
~DRSIN	IA ·	Data Signaling Rate Select (EIA CVCCITT CT111). This signal, relevant only in Central Europe, applies only to V.22 bis and V.22 modes. ~DRSIN ON (low) will result in a 2400 bps connection. ~DRSIN OFF (high) will force a 1200 bps connection, or will result in a fallback from 2400 bps to 1200 bps if already on-line.

MD105

31

7811073 0024274 956

Table 9. MCU Signal Definitions (Cont'd)

Label	VO Type	Signal Name/Description
		TELEPHONE LINE INTERFACE (WIRELINE OPERATION ONLY)
-RLY1	OA	Relay 1 Control (-OH). When cellular interface is not selected (CELL/DAA = high), PE0 is assigned to the ~RLY1 output signal. The active low ~RLY1 output can be used to control the normally open off-hook relay The ~PULSE function can alternatively be provided on this line in addition to the ~OH function for single ~OH/~PULSE relay application.
~RLY2	OA	Relay 2 Control (~PULSE). When cellular interface is not selected (CELL/DAA = high), PE1 is assigned to the ~RLY2 output signal. The active low ~RLY2 output can be used to control the normally open pulse dial relay. The ~PULSE function can alternatively be provided on the ~RLY1 line in addition to the ~OH function for single ~OH/~PULSE relay application.
~RLY3	OA	Relay 3 Control (~A/A1, ~MUTE). The active low ~RLY3 output can be used to control the normally open key telephone hold indicator (A/A1) relay. In W-class, ~RLY3 output can be used to control the normally open mute relay.
~RLY4	OA ,	Relay 4 Control (-T/DRLY, ~EARTH). The active low ~RLY4 output can be used to control the normally closed talk/data relay. In W-class, ~RLY4 output can be used to control the normally open earthing relay.
LCS	IA T	Loop Current Sense. LCS is an active high input that indicates a handset off-hook status.
RINGD	IA	Ring Frequency. A high-going edge on the RINGD input initiates an internal ring frequency measurement. The RINGD input from an external ring detect circuit is monitored to determine when to wake up from sleep or stop mode. The RINGD input is typically connected to the output of an optoisolator or equivalent. The idle state (no ringing) output of the ring detect circuit should be low.
		CELLULAR PHONE INTERFACE (CELLULAR OPERATION ONLY)
CTRL0	OA	Cellular Control 0. When cellular interface is selected (CELL/DAA = low), PE0 is assigned to the CTRL0 output signal. CTRL0 is defined by the cellular firmware driver.
CTRL1	OA	Cellular Control 1. When cellular interface is selected (CELL/DAA = low), PE1 is assigned to the CTRL1 output signal. CTRL1 is defined by the cellular firmware driver.
CELCLK	IA	Cellular Clock. When cellular interface is selected (CELL/DAA = low), PA4 is assigned to the CELCLK input signal. CELCLK is defined by the cellular firmware driver.
CELDATA	IA/OA	Cellular Data. When cellular interface is selected (CELL/DAA = low), PE5 is assigned to the bidirectional CELDATA line. CELDATA is defined by the cellular firmware driver.
CELBSY	OA	Cellular Busy. When cellular interface is selected (CELL/DAA = low), PE2 is assigned to the CELBSY output signal. CELBSY is defined by the cellular firmware driver.
-CELBSY	IA	Cellular Not Busy. When cellular interface is selected (CELL/DAA = low), PA3 is assigned to the ~CELBSY input signal. ~CELBSY is defined by the cellular firmware driver.
		STOP MODE CIRCUIT
-STPMODE	IA	Stop ModeSTPMODE low causes the modern to enter the stop mode immediately after terminating a line connection if connected, terminating any test in process, and allowing any data in the receive buffer to clearSTPMODE must be high before the modern can attain normal operation after power turn-on, reset, or wake-up from sleep or stop mode.

Table 10. MDP Signal Definitions

Label	VO Type	Signal/Definition
	COMM	ION SIGNALS TO PARALLEL AND SERIAL INTERFACE
		OVERHEAD SIGNALS
KTLI, XTLO	I, O	Crystal In and Crystal Out. Connect to an external crystal circuit consisting of a 35.2512 MHz crystal, three capacitors, a resistor, and an inductor; or connect to a square wave generator/sine wave oscillator.
-POR1, -POR2	IA	Power-On Reset. ~POR1 and ~POR2 low hold the modem in the reset state. ~POR1 and ~POR2 must be low for at least 3 µs. ~POR1 and ~POR2 going high initiates internal hardware normal operation (but not modem processing). For serial Interface, the ~POR inputs are typically connected to a reset circuit. For parallel Interface, the ~POR inputs are typically connected to the host bus RESET line through an inverter.
~RESIN	OA	Reset Input. Connect ~RESIN to ~RESOUT.
vc	MI	Centerpoint Voltage. Connect to analog ground through 10 μF (polarized, + terminal to VC) and 0.1 μF (ceramic) in parallel.
VREF	MI,	Voltage Reference. Connect to VC through 10 μ F (polarized, + terminal to VREF) and 0.1 μ F (ceramic) in parallel.
VREG	Mi	Voltage Reference. Can be left open. Connect to ground through 0.1 μF for compatibility with future products.
DETIN	МІ	Detected Level in. Connect to DETOUT.
VDDR	МІ	Digital Supply Voltage Regulated. Connect to GND through 0.1 μμF capacitor.
GND	GND	Digital Ground. Connect to ground.
AGND	GND	Analog Ground. Connect to ground.
VDD1, VDD2	PWR	DSP Digital Supply Voltage. Connect to VCC.
DVDD	PWR	IA Digital Circuits Power. Connect to VCC.
AVDD1	PWR	IA Digital Supply Voltage 1. Connect to VCC.
AVDD2	PWR	IA Digital Supply Voltage 2. Connect to VCC through RC filter.
VAAOUT	MI	Analog Supply Voltage Output. Connect to VAA1 and VAA2.
VAA1, VAA2	PWR	Analog Supply Voltage. Connect to VAAOUT. Connect to analog ground through 10 μF and 0.1 μF capacitors in parallel.
REGOUT	МІ	Regulator Out. Connect to REGIN.
REGIN	М	Regulator In. Connect to REGOUT.
CAPP	мі	Capacitor Plus Connection. Connect CAPP to the plus terminal of a 1 µF capacitor.
CAPN	МІ	Capacitor Negative Connection. Connect CAPN to the negative terminal of a 1 μF capacitor.
		MCU INTERFACE
D0-D7	IA/OB	Data Lines. Connect to the MCU D0-D7, respectively.
RS0-RS4	1A	Register Select Lines. Connect to the MCU A0-A4, respectively.
~CS	IA	Chip Select. Connect to MCU ~DPSEL output.
~READ	IA	Read Enable. Connect to MCU ~READ.
~WRITE	IA	Write Enable. Connect to MCU ~WRITE.
IRQ	OA	Interrupt Request. Connect to MCU ~DPIRQ.
-RESOUT	OA .	Reset Output. ~RESOUT going high indicates internal hardware normal operation has been attained and initiates internal modem processing. The MDP is ready to use 500 ms after the low-to-high transition of ~RESOUT. Connect to he MCU ~RES pin.
DETOUT	OA	Detected Level Out. DETOUT indicates the supply voltage level (high = 5V; low = 3.3V). Connect to DETIN and to the MCU PSC pin.

33

Table 10. MDP Signal Definitions (Cont'd)

Label	VO Type	Signal Name/Description
		COMMON TELEPHONE LINE AND CELLULAR PHONE SIGNALS
TXA1, TXA2	O(DF)	Transmit Analog 1 and 2. The TXA1 and TXA2 outputs are differential outputs 180 degrees out of phase with each other. Each output can drive a 300 Ω load.
RIN	I(DA)	Receive Analog. RIN is a single-ended receive data input from the telephone line interface or an optional external hybrid circuit.
		TELEPHONE LINE INTERFACE ONLY SIGNALS
RINGD	IA	Ring Detect. The RINGD input is monitored for pulses in the range of 15 Hz to 68 Hz. The frequency detection range may be changed by the host in DSP RAM. The circuit driving RINGD should be a 4N35 optoisolator or equivalent. The circuit driving RINGD should not respond to momentary bursts of ringing less than 125 ms in duration, or less than 40 VRMS (15 Hz to 68 Hz) across TIP and RING. Detected ring signals are reflected on the ~RI output signal as well as the RI bit.
~RLYA (~OHRC)	OD	Retay A Control. The MDP -RLYA output is connected to the normally closed Caller ID relay (DPDT). When Caller ID is enabled, the modern will assert this output to open the Caller ID relay and close the off-hook relay in order to detect Caller ID information between the first and second rings.
		The ~RLYA output can each directly drive a +5V reed relay coil with a minimum resistance of 360 chms and having a must-operate voltage of no greater than 4.0 Vdc. A clamp diode, such as a 1N4148, should be installed across the relay coil. An external transistor, such as an MPSA20, can be used to drive heavier loads (e.g., electro-mechanical relays). ~RLYA is controlled by host setting/resetting of the RA bit.
~RLYB (~TALK)	OD	Relay B Control. The MDP ~RLYB output is connected to the normally open Voice relay (DPDT). In voice mode, ~VOICE active closes the relay to switch the handset from the telephone line to a current source to power the handset so it can be used as a microphone and speaker interface to the modern.
		The ~RLYB output can each directly drive a +5V reed relay coil with a minimum resistance of 360 ohms and having a must-operate voltage of no greater than 4.0 Vdc. A clamp diode, such as a 1N4148, should be installed across the relay coil. An external transistor, such as an MPSA20, can be used to drive heavier loads (e.g., electro-mechanical relays). ~RLYB is controlled by host setting/resetting of the RB bit.
		SPEAKER INTERFACE
SPKR	O(DF)	Speaker Analog Output. The SPKR output reflects the received analog input signal. The SPKR is controlled by the ATMn command. The SPKR output can drive an impedance as low as 300 ohms. In a typical application, the SPKR output is an input to an external LM386 audio power amplifier.
		DIAGNOSTIC SIGNALS
hree signals pro of the received b	ovide the timin aseband cons	g and data necessary to create an oscilloscope quadrature eye pattern. The eye pattern is simply a display stellation. By observing this constellation, common line disturbances can usually be identified.
EYEXY	OA	Serial Eye Pattern X/Y Output. EYEXY is a serial output containing two 15-bit diagnostic words (EYEX and EYEY) for display on the oscilloscope X axis (EYEX) and Y axis (EYEY). EYEX is the first word clocked out; EYEY follows. Each word has 8-bits of significance. Each 15-bit data word is shifted out most significant bit first with the seven most significant bits set to zero. EYEXY is clocked by the rising edge of /EYECLK. This serial digital data must be converted to parallel digital form by a serial-to-parallel converter, and then to analog form by two digital-to-analog (D/A) converters.
EYECLK	OA	Serial Eye Pattern Clock. ~EYECLK is a 288 kHz output clock for use by the serial-to-parallel converters. The low-to-high transitions of ~RDCLK coincide with the low-to-high transitions of ~EYECLK. ~EYECLK, therefore, can be used as a receiver multiplexer clock.
		The state of the s

MD105

7811073 0024277 665 📟

Table 10. MDP Signal Definitions (Cont'd)

Label	VO Type	Signal Name/Description
		SERIAL INTERFACE VERSION
		DTE SERIAL/CONTROL/INDICATOR SIGNALS
TXD	IA	Transmitted Data. The MDP obtains serial data to be transmitted from the DTE on the TXD input.
RXD	OA	Received Data. The MDP presents received serial data to the DTE on the RXD output. RXD is also connected to the MCU DPRXD input.
TDCLK	OA	Transmit Data Clock. The modern outputs a synchronous Transmit Data Clock (TDCLK) for USRT timing. The TDCLK frequency is the data rate (±0.01%) with a duty cycle of 50 ±1%.
XTCLK	IA	External Transmit Clock. In synchronous communication, an external transmit data clock can be connected to the MDP XTCLK input. The clock supplied at XTCLK must exhibit the same characteristics as TDCLK.
-RLSD	OA	Received Line Signal Detector. ~RLSD active indicates that energy above the receive level threshold is present on the receiver input, and that the energy is not a training sequence.
~RDCLK	ÓA	Receive Data Clock. The modern outputs a synchronous Receive Data Clock (~RDCLK) for USRT timing.
~RTS	IA	Request to Send. Not used; pull up to VCC through 10k Ω.
~DTR	IA	Data Terminal Ready. Not used; pull up to VCC through 10k Ω.
~CTS	OA	Clear to Send. Not used; leave open.
~DSR	OA	Data Set Ready. Not used; leave open.
		PARALLEL INTERFACE VERSION
		DTE SERIAL/CONTROLANDICATOR SIGNALS
TXD	IA	Transmitted Data. Not used; pull up to VCC through 10k Ω.
RXD	OA	Received Data. Not used; leave open.
TDCLK	OA	Transmit Data Clock. Not used; leave open.
XTCLK	IA	External Transmit Clock. Not used; leave open.
~RDCLK	OA	Receive Data Clock. Not used; leave open.
~RLSD	OA	Received Line Signal Detector. Not used, leave open.
-RTS	IA	Request to Send. Not used; pull up to VCC through 10k Ω .
~DTR	IA	Data Terminal Ready. Not used; pull up to VCC through 10k Ω .
~CTS	OA	Clear to Send. Not used; leave open.
-DSR	OA	Data Set Ready. Not used; leave open.

35

■ 7811073 0024278 5T1 ■

Table 11. **Digital Electrical Characteristics**

Parameter	Symbol	Min.	Тур.	Max.	Units	Test Conditions 1 (+3.3V Operation)	Test Conditions 1 (+5V Operation)
Input High Voltage	v _{IH}				VDC		(con a parametry
Type IA	1 "'	2.0	_	V _{CC}	'		
Type IC		0.7 V _{CC}	_	V _{CC} + 0.3		1	
Type ID		0.8 V _{CC}	_	V _{CC} + 0.3			
Type IE			4.0	CC TO.S			1
Input Low Voltage	V _{IL}		7.0		VDC	Note 2.	Note 2.
Type IA,1C, and ID Type IE	1.	-0.3 -	1.0	0.8	1		
Input High Current	۱н		1.0	40	μΑ	Note 2.	Note 2.
lands of					μΑ	$V_{CC} = 3.6V,$ $V_{IN} = 3.6V$	V _{CC} = 5.25V, V _{IN} = 5.25V
Input Low Current	IL			400	μА	$V_{CC} = 3.6V$,	V _{CC} = 5.25V
Input Leakage Current	IIN				μADC	V _{IN} = 0 to 3.3V, V _{CC} = 3.6V	V _{IN} = 0 to 5V,
~RES and PD0-PD7	1 1	-	_	±2.5		VCC = 3.0V	V _{CC} = 5.25V
XTLI		-	-	±10			
~NMI and ~TST Output High Voltage				±100			
	VOH				VDC		
Type OA and OB		2.4	-	-		I _{LOAD} = - 100 μA	I _{LOAD} = 100 µA
Type OD Type OE		-	-	v _{cc}		I _{LOAD} = 0 mA Note 3.	I _{LOAD} = 0 mA
Output Low Voltage	V _{OL}				VDC	140(e 3.	Note 3.
Type OA		-	_	0.4		-16m4	104
Туре ОВ		-	_	0.4		I _{LOAD} = 1.6 mA	LOAD = 1.6 mA
Type OD		_ 1	_	0.75		I _{LOAD} = 0.8 mA	LOAD = 0.8 mA
hree-State (Off) Current	TSI			±10		LOAD = 15 mA	I _{LOAD} = 15 mA
Johan J	181			±10	μADC	V _{IN} = 0 V to V _{CC}	V _{IN} = 0 V to V _{CC}

1. Test Conditions:

+5V operation: VCC = 5V \pm 5%; +3.3V operation: VCC = 3.3V \pm 0.3V, TA = 0°C to 70°C, (unless otherwise stated). Output loads: Data bus (D0-D7), address bus (A0-A15), chip selects, ~READ, and ~WRITE loads = 70 pF + one TTL load.

Other = 50 pF + one TTL load.

36

^{2.} Type IE inputs are centered approximately 2.5 V and swing 1.5 $\rm V_{\sc PEAK}$ in each direction.

^{3.} Type OE outputs provide oscillator feedback when operating with an external crystal.

Analog Electrical Characteristics Table 12.

Name	Туре	Characteristic	Value
RIN	I (DA)	Input Impedance AC Input Voltage Range Reference Voltage	> 70K Ω 1.1 VP-P** +2.5 VDC
TXA1, TXA2	O (DD)	Minimum Load Maximum Capacitive Load Output Impedance AC Output Voltage Range Reference Voltage DC Offset Voltage	300 Ω 0 μF 10 Ω 2.2 VP-P +2.5 VDC ± 200 mV
SPKR	O (DF)	Minimum Load Maximum Capacitive Load Output Impedance AC Output Voltage Range Reference Voltage DC Offset Voltage	300 Ω 0.01 μF 10 Ω 1.1 VP-P +2.5 VDC ± 20 mV

^{*} Reference Voltage provided internal to the modern data pump.

Current and Power Requirements Table 13.

		Table 13.					
	Typical Current © 25°C (mA)	Current (ID) Maximum Current © 0°C (mA)	Maximum Current @ -40°C ¹ (mA)	Typical Power @ 25°C (mW)	Power (PD) Maximum Power © 0°C (mW)	Maximum Power © -40°C ¹ (mW)	Notes
Mode	+3.3V Operation						
			T0.01 Open	<u> </u>			fin = 9.8304 MHz
NORMAI mode Sleep mode Stop mode	24.2 2.0 0.15	29.2 2.6 0.2	33.3 3.0 0.2	80 6.6 0.5	105 9.4 0.7	120 10.8 0.7	f _{IN} = 35.2512MHz
MDP Normal mode Sleep mode	51.5 2.4	62.0 3.0	77.0 3.3	170 8.0	225 10.8	280 11.9	110 - 55.25 12.11.12
Total Normal mode Sieep mode Stop mode	75.7 4.4 2.55	91.2 5.6 3.2	110.3 6.3 3.5	250 14.6 8.5	330 20.2 11.5	400 22.7 12.6	
Otop more		·····	+5V Ope	ration			14. 0 0204 MHz
MCU Normal mode Sleep mode Stop mode	24.0 2.4 0.15	30.5 3.0 0.2	34.3 3.3 0.2	120 7.9 0.8	160 10.8 1.1	180 11.9 1.1	$f_{ N} = 9.8304 \text{ MHz}$ $f_{ N} = 35.2512 \text{MHz}$
MDP Normal mode Sleep mode	45.0 2.0	54.0 2.4	68.0 3.1	225 10	285 12.6	3 55 16.3	
Total Normal mode Sieep mode Stop mode	69.0 4.4 2.15	84.5 5.4 2.6	102.3 6.4 3.3	345 17.9 10.8	445 23.3 13.7	535 28.2 17.4	

Notes:

MD105

37

7811073 0024280 15T 🖿

Corresponds to 2.2 VP-P at Tip and Ring.

Maximum power • -40°C specified only for extended temperature range parts.

Test conditions: VCC = 5.0 VDC for typical values; VCC = 5.25 VDC for maximum values.

Table 14. **Absolute Maximum Ratings**

Parameter	Symbol	Limits	T 41.2	
Supply Voltage			Units	
Input Voltage	v_{DD}	-0.5 to +7.0	V	
Operating Temperature Range	V _{IN}	-0.5 to (+5VD +0.5)	V	
Commercial	T _A		°C	
Extended		-0 to +70		
Storage Temperature Range	_	-40 to +85		
Analog Inputs	^т sта	-55 to +125	. ∘c	
	VIN	-0.3 to (+5VA + 0.3)	, v	
Voltage Applied to Outputs in High Impedance (Off) State DC Input Clamp Current	v_{HZ}	-0.5 to (+5VD + 0.5)	V	
	lк	±20		
DC Output Clamp Current	lok	±20		
Static Discharge Voltage (25°C)		}		
Latch-up Current (25°C)	v _{ESD}	±2500	V	
	TRIG	±200		

Registe	r Register	Table 15. Parallel Interface Registers								
No. 7	Name	7 6 5 4 2 0								
	Scratch Register (SCR)		<u> </u>	3.	4	3	2	1	0	
6	Modern Status Register (MSR)	Data Carrier Detect (DCD)	Ring Indicator (RI)	Data Set Ready (DSR)	Clear to Send (CTS)	Delta Date Carrier Detect (DDCD)	Trailing Edge of Ring Indicator	Delta Data Set Ready (DDSR)		
5	Line Status Register (LSR)	RX FIFO Error	Transmitter Empty (TEMT)	Transmitter Buffer Register Empty (THRE)	Break Interrupt (BI)	Framing Error (FE)	(TERI) Parity Error (PE)	Overrun Error (OE)	Receiver Data Read (DR)	
3	Modern Control Register (MCR) Line Control Register	0	0	. 0	Local Loopback	Out 2	Out 1	Request to Send (RTS)	Data Terminal Ready	
2	(LCR)	Divisor Latch Access Bit (DLAB)	Set Break	Stick Parity	Even Parity Select (EPS)	Parity Enable (PEN)	Number of Stop Bits (STB)	Length Select Bit 1	(DTR) Word Length Select Bit 0	
	Interrupt Identify Register (IIR) (Read Only)	FIFOs Enabled	FIFOs Enabled	0	0	Pending Interrupt ID Bit 2	Pending Interrupt ID Bit 1	(WLS1) Pending Interrupt ID Bit 0	(WLS0) "0" if Interrupt	
	FIFO Control Register (FCR) (Write Only)	Receiver Trigger MSB	Receiver Trigger LSB	Reserved	Reserved	DMA Mode Select	TX FIFO Reset	RX FIFO Reset	Pending FIFO Enable	
DLAB = 0)	Interrupt Enable Register (IER)	0	0	0	0	Enable Modem Status Interrupt (EDSSI)	Enable Receiver Line Status Interrupt (ELSI)	Enable Transmitter Holding Register Empty Interrupt	Enable Received Data Available Interrupt (ERBFI)	
LAB = 0)	Transmitter Buffer Register (THR)	Transmitter FIFO Buffer Register (Write Only)								
0 LAB = 0)	Receiver Buffer Register (RBR)	Receiver FIFO Buffer Register (Read Only)								
AB = 1)	Divisor Latch MSB Register (DLM)	Divisor Latch MSB								
0 .AB = 1)	Divisor Latch LSB Register (DLL)	Divisor Latch LSB								

MD105

7811073 0024281 096 🔤

SCHEMATICS

Typical interface schematics for the MCU with parallel host interface and with serial DTE interface are shown in Figures 8 and 9, respectively.

Typical interface schematics for the MDP are shown in Figures 10.

A schematic for a typical line interface circuit is shown in Figure 11.

Figure 12 is a schematic of a typical external hybrid circuit.

A schematic for a typical speaker circuit connected to the MDP SPKR output is shown in Figure 13.

Consult the AccelerATor Kits for full schematics of typical applications.

MD105

39

💌 7811073 0024282 T22 🖿

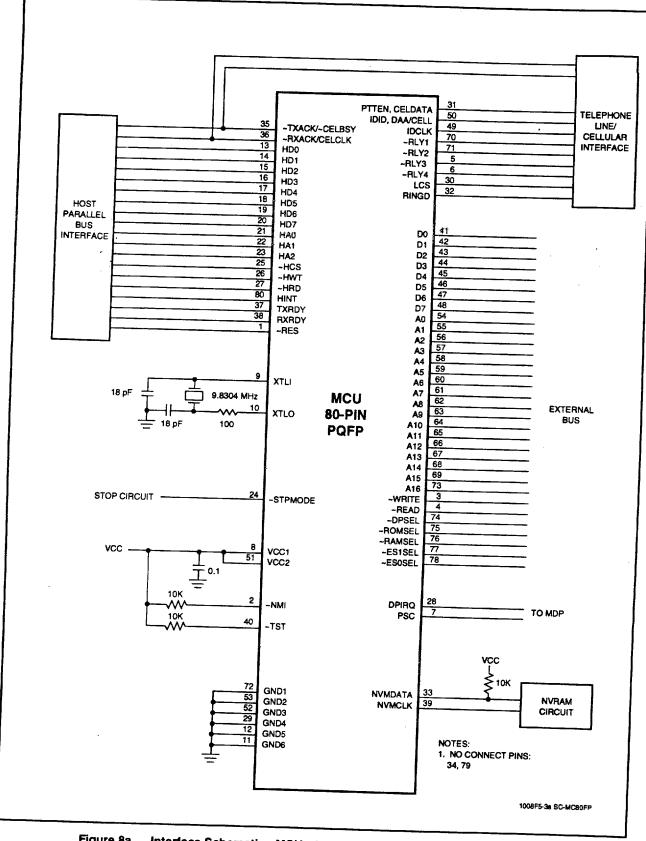


Figure 8a. Interface Schematic - MCU with Parallel Host Interface - 80-Pin PQFP

MD105

7811073 0024283 969 🚥

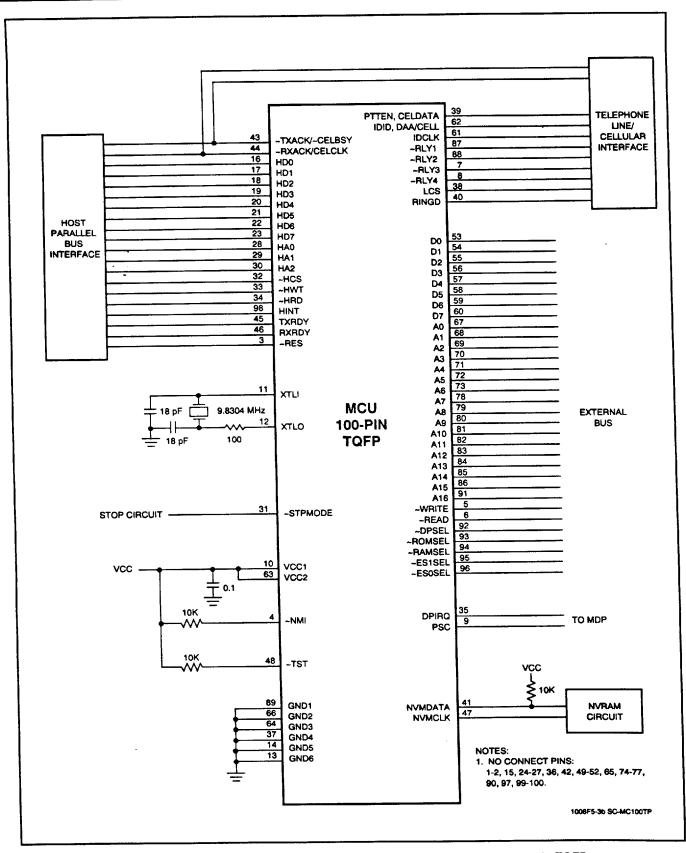


Figure 8b. Interface Schematic - MCU with Parallel Host Interface - 100-Pin TQFP

41

7811073 0024284 8T5 🖿

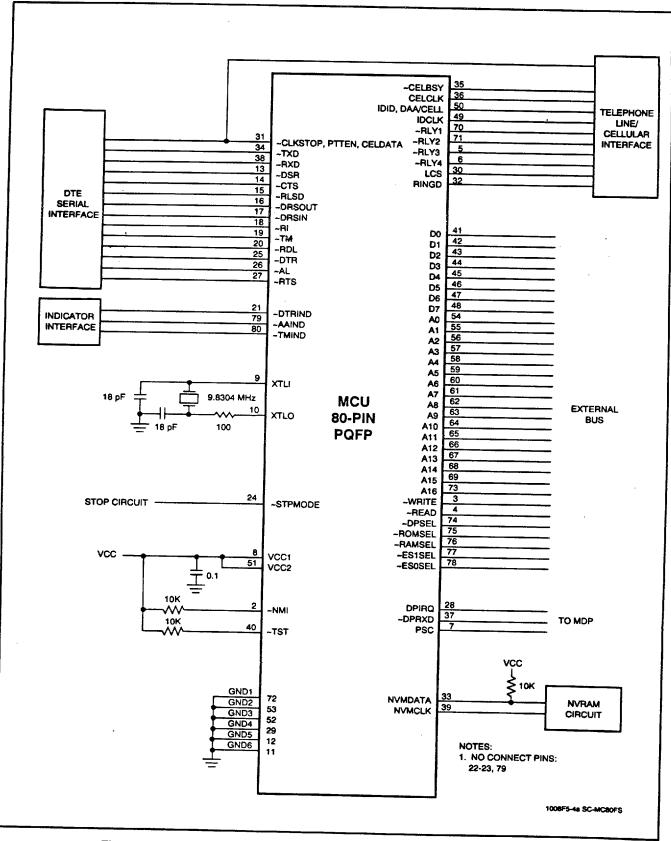


Figure 9a. Interface Schematic - MCU with Serial DTE Interface - 80-Pin PQFP

MD105

T811073 0024285 731 📟

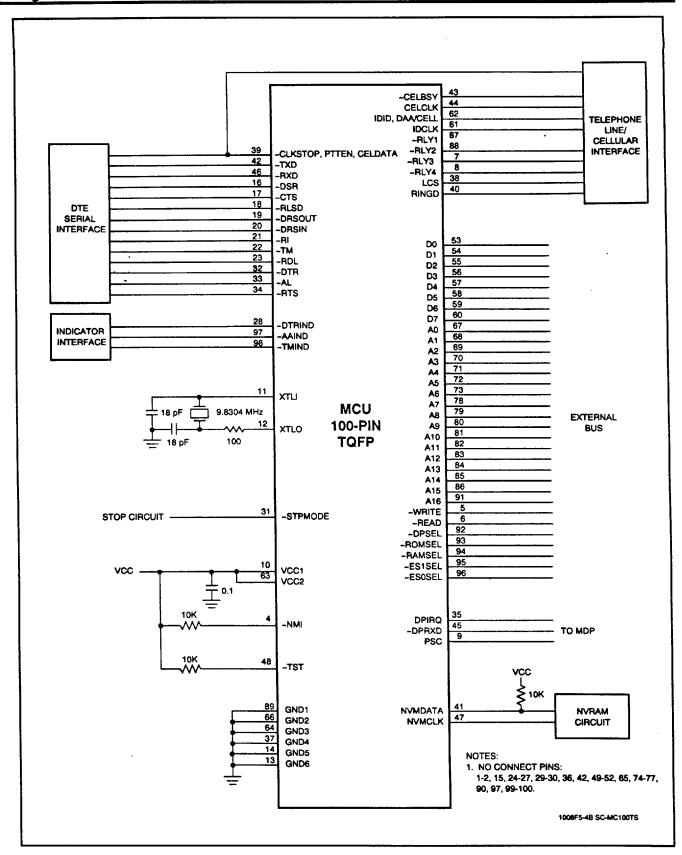


Figure 9b. Interface Schematic - MCU with Serial DTE Interface - 100-PIn TQFP

43

■■ 7811073 0024286 678 **■■**

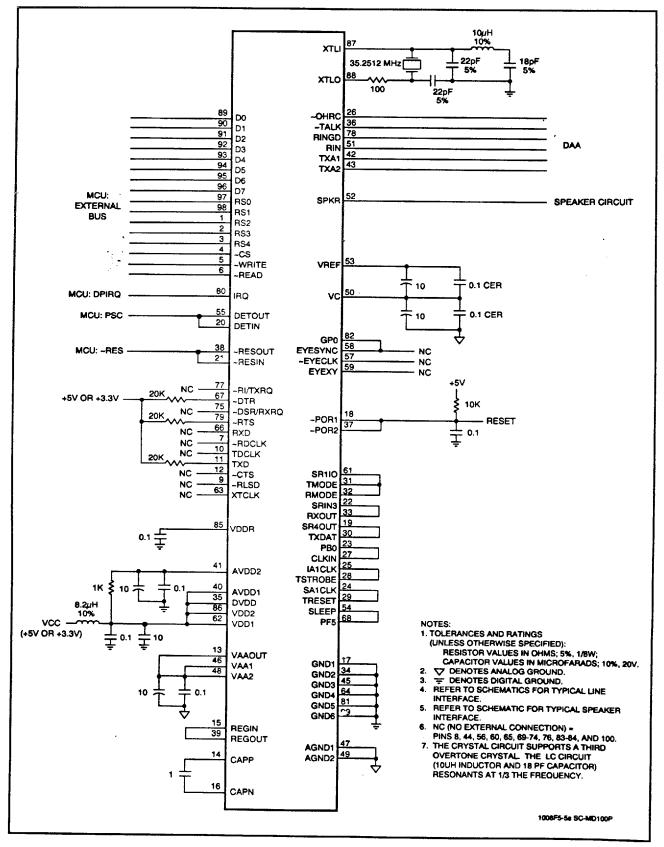


Figure 10a. Interface Schematic - MDP - 100-Pin PQFP

MD105

7811073 0024287 504 🖿

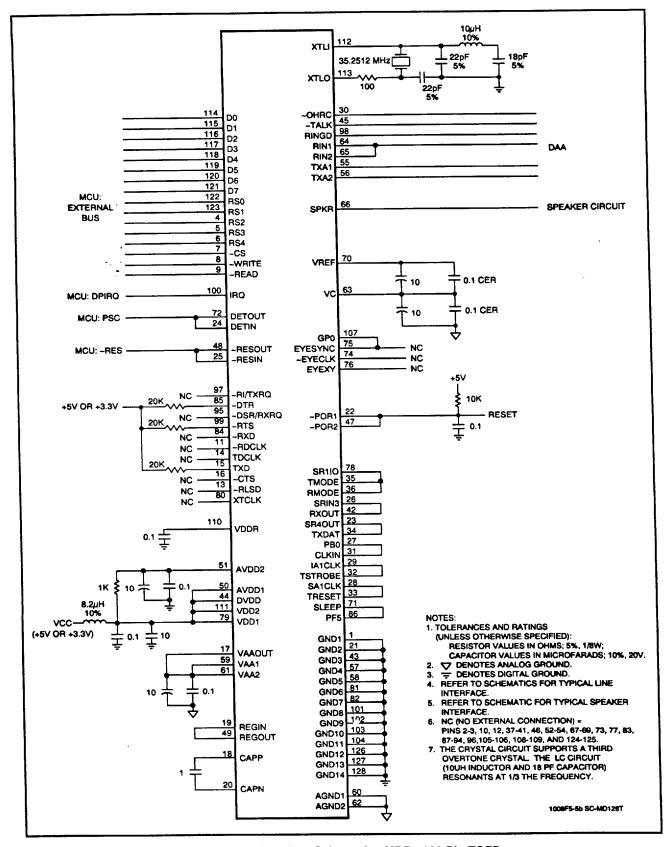


Figure 10b. Interface Schematic - MDP - 128-Pin TQFP

45

7811073 0024288 440 📟

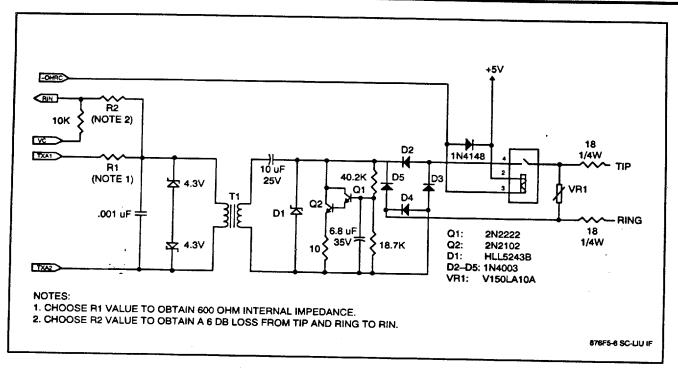


Figure 11. Typical Line Interface

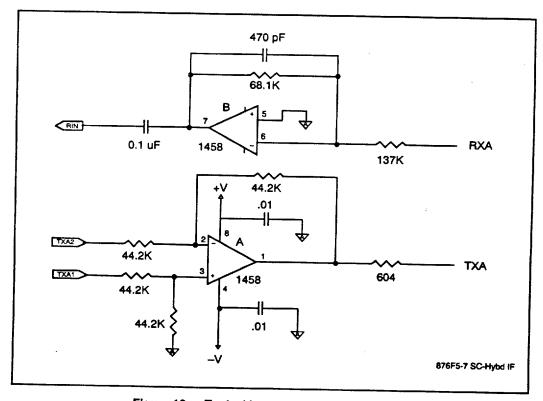


Figure 12. Typical Interface to External Hybrid

MD105

■ 7811073 0024289 387 ■

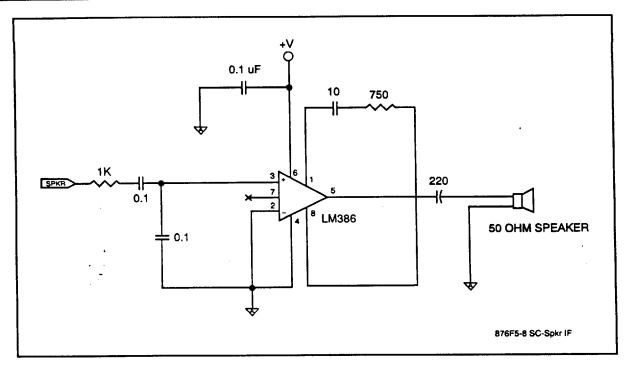


Figure 13. Typical External Speaker Circuit

47

PACKAGE DIMENSIONS

The package dimensions are shown in Figure 14.

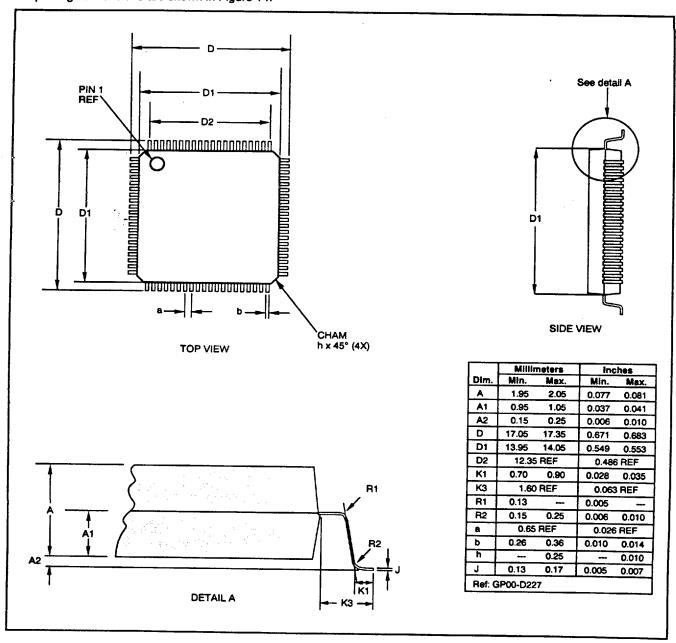


Figure 14a. Package Dimensions - 80-Pin PQFP

48

MD105

■ 7811073 0024291 T35 ■

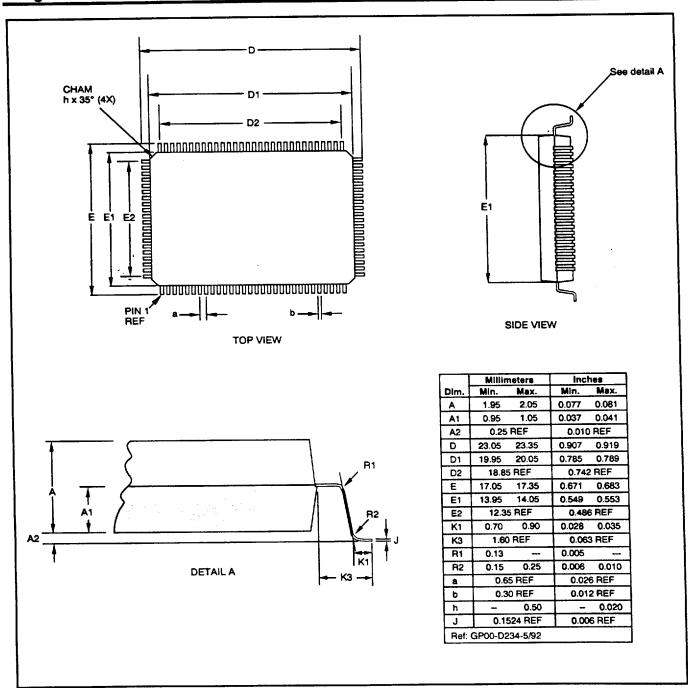


Figure 14b. Package Dimensions - 100-Pin PQFP

49

T811073 0024292 971 **=**

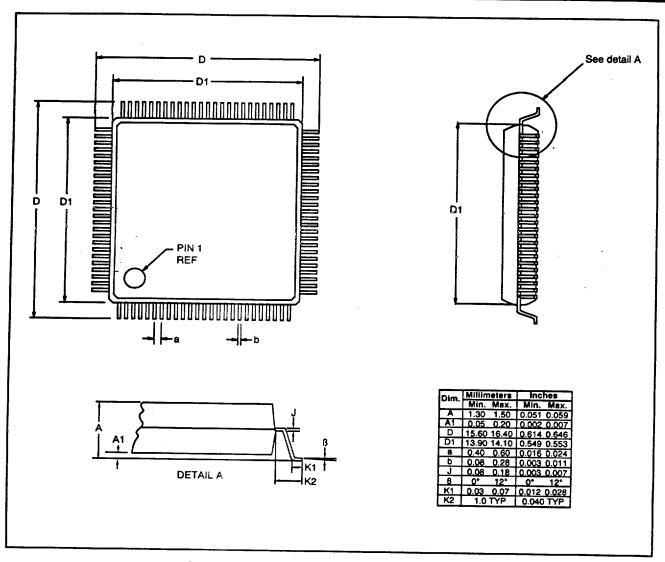


Figure 14c. Package Dimensions - 100-Pin TQFP

MD105

7811073 0024293 808

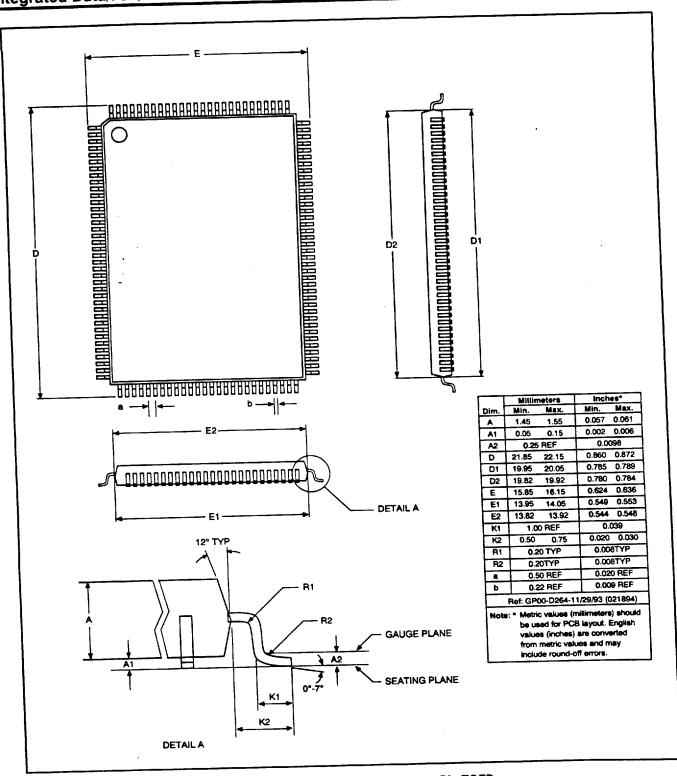


Figure 14d. Package Dimensions - 128-Pin TQFP

MD105

■ 7811073 0024294 744 **■**

Information provided by Rockwell International Corporation is believed to be accurate and reliable. However, no responsibility is assumed by Rockwell International for its use, nor any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent rights of Rockwell International other than for circuitry embodied in Rockwell products. Rockwell International reserves the right to change circuitry at any time without notice. This document is subject to change without notice.

DIGITAL COMMUNICATIONS DIVISION **REGIONAL SALES OFFICES**

Headquarters

Digital Communications Division Rockwell International 4311 Jamboree Road Newport Beach, CA 92660-3095

(Mailing Address) P.O. Box C

Newport Beach, CA 92658-8902 Tel: (714) 833-4600

Fax: (714) 833-4078 Fax: (714) 833-4391

USA - Southwest

Digital Communications Division Rockwell International 5000 Birch Street Suite 400

Newport Beach, CA 92660-3095 Tel: (714) 833-4655

Fax: (714) 833-6898

USA - Southeast

Digital Communications Division Rockwell International One Copley Parkway Suite 210 Morrisville, NC 27560 Tel: (919) 467-7703

Fax: (919) 467-6096

USA - North Central

Digital Communications Division Rockwell International 3158 South River Road Suite 204

©1994, Rockwell International Corporation

Des Plaines, IL 60018 Tel: (708) 297-8875 Fax: (708) 297-3230

All Rights Reserved

USA - South Central

Digital Communications Division Rockwell International 2001 N. Collins Blvd. Suite 103 Richardson, TX 75080 Tel: (214) 479-9310

USA - Northeast and Canada East

Fax: (214) 479-9317

Digital Communications Division Rockwell International 239 Littleton Road Suite 1B Westford, MA 01886 Tel: (508) 692-7660 Fax: (508) 692-8185 TLX (MCI) 6502512464

USA - Northwest and Canada West

Digital Communications Division Rockwell International 3600 Pruneridge Avenue Suite 100 Santa Clara, CA 95051 Tel: (408) 249-9696 Fax: (408) 249-6518

Japan

Rockwell International Japan Co. Ltd. Digital Communications Division Sogo Hanzomon Bldg., 8F 7, Kojimachi 1-chome, Chiyoda-ku Tokyo Japan 102

Tel: (81-3) 3-265-8808 Fax: (81-3) 3-263-0639 TLX: J22198 Australia

Digital Communications 3 Thomas Holt Drive P.O. Box 165 North Ryde, NSW 2113

Australia Tel: (61-2) 805-5555 Fax: (61-2) 805-5599 TLX: AA30450

Hong Kong

Digital Communications c/o Rockwell International (Asia Pacific) United Kingdom Ltd. 13th Floor, Suites 6-10

Harbour Centre 25 Harbour Road Wanchai Hong Kong Tel: (852) 827-0181

Fax: (852) 827-6488

Korea

Digital Communications c/o Rockwell-Collins International Inc. Rm. 608 Leema Bldg.

146-1 Soosong-Dong Chongro-Ku K.P.O. Box 527 Seoul Korea (Dept. 553)

Tel: (82-2) 736-9121 Fax: (82-2) 736-9124

Taiwan

c/o Rockwell International Taiwan Company Ltd.
Digital Communications Division Room 2808 International Trade Building 333 Keelung Road, Section 1 Taipei Taiwan 10548, R.O.C.

Tel: (886-2) 720-0282 Fax: (886-2) 757-6760 TLX: 26049 ENTTPE

Germany Digital Communications Division c/o Rockwell Systems Australia Pty. Ltd. Rockwell Telecommunications GmbH Paul-Gerhardt-Allee 50 a

81245 München Germany Tel: (49-89) 829-1320 Fax: (49-89) 834-2734 TLX: 521-2650 rimd d

Digital Communications c/o Rockwell International Ltd. Central House

3, Lampton Road Hounslow, Middlesex TW3 1HY

Tel: (44-81) 577-2800 Fax: (44-81) 570-0758

France **Digital Communications** c/o Rockwell International S.A. Tour GAN, 16 Place de l'Iris Cedex 13 92082 Paris La Defense 2 France

Tel: (33-1) 49-06-39-80 Fax: (33-1) 49-06-39-90

Italy

Digital Communications Division Rockwell International c/o Allen Bradley Italia S.r.I. Viale De Gasperi, 126 20017 Mazzo di Rho (MI) Italy

Tel: (39-2) 93972-360 Fax: (39-2) 93972-366

Printed in U.S.A.